
# DISC PLAYER CHANGER SCREEN IS NOT DISPLAYED (BOTH SOUND AND SCREEN ARE NOT SWITCHED)

## WIRING DIAGRAM

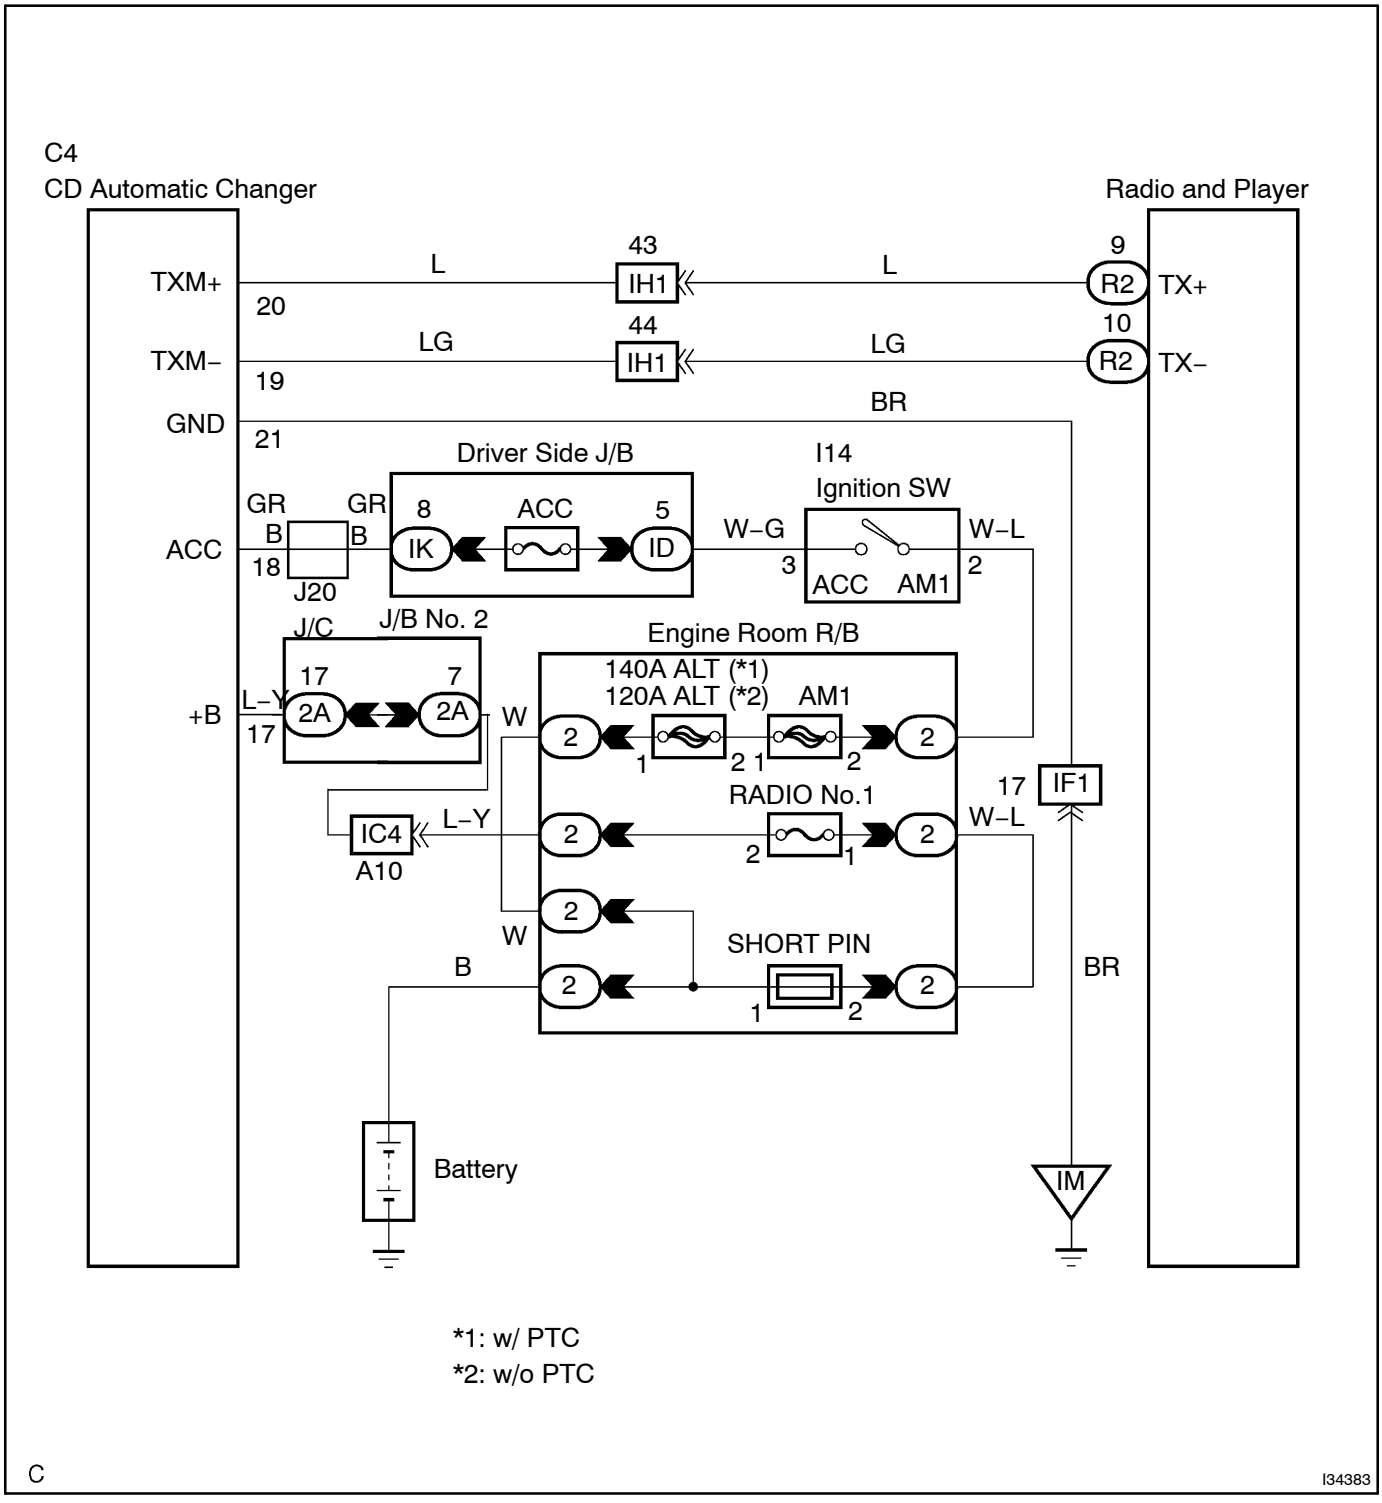

# INSPECTION PROCEDURE

## 1 SERVICE CHECK MODE(DISC PLAYER CHANGER)

(a) Perform service check.
  (1) Start the diagnosis system and read check result for disc player changer.

**Result:**


| A | B |
|---|---|
| "NCON" is displayed or nothing displayed (P240) | "GOOD" is displayed |

**B** → **Go to step 3**

**A**

## 2 INSPECT DISC PLAYER CHANGER(+B, ACC, GND)

**Disc Player Changer:**

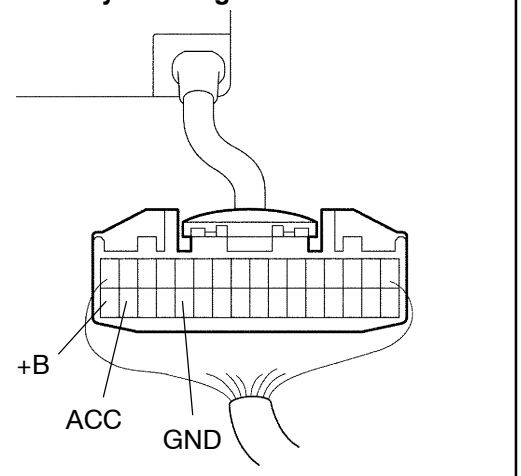


(a) Check that the continuity between terminals at each condition, as shown in the chart.

**Standard:**

| Tester connection | Condition | Specified condition |
|---|---|---|
| GND – Body ground | Constant | Continuity |

(b) Check that the voltage between terminals at each condition, as shown in the chart.

**Standard:**

| Tester connection | Condition | Specified condition |
|---|---|---|
| +B – GND | Constant | 10 – 14 V |
| ACC – GND | Ignition switch ACC or ON | 10 – 14 V |

**NG** → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

**OK**

## 3 CHECK AND REPLACE DISC PLAYER CHANGER

**OK** → **REPLACE DISC PLAYER CHANGER**

**NG**

**CHECK AND REPLACE RADIO RECEIVER ASSY**