

MAP DISC CANNOT BE INSERTED

WIRING DIAGRAM

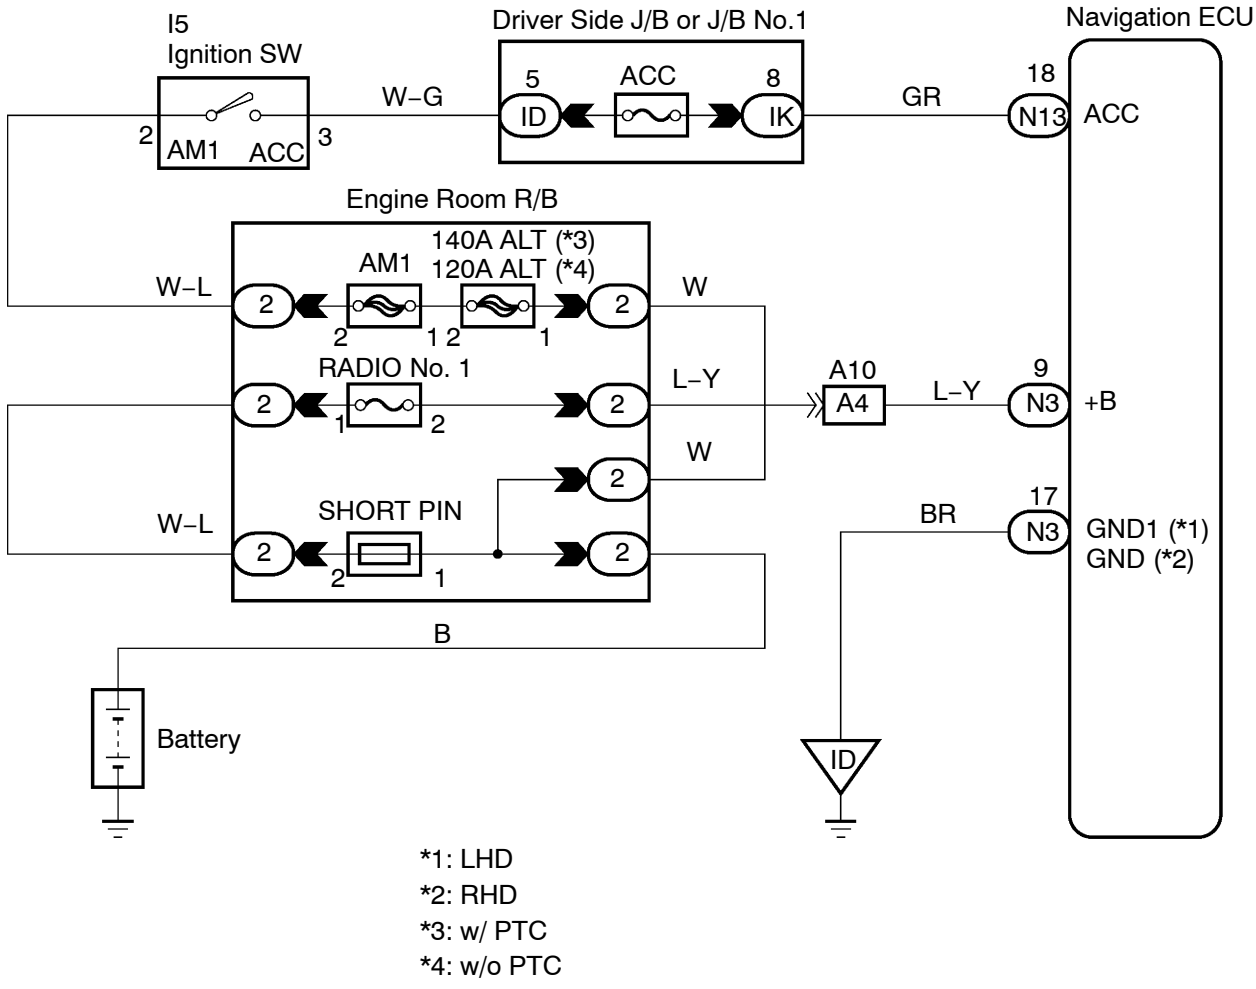

INSPECTION PROCEDURE

1	INSPECT NAVIGATION ECU(+B, ACC, GND1)

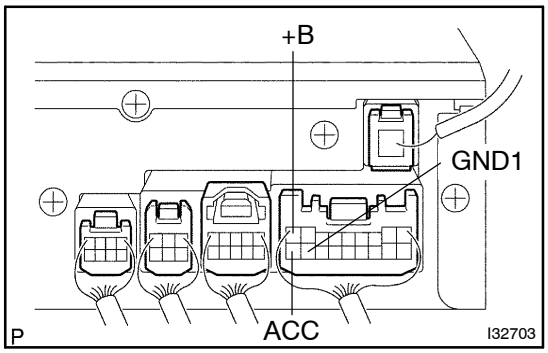

(a) Remove the navigation ECU with connectors with being connected.

(b) Check voltage.

(1) Measure voltage between terminal +B, ACC and GND1 of navigation ECU at each condition, as shown in the chart.

Standard:

Terminal	Condition	Voltage (V)
+B ⇔ GND1	Always	10 – 14
ACC ⇔ GND1	Turn ignition switch ACC	10 – 14

(c) Check continuity.

(1) Check that the continuity exists between terminal GND1 of navigation ECU and body ground.

Standard: Continuity exists.

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE NAVIGATION ECU