
DRIVING DIRECTIONS OPPOSITE TO MOVING DIRECTION OF VEHICLE POSITION MARK

WIRING DIAGRAM

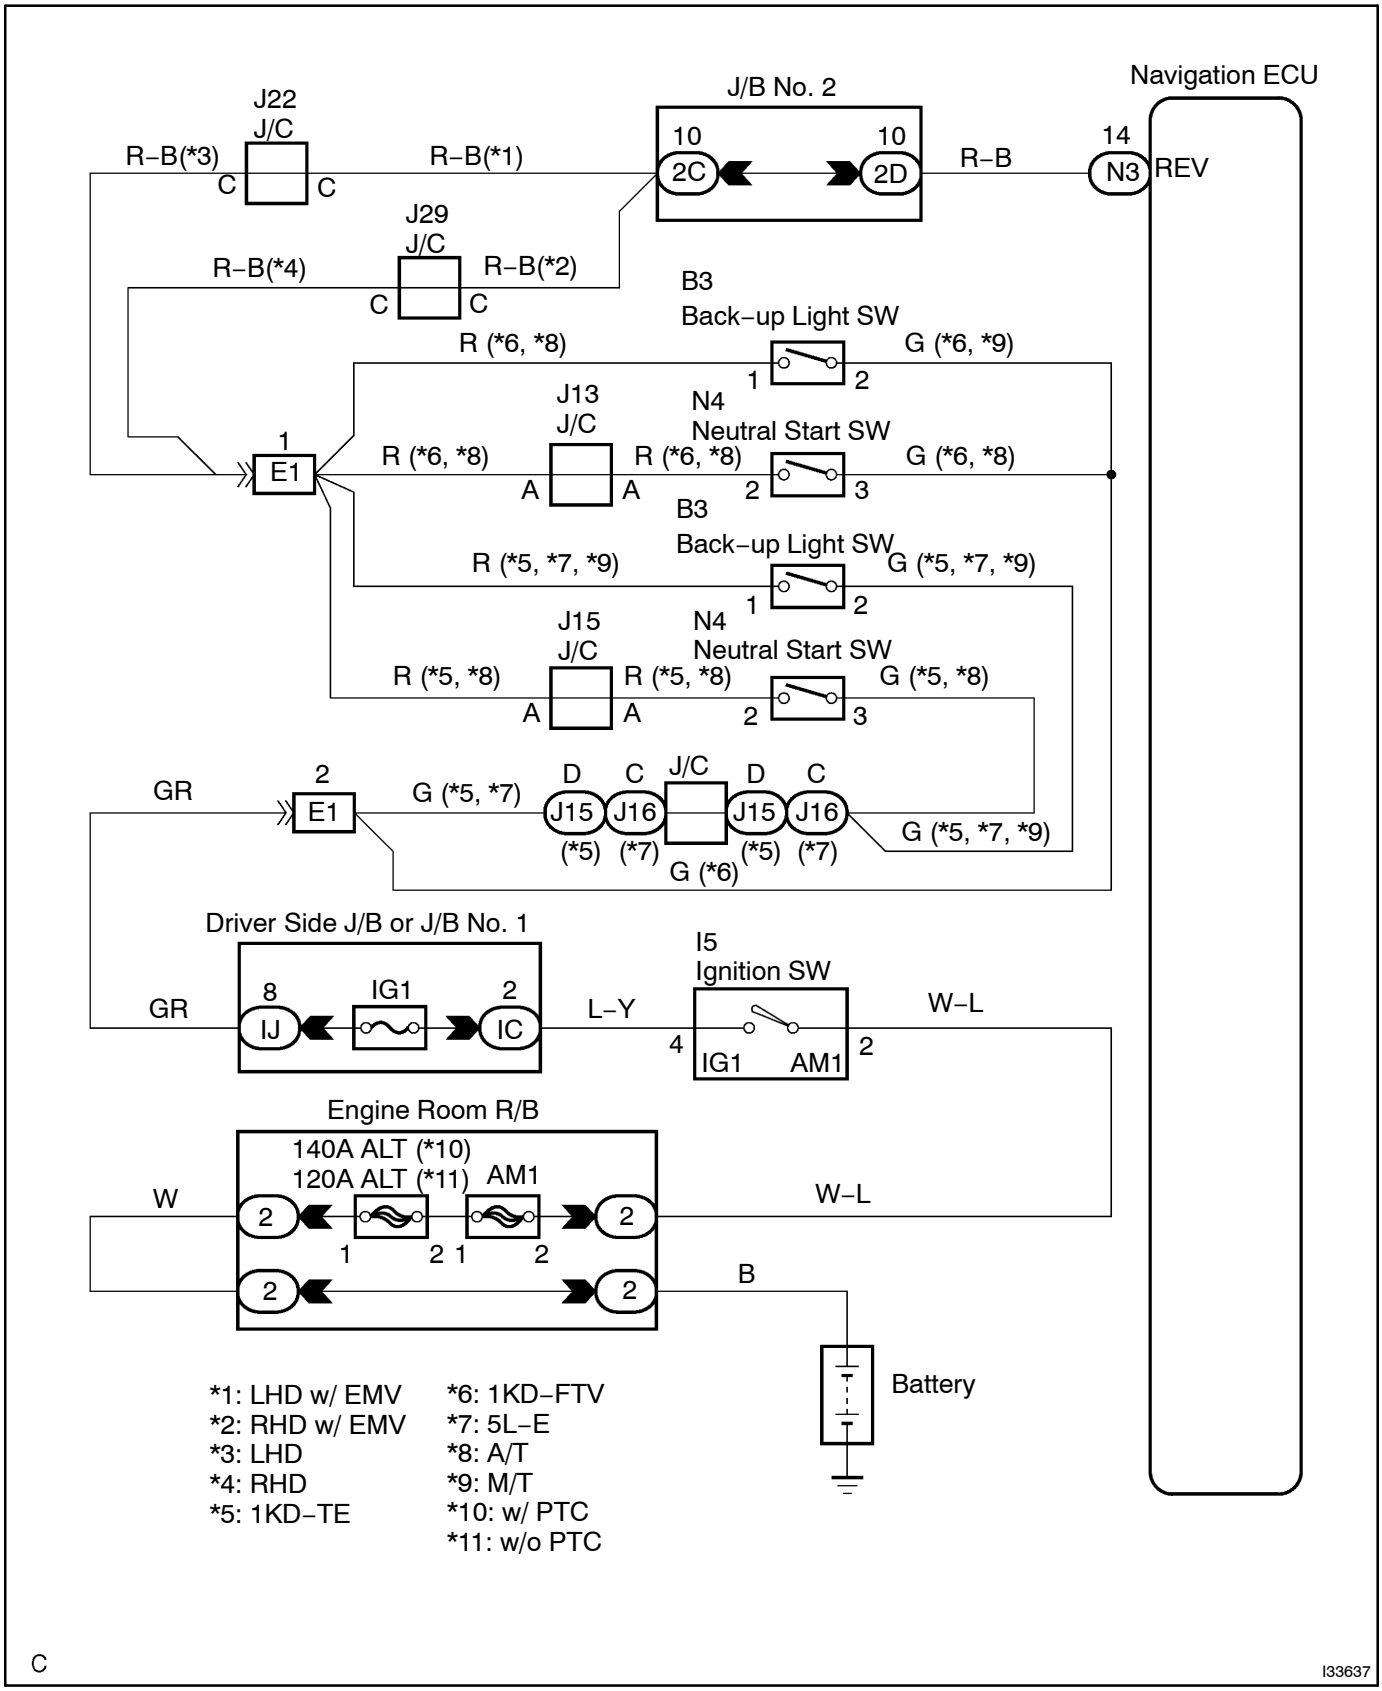

INSPECTION PROCEDURE


1	NAVIGATION CHECK MODE(VEHICLE SENSORS)

(a) Perform vehicle signal check of navigation check mode.
  (1) Start up the diagnosis system and read result of REV signal in vehicle sensors mode.
  STANDARD: Input signal is normal (REV)

OK > **CHECK AND REPLACE NAVIGATION ECU**

NG

2	INSPECT NAVIGATION ECU(REV, GND1)

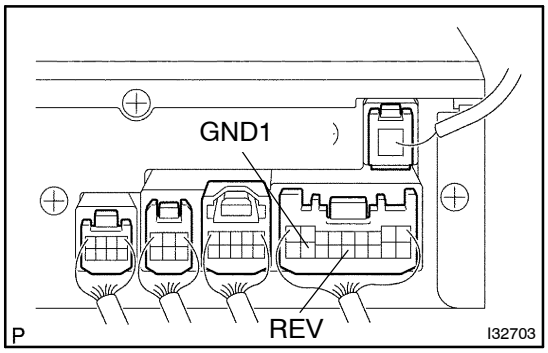

(a) Remove the navigation ECU with connectors being connected.
(b) Check voltage.
  (1) Measure voltage between terminal REV and GND1 of navigation ECU.

Voltage:

Terminal	Condition	Voltage (V)
REV ⇔ GND1	Turn ignition switch ON and put gear shift in R range	10 – 14

OK > **CHECK AND REPLACE NAVIGATION ECU**

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR