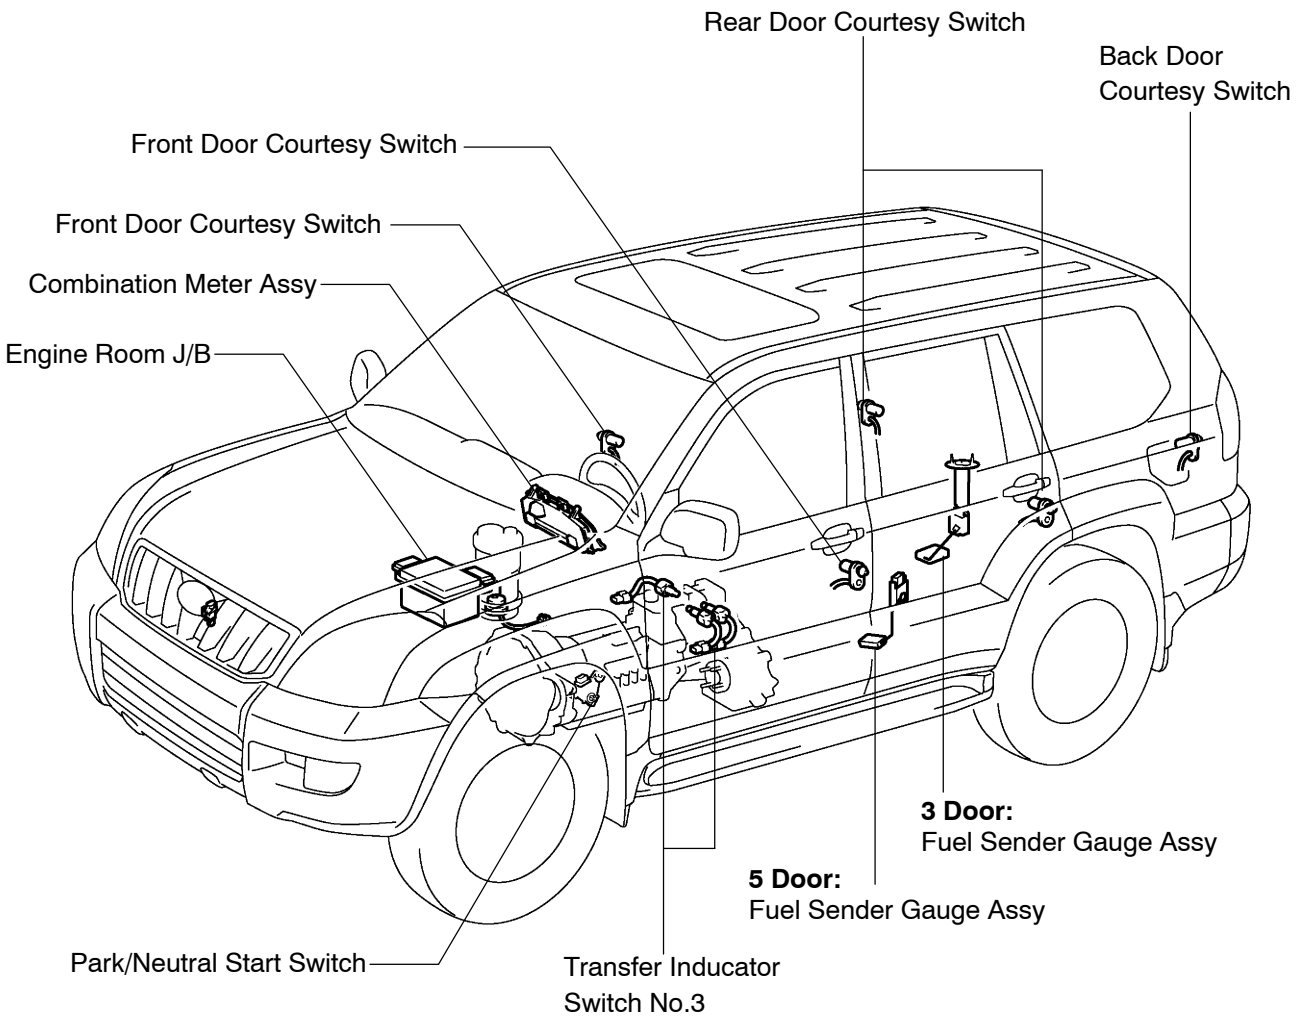
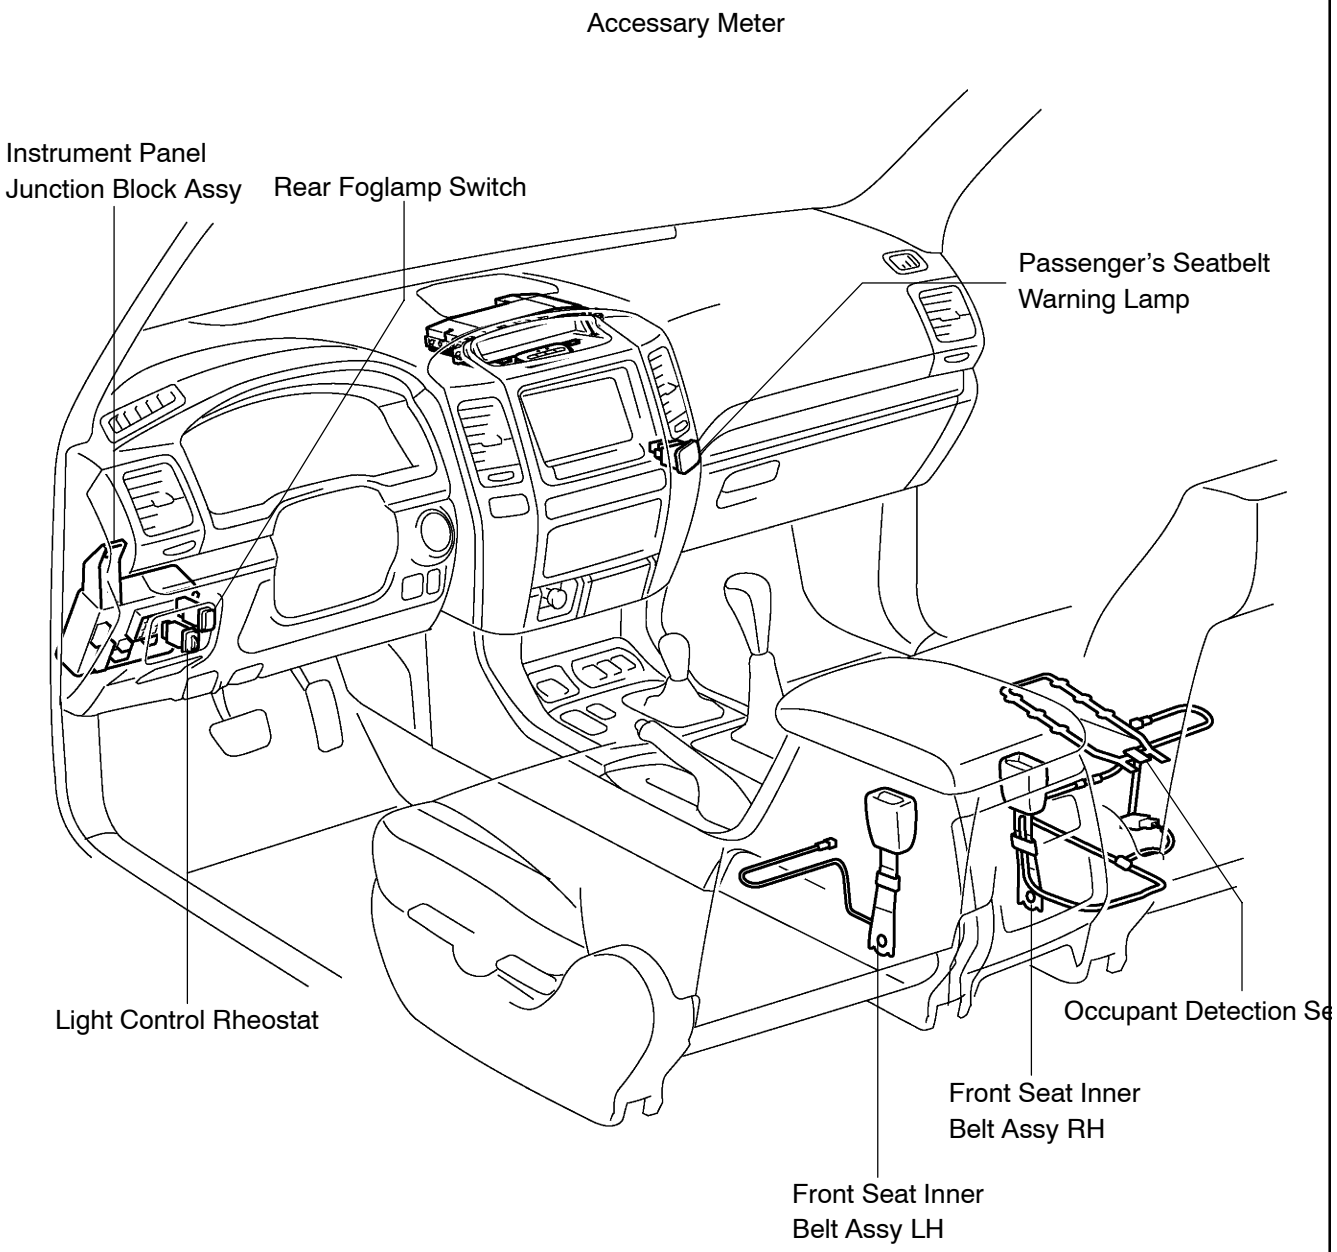
056QA–02

LOCATION



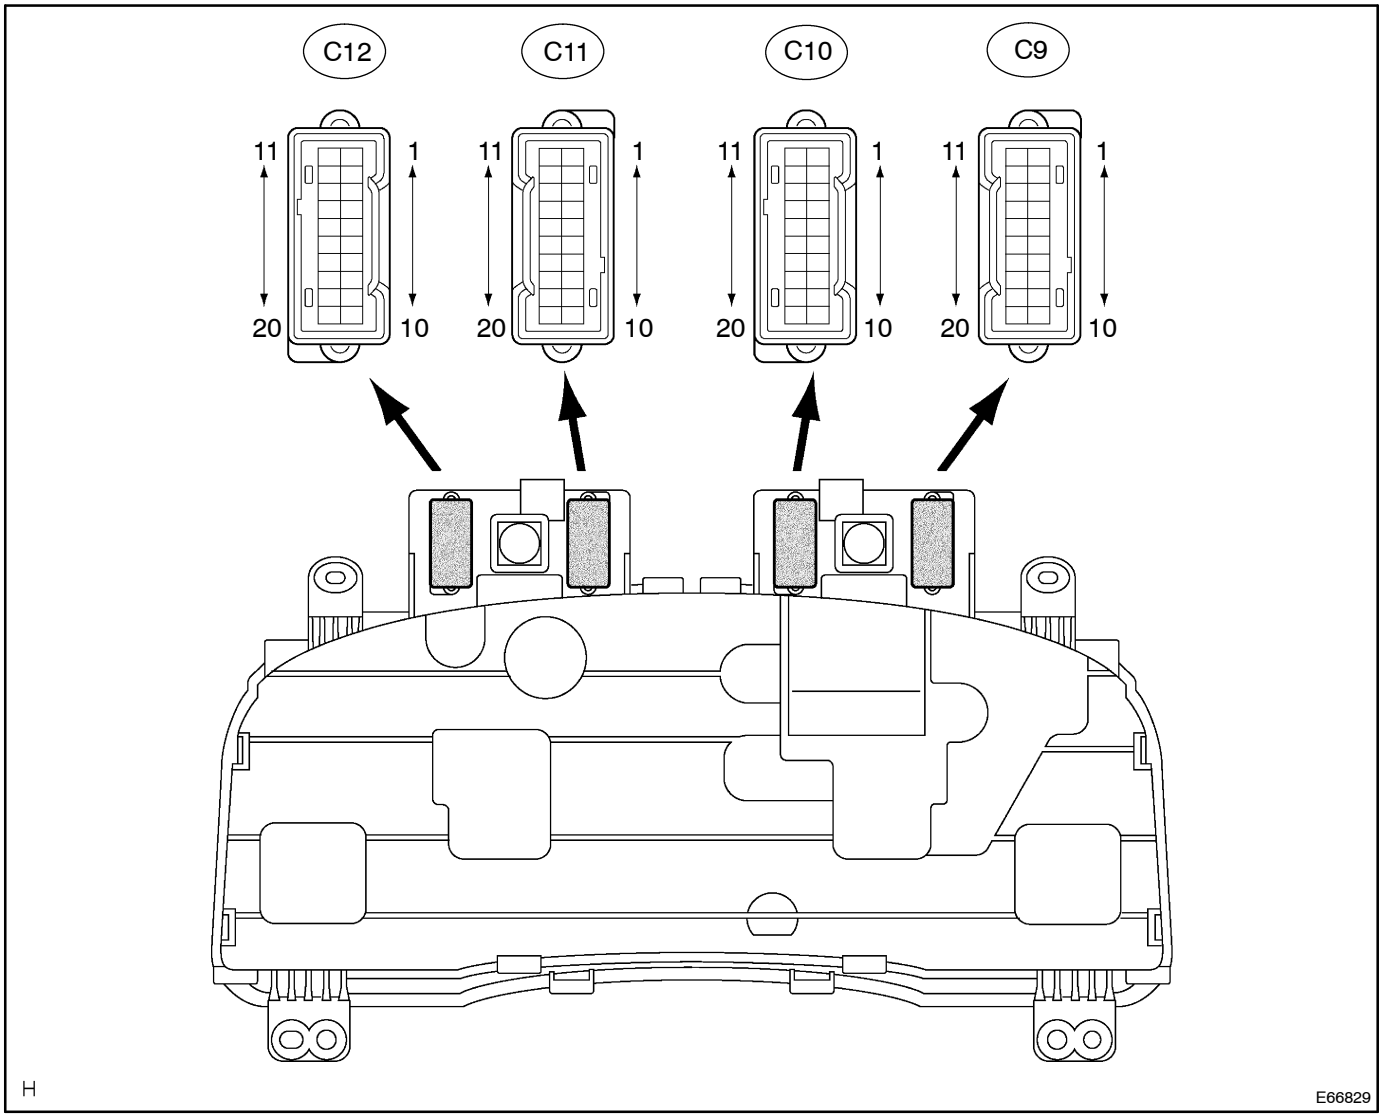
H

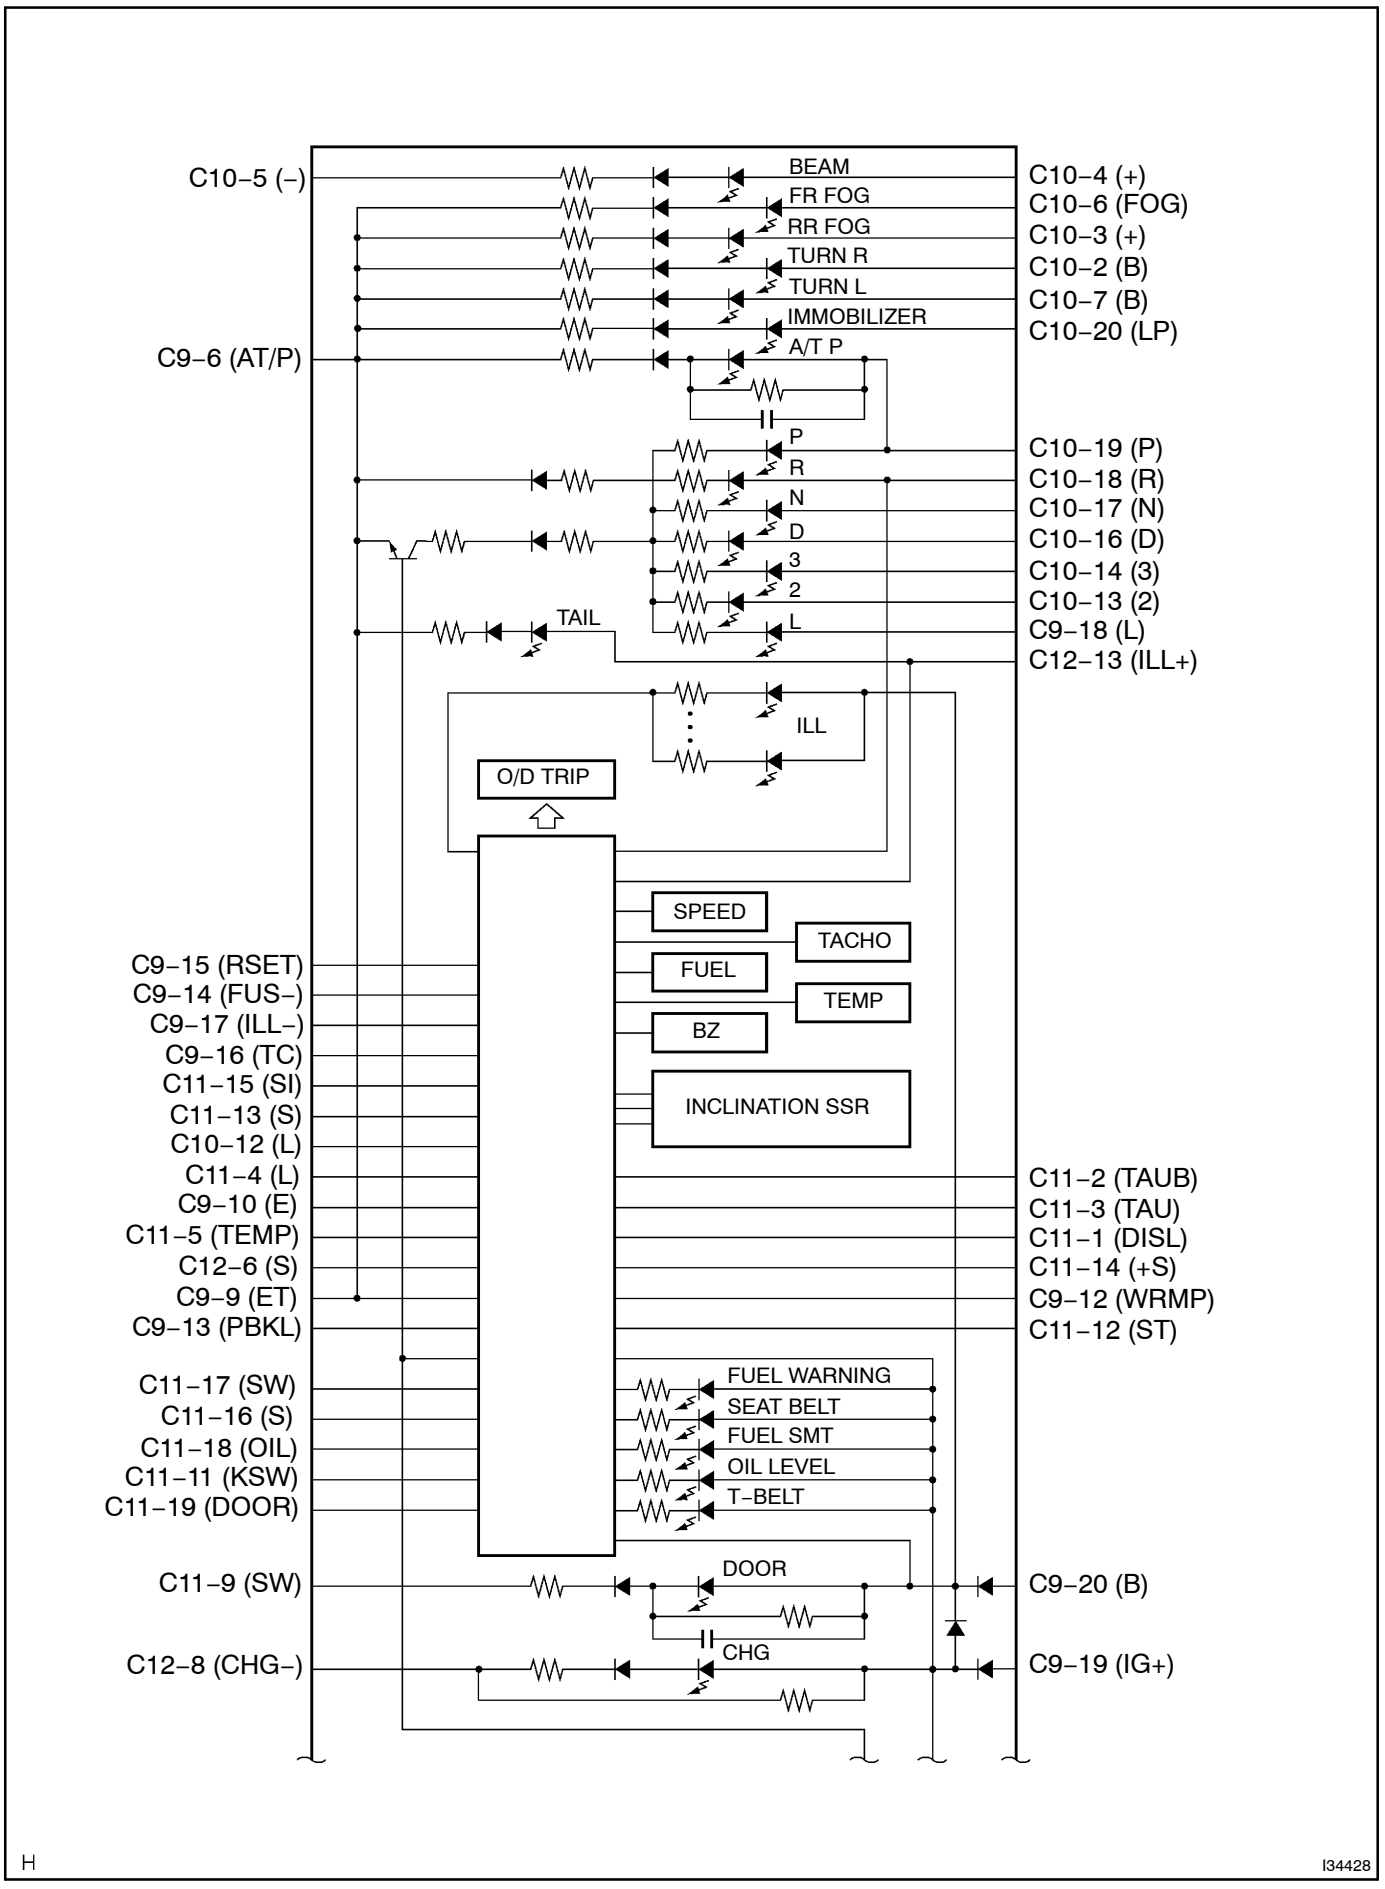
I33800

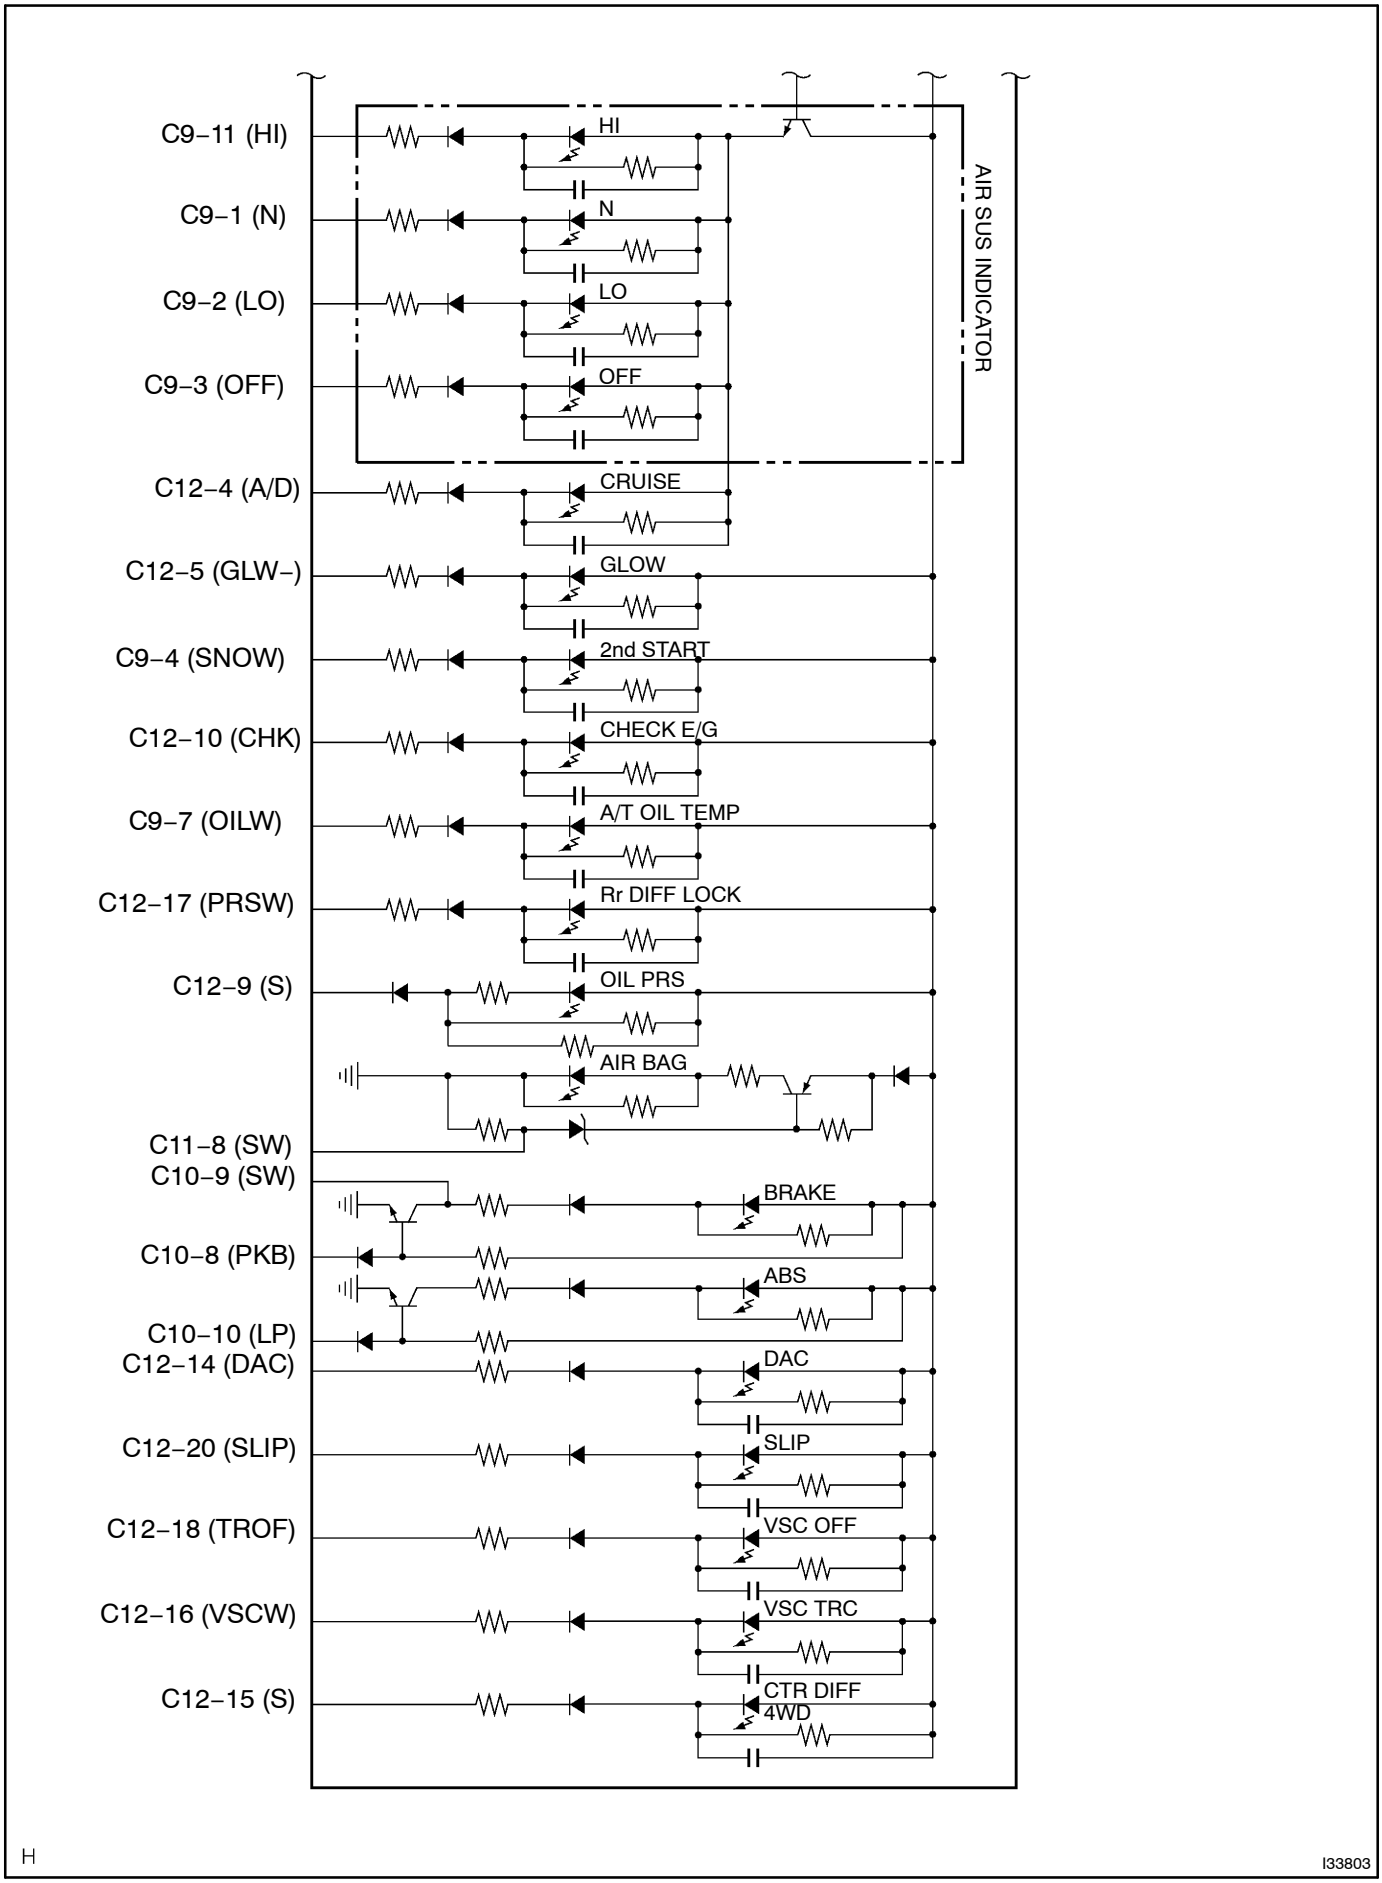

Accessary Meter
Instrument Panel
Junction Block Assy
Rear Foglamp Switch
Passenger's Seatbelt
Warning Lamp
Light Control Rheostat
Occupant Detection Se
Front Seat Inner
Belt Assy RH
Front Seat Inner
Belt Assy LH

H

I33801


C12
C11
C10
C9
11
1
20
10
H
E66829


C10–5 (–)
C9–6 (AT/P)
BEAM
FR FOG
RR FOG
TURN R
TURN L
IMMOBILIZER
A/T P
P
R
N
D
3
2
L
TAIL
ILL
O/D TRIP
SPEED
TACHO
FUEL
TEMP
BZ
INCLINATION SSR
FUEL WARNING
SEAT BELT
FUEL SMT
OIL LEVEL
T–BELT
DOOR
CHG
C10–4 (+)
C10–6 (FOG)
C10–3 (+)
C10–2 (B)
C10–7 (B)
C10–20 (LP)
C10–19 (P)
C10–18 (R)
C10–17 (N)
C10–16 (D)
C10–14 (3)
C10–13 (2)
C9–18 (L)
C12–13 (ILL+)
C9–15 (RSET)
C9–14 (FUS–)
C9–17 (ILL–)
C9–16 (TC)
C11–15 (SI)
C11–13 (S)
C10–12 (L)
C11–4 (L)
C9–10 (E)
C11–5 (TEMP)
C12–6 (S)
C9–9 (ET)
C9–13 (PBKL)
C11–17 (SW)
C11–16 (S)
C11–18 (OIL)
C11–11 (KSW)
C11–19 (DOOR)
C11–9 (SW)
C12–8 (CHG–)
C11–2 (TAUB)
C11–3 (TAU)
C11–1 (DISL)
C11–14 (+S)
C9–12 (WRMP)
C11–12 (ST)
C9–20 (B)
C9–19 (IG+)
H
I34428


C9–11 (HI)
HI
C9–1 (N)
N
C9–2 (LO)
LO
C9–3 (OFF)
OFF
AIR SUS INDICATOR
C12–4 (A/D)
CRUISE
C12–5 (GLW–)
GLOW
C9–4 (SNOW)
2nd START
C12–10 (CHK)
CHECK E/G
C9–7 (OILW)
A/T OIL TEMP
C12–17 (PRSW)
Rr DIFF LOCK
C12–9 (S)
OIL PRS
AIR BAG
C11–8 (SW)
C10–9 (SW)
BRAKE
C10–8 (PKB)
ABS
C10–10 (LP)
C12–14 (DAC)
DAC
C12–20 (SLIP)
SLIP
C12–18 (TROF)
VSC OFF
C12–16 (VSCW)
VSC TRC
C12–15 (S)
CTR DIFF
4WD
H
I33803

Terminal No.		Wire harness side
C9	1	Air Suspension ECU
	2	Air Suspension ECU
	3	Air Suspension ECU
	4	Engine ECU
	5	–
	6	Engine ECU
	7	Engine ECU
	8	–
	9	Ground (E/G)
	10	Ground (Fuel Ground)
	11	Air Suspension ECU
	12	Passenger Side Seat Belt Warning Light
	13	Buckle Switch LH
	14	ACC Meter
	15	ACC Meter
	16	Light Control Rheostat
	17	Light Control Rheostat
	18	Neutral Start Switch (L)
	19	GAUGE Fuse
	20	DOME Fuse
C10	1	–
	2	Flasher Relay
	3	Rr Fog Light Switch
	4	HEAD (HI RH) Fuse
	5	Combination Switch
	6	Fr Fog Light Switch
	7	Flasher Relay
	8	ABS, TRC, VSC ECU
	9	Brake Switch
	10	ABS, TRC, VSC ECU
	11	–
	12	Ground
	13	Neutral Start Switch (2)
	14	Neutral Start Switch (3)
	15	–
	16	Neutral Start Switch (D)
	17	Neutral Start Switch (N)
	18	Neutral Start Switch (R)
	19	Neutral Start Switch (P)
	20	Theft Deterrent ECU

Terminal No.		Wire harness side
C11	1	Engine ECU
	2	Engine ECU
	3	Engine ECU
	4	Fuel Sender Gauge
	5	Engine ECU
	6	Water Temp Sender Gauge
	7	–
	8	Airbag ECU
	9	Body ECU
	10	–
	11	Body ECU
	12	Neutral ST SW (*3) Clutch ST SW (*4)
	13	Engine ECU
	14	Speed Signal Output
	15	Speed Sensor
	16	Fuel Sediment Switch
	17	Buckle Switch RH
	18	Oil Level Switch
	19	Body ECU
	20	–
C12	1	–
	2	–
	3	–
	4	Engine ECU
	5	Engine ECU
	6	–
	7	–
	8	Alternator L Terminal
	9	Oil Pressure Switch
	10	Engine ECU
	11	–
	12	–
	13	PANEL Fuse (*1) Body ECU (*2)
	14	ABS, TRC, VSC ECU
	15	4WD Control ECU
	16	ABS, TRC, VSC ECU
	17	Rear Diff Lock ECU
	18	ABS, TRC, VSC ECU
	19	–
	20	ABS, TRC, VSC ECU

*1: w/o Daytime Running Light
*2: 3RZ–FE
*3: A/T
*4: M/T