

SEAT BELT WARNING LAMP FOR DRIVER'S SEAT DOES NOT OPERATE

WIRING DIAGRAM

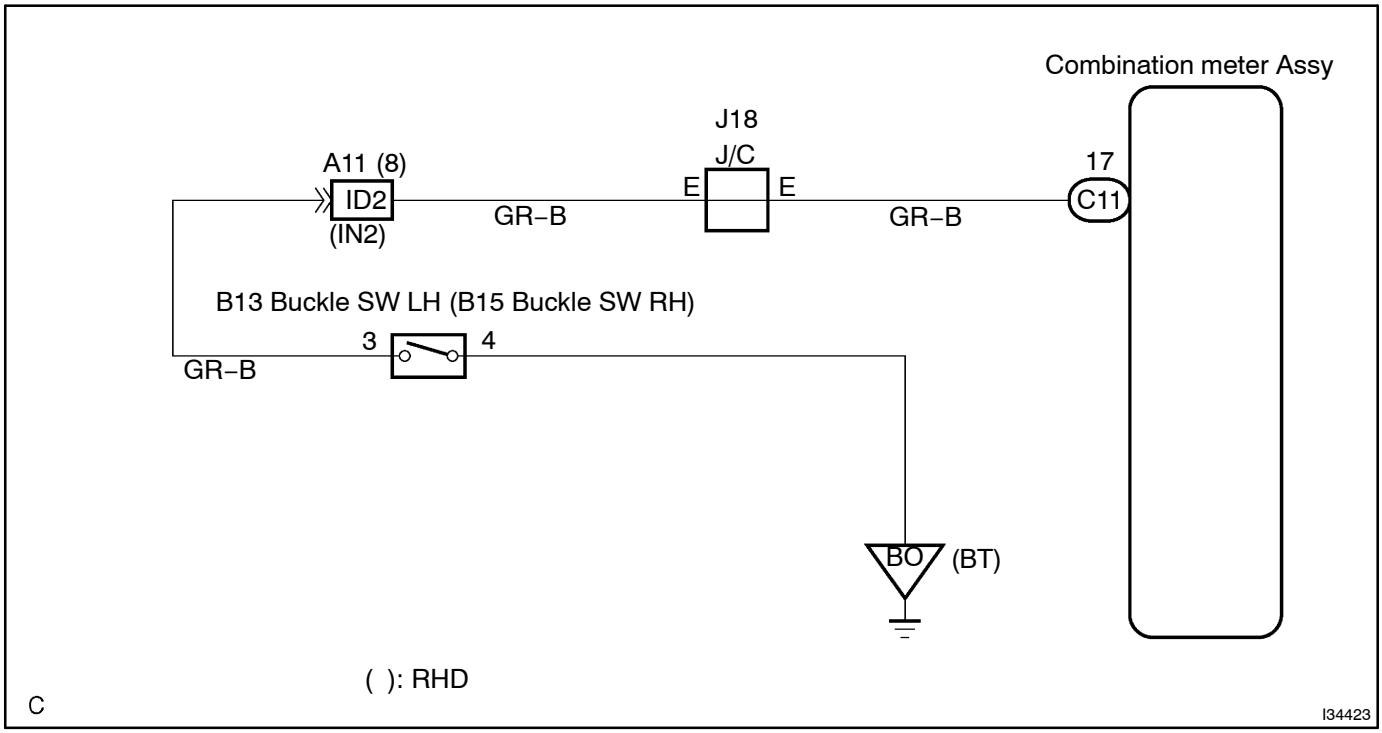

INSPECTION PROCEDURE

1	CHECK COMBINATION METER ASSY

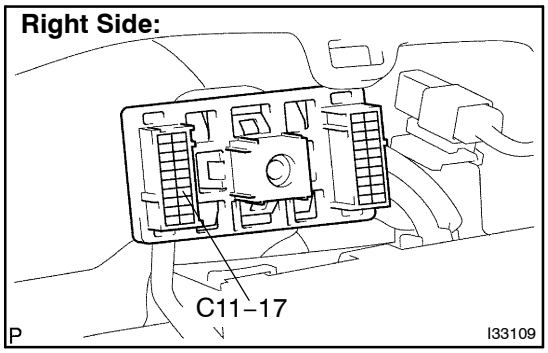

(a) Remove the combination meter assy.
(b) Check the continuity between the terminal C11–17 of combination meter connector and body ground.


Standard:

Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity

OK → **CHECK AND REPLACE COMBINATION METER ASSY**

NG

2	INSPECT FRONT SEAT INNER BELT SSY

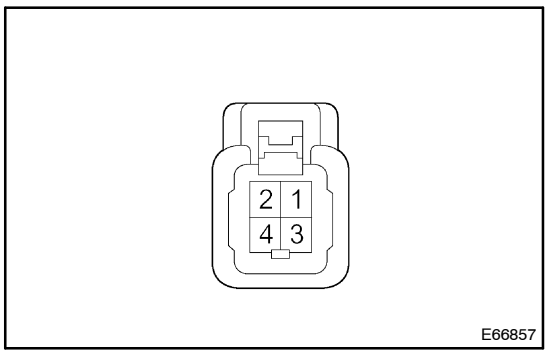

(a) Check resistance.
(1) Check resistance between terminals 3 and 4 of front seat inner belt assy.

Standard:

Condition	Resistance (Ω)
Seat belt is fastened	330
Seat belt is unfastened	1,330

NG → **REPLACE FRONT SEAT INNER BELT ASSY**

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR