

SEAT BELT WARNING LAMP FOR FRONT PASSENGER'S SEAT DOES NOT FLASH

WIRING DIAGRAM

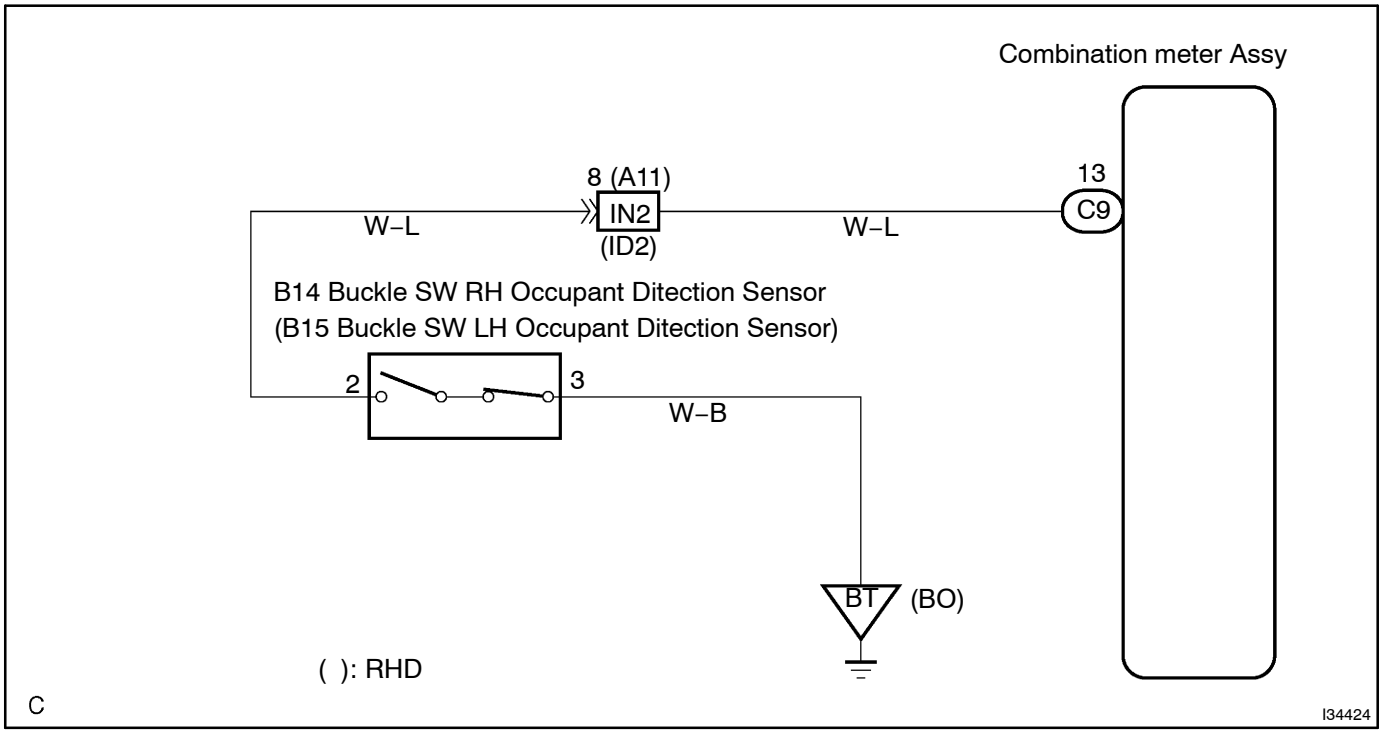

INSPECTION PROCEDURE

1	CHECK COMBINATION METER ASSY

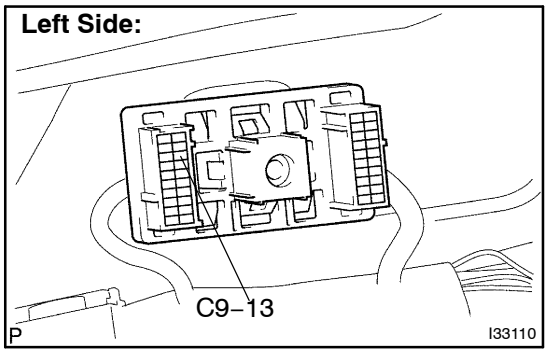

(a) Remove the combination meter assy.
(b) Check the continuity between the terminal C9–13 of combination meter assy connector and body ground.


Standard:

Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity

OK → **CHECK AND REPLACE COMBINATION METER ASSY**

NG

2	INSPECT FRONT SEAT INNER BELT ASSY

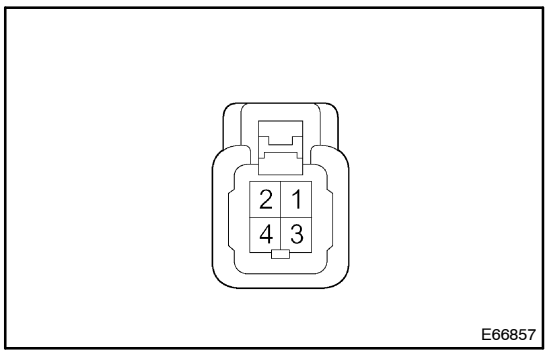

(a) Check resistance.
(1) Check resistance between terminals 2 and 3 of front seat inner belt assy.

Standard:

Condition	Resistance (Ω)
Seat belt is fastened	330
Seat belt is unfastened	1,330

NG → **REPLACE FRONT SEAT INNER BELT ASSY**

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR