


05ABG–01

LOCATION

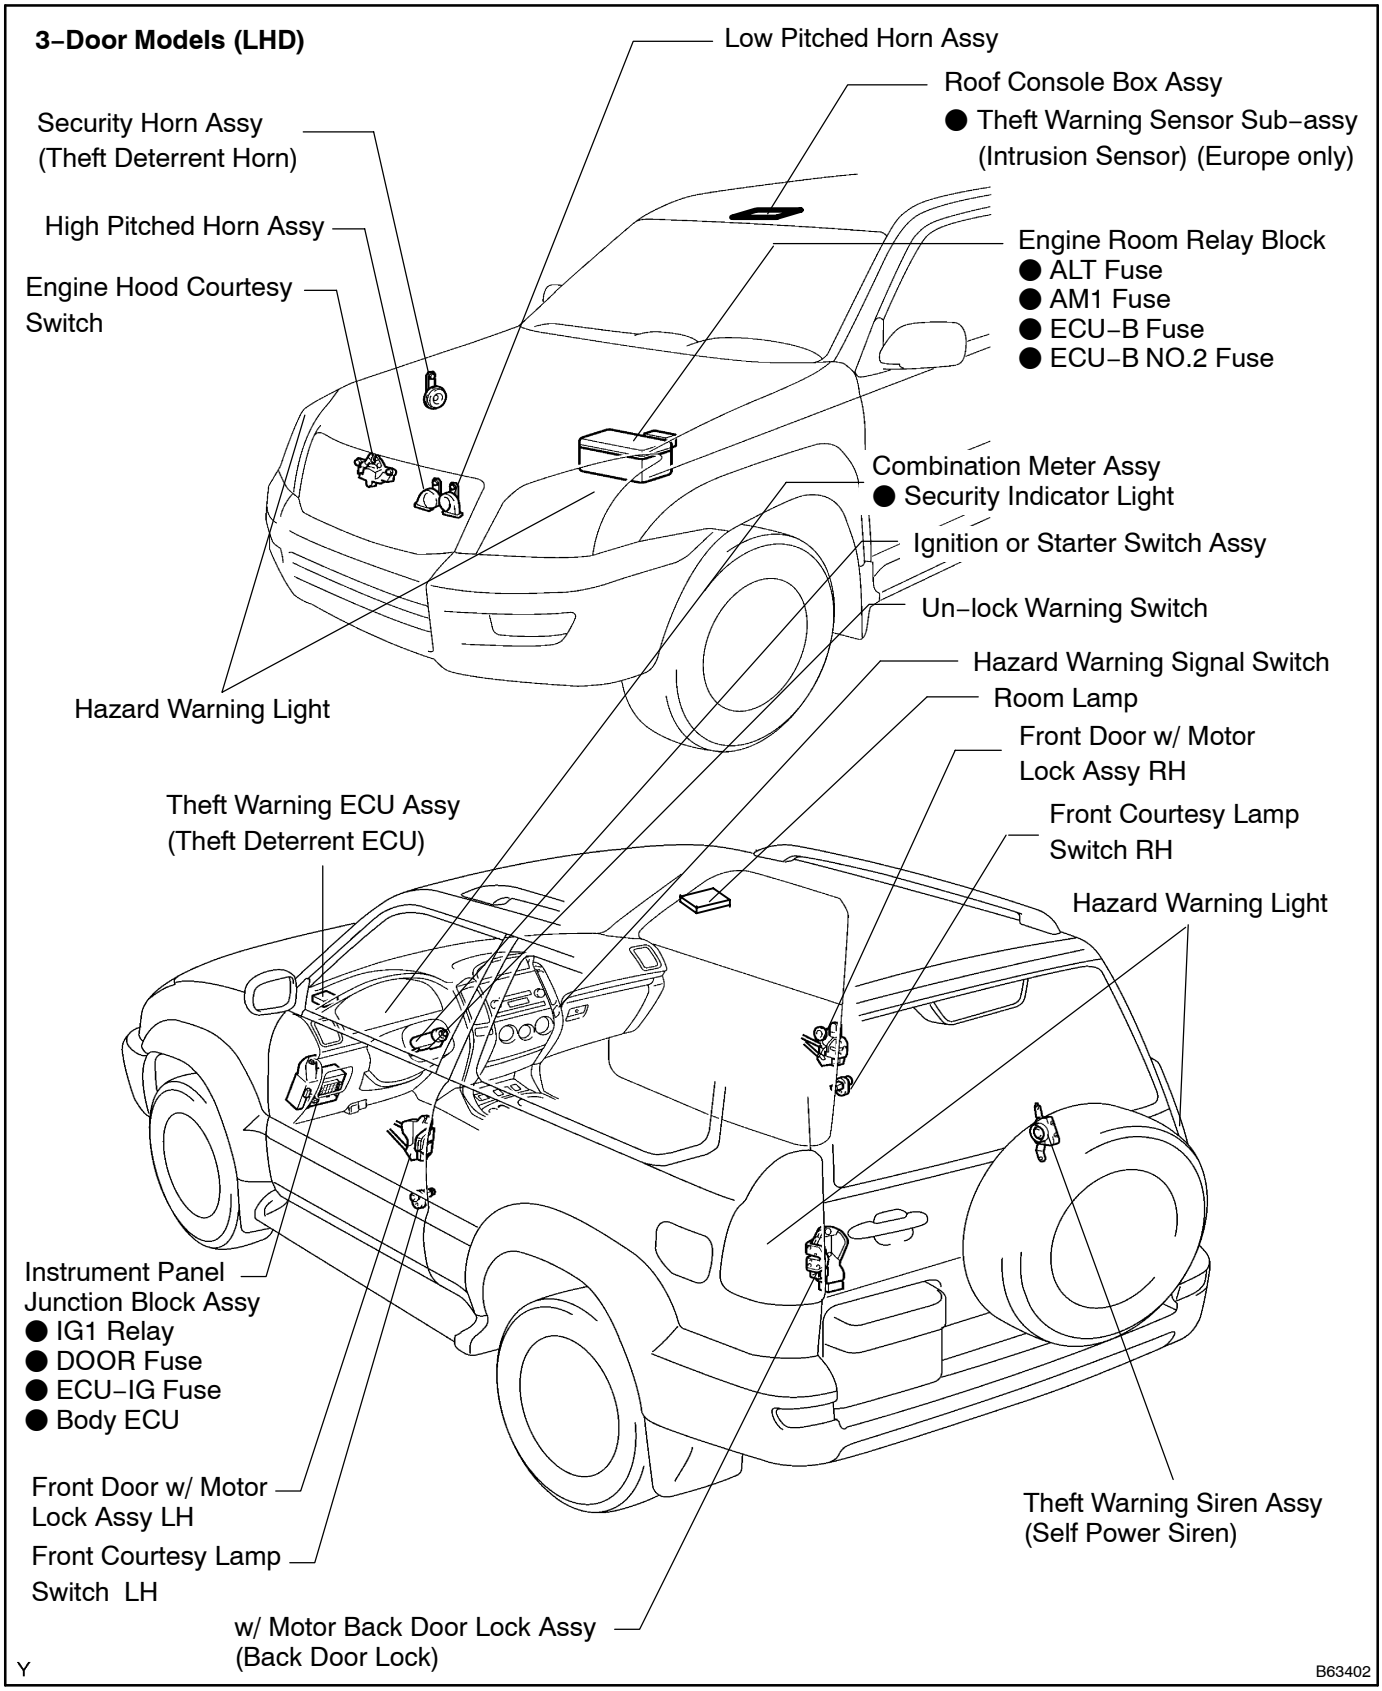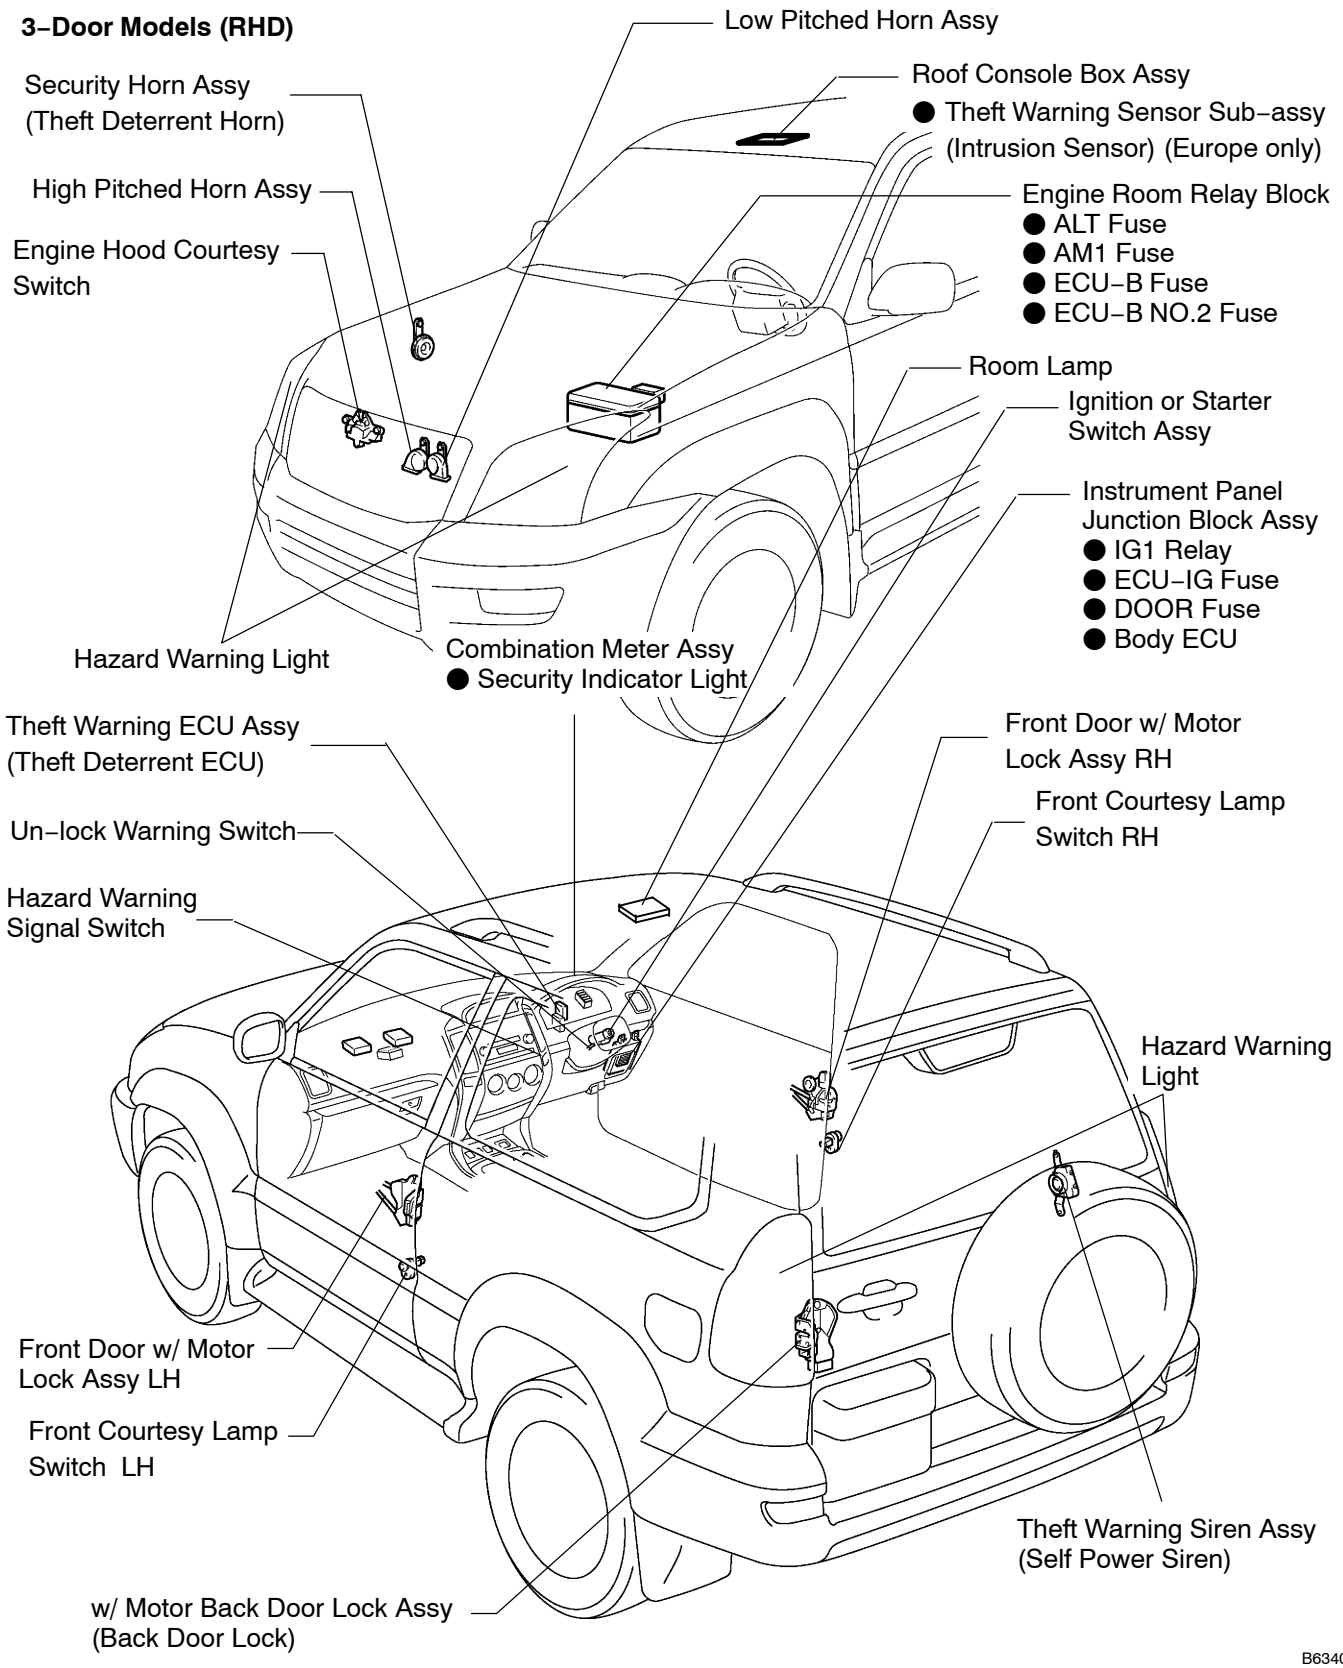

3–Door Models (RHD)

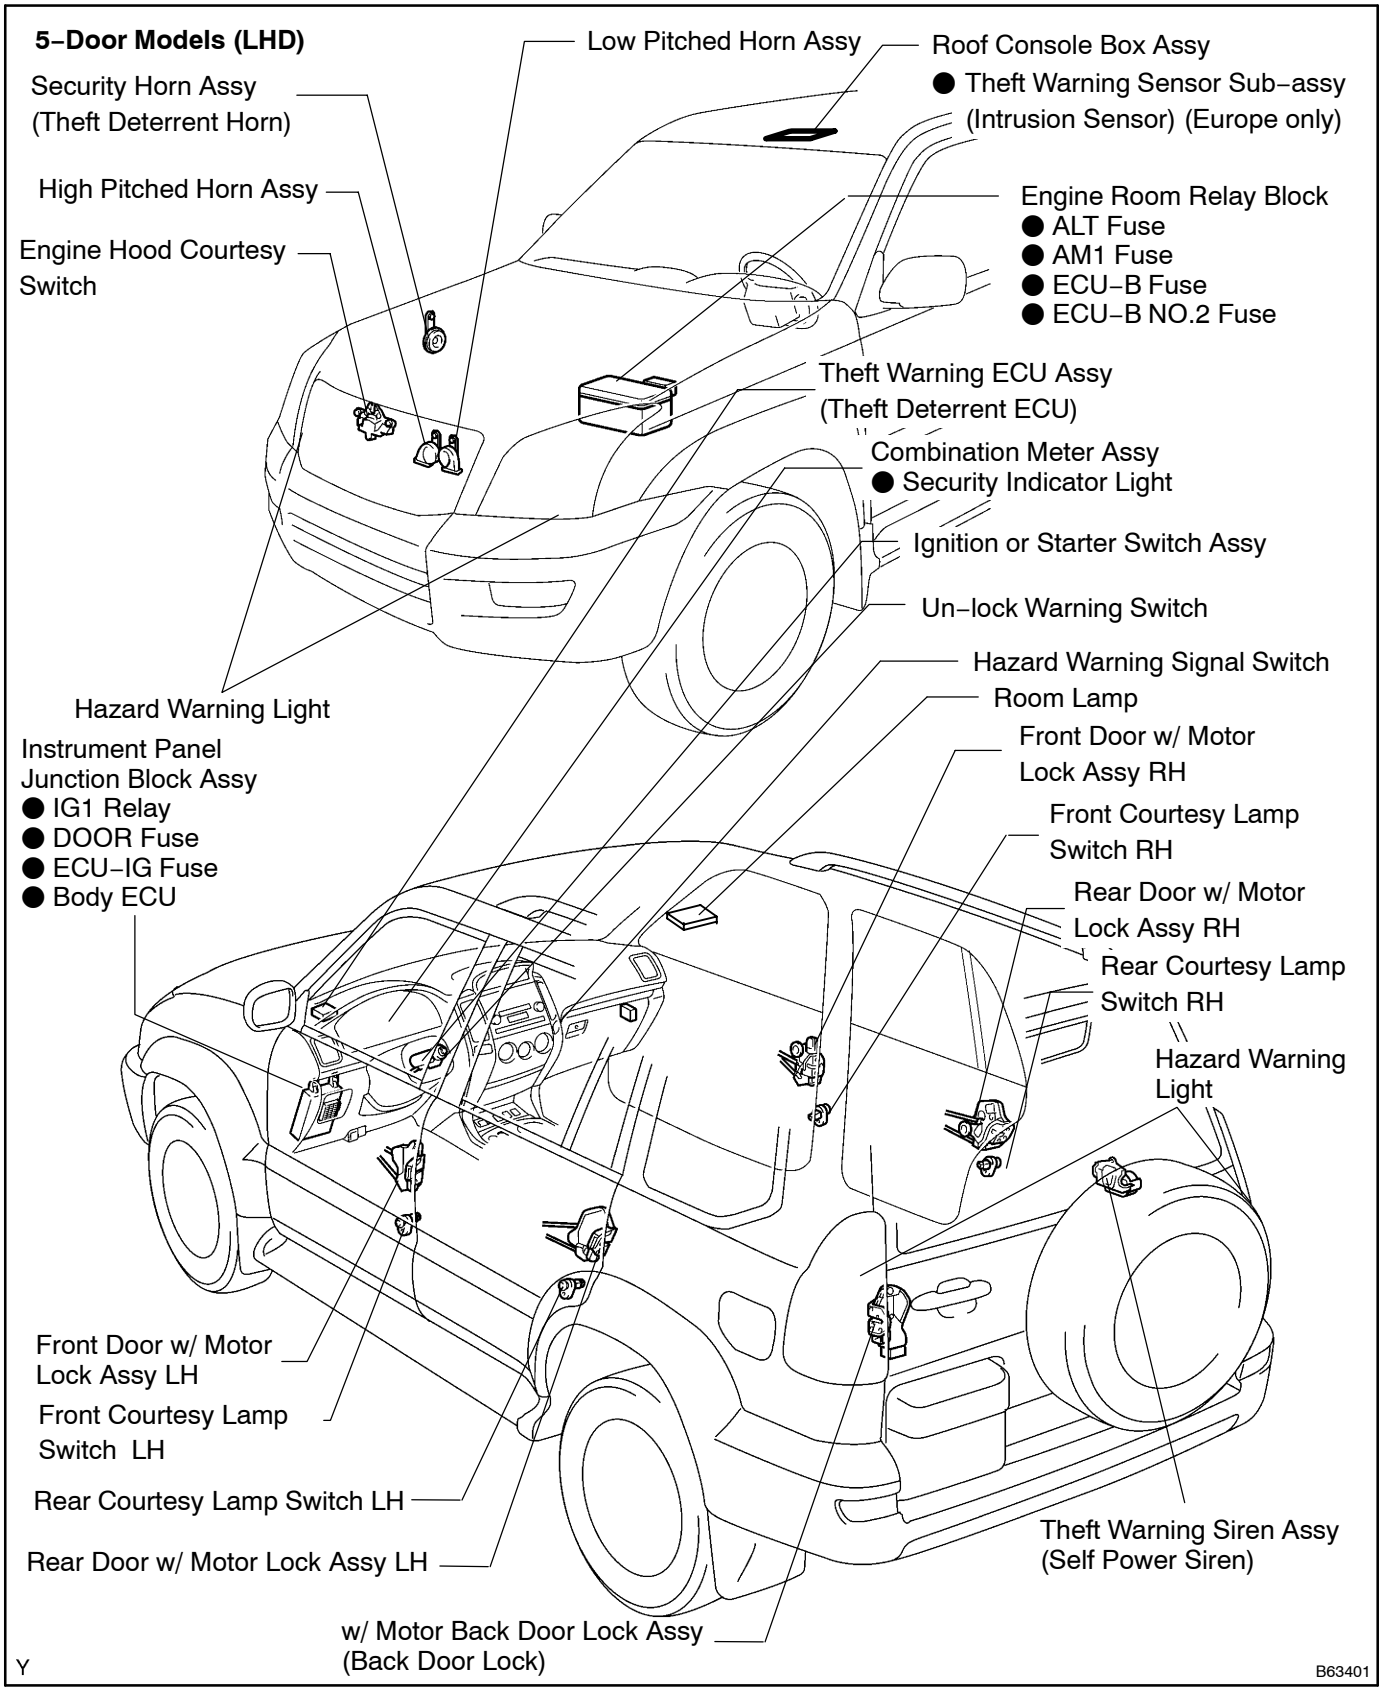


5–Door Models (LHD)
Low Pitched Horn Assy
Roof Console Box Assy
● Theft Warning Sensor Sub–assy
(Intrusion Sensor) (Europe only)
Security Horn Assy
(Theft Deterrent Horn)
High Pitched Horn Assy
Engine Hood Courtesy
Switch
Engine Room Relay Block
● ALT Fuse
● AM1 Fuse
● ECU–B Fuse
● ECU–B NO.2 Fuse
Theft Warning ECU Assy
(Theft Deterrent ECU)
Combination Meter Assy
● Security Indicator Light
Ignition or Starter Switch Assy
Un–lock Warning Switch
Hazard Warning Signal Switch
Room Lamp
Front Door w/ Motor
Lock Assy RH
Front Courtesy Lamp
Switch RH
Rear Door w/ Motor
Lock Assy RH
Rear Courtesy Lamp
Switch RH
Hazard Warning
Light
Hazard Warning Light
Instrument Panel
Junction Block Assy
● IG1 Relay
● DOOR Fuse
● ECU–IG Fuse
● Body ECU
Front Door w/ Motor
Lock Assy LH
Front Courtesy Lamp
Switch LH
Rear Courtesy Lamp Switch LH
Rear Door w/ Motor Lock Assy LH
Theft Warning Siren Assy
(Self Power Siren)
w/ Motor Back Door Lock Assy
(Back Door Lock)
Y
B63401

5–Door Models (RHD)

