
ECU POWER SOURCE CIRCUIT

CIRCUIT DESCRIPTION

This circuit provides power to operate the theft warning ECU assy.

WIRING DIAGRAM

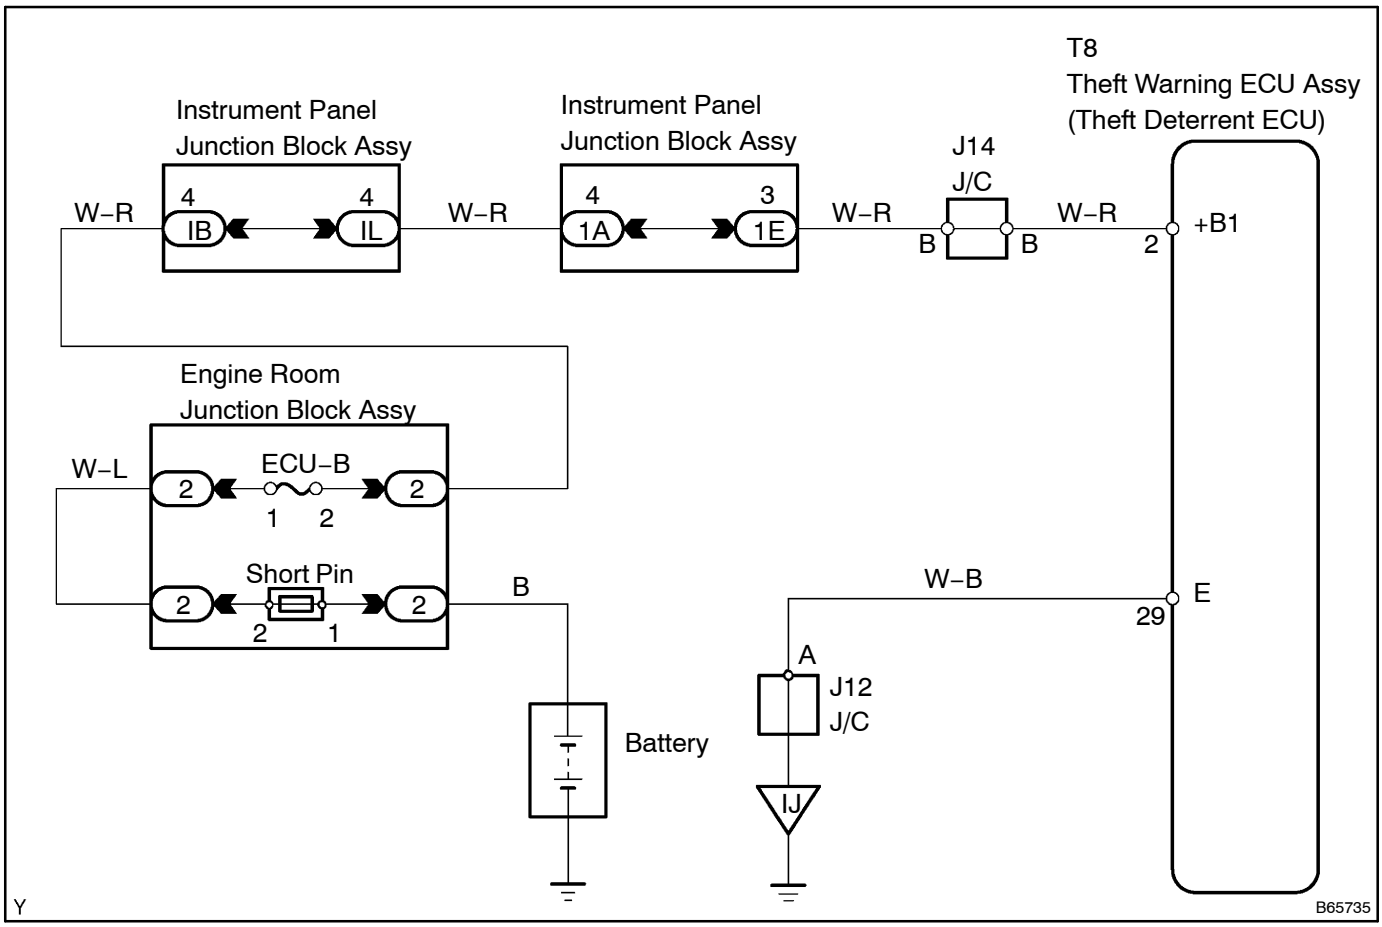

INSPECTION PROCEDURE

1	INSPECT FUSE (ECU–B)


(a) Remove the ECU–B fuse from the engine room J/B.
(b) Check the continuity.
Standard: Continuity

NG → **REPLACE FUSE**

OK

2	CHECK THEFT WARNING ECU ASSY (POWER SOURCE)

Wire Harness Side
T8
Theft Warning ECU Assy
(Theft Deterrent ECU)

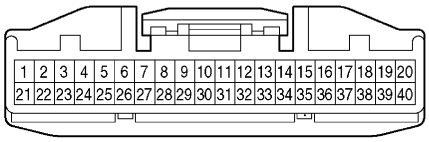

B63408

(a) Disconnect the T8 ECU connector.
(b) Check the voltage between the wire harness side connector and body ground.
Standard:


Symbols (Terminal No.)	Specified Condition
+B1 (T8–2) ⇔ Body ground	10 – 14 V

NG → **REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

3	CHECK THEFT WARNING ECU ASSY (GROUND)

Wire Harness Side
T8
Theft Warning ECU Assy
(Theft Deterrent ECU)

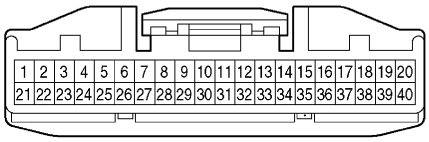

B63408

(a) Disconnect the T8 ECU connector.
(b) Check the continuity between the wire harness side connector and body ground.
Standard:

Symbols (Terminal No.)	Specified Condition
E (T8–29) ⇔ Body ground	Continuity

NG → **REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

CHECK AND REPLACE THEFT WARNING ECU ASSY