
05ADL–01

TERMINALS OF ECM

1KZ–TE:

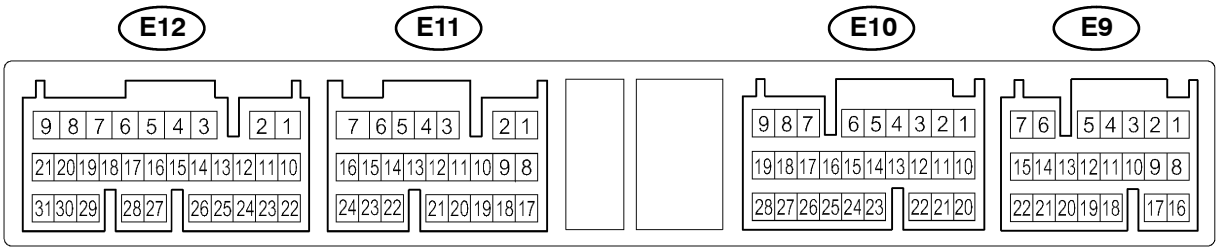


H

I34230

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage
TC ↔ E1 (E9–18 ↔ E12–22)	P–L ↔ BR	Ignition switch ON	10 – 14 V
		Ignition switch ON Connect terminals TC and CG of DLC3	Below 2 V
STP ↔ E1 (E10–14 ↔ E12–22)	G–Y ↔ BR	Ignition switch ON Depress brake pedal	10 – 14 V
		Ignition switch ON Release brake pedal	Below 1 V
PI ↔ E1 (E10–17 ↔ E12–22)	LG ↔ BR	Ignition switch ON Cruise control main switch ON	0 – 3 V
		Ignition switch ON Cruise control main switch OFF	9 – 14 V
ST1– ↔ E1 (E10–23 ↔ E12–22)	R–L ↔ BR	Ignition switch ON Depress brake pedal	Below 1 V
		Ignition switch ON Release brake pedal	10 – 14 V
CCS ↔ E2 (E10–25 ↔ E11–20)	L–B ↔ BR	Ignition switch ON	9 – 14 V
		Ignition switch ON CANCEL switch hold ON	6 – 10.1 V
		Ignition switch ON –/SET switch hold ON	4 – 7.1 V
		Ignition switch ON +/RES switch hold ON	2.1 – 4 V
		Ignition switch ON MAIN switch hold ON	Below 1 V
CMS ↔ E2 (E10–26 ↔ E11–20)	Y–B ↔ BR	Ignition switch ON MAIN switch hold OFF	10 – 14V
		Ignition switch ON MAIN switch hold ON	Below 1 V
M/T: D ↔ E1 (E11–18 ↔ E12–22)	B–R ↔ BR	Ignition switch ON Depress clutch pedal	Below 1 V
		Ignition switch ON Release clutch pedal	10 – 14 V

1KD–FTV:

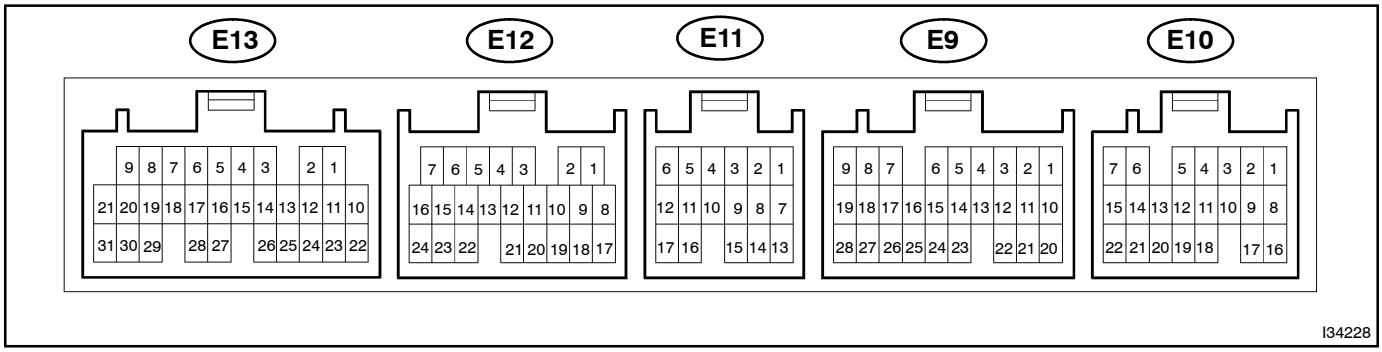

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage
STP ↔ E1 (E9–14 ↔ E13–22)	G–Y ↔ BR	Ignition switch ON Depress brake pedal	10 – 14 V
		Ignition switch ON Release brake pedal	Below 1 V
PI ↔ E1 (E9–16 ↔ E13–22)	LG ↔ BR	Ignition switch ON Cruise control main switch ON	0 – 3 V
		Ignition switch ON Cruise control main switch OFF	9 – 14 V
ST1– ↔ E1 (E9–23 ↔ E13–22)	R–L ↔ BR	Ignition switch ON Depress brake pedal	Below 1 V
		Ignition switch ON Release brake pedal	10 – 14 V
CCS ↔ E2 (E10–5 ↔ E12–20)	L–B ↔ BR	Ignition switch ON	9 – 14 V
		Ignition switch ON CANCEL switch hold ON	6 – 10.1 V
		Ignition switch ON –/SET switch hold ON	4 – 7.1 V
		Ignition switch ON +/RES switch hold ON	2.1 – 4 V
		Ignition switch ON MAIN switch hold ON	Below 1 V
M/T: D ↔ E1 (E10–11 ↔ E13–22)	G ↔ BR	Ignition switch ON Depress clutch pedal	Below 1 V
		Ignition switch ON Release clutch pedal	10 – 14 V
TC ↔ E1 (E10–18 ↔ E13–22)	P–L ↔ BR	Ignition switch ON	10 – 14 V
		Ignition switch ON Connect terminals TC and CG of DLC3	Below 2 V