
CRUISE MAIN INDICATOR LIGHT CIRCUIT

CIRCUIT DESCRIPTION

When the cruise control main switch is turned off, the cruise control does not operate.

WIRING DIAGRAM

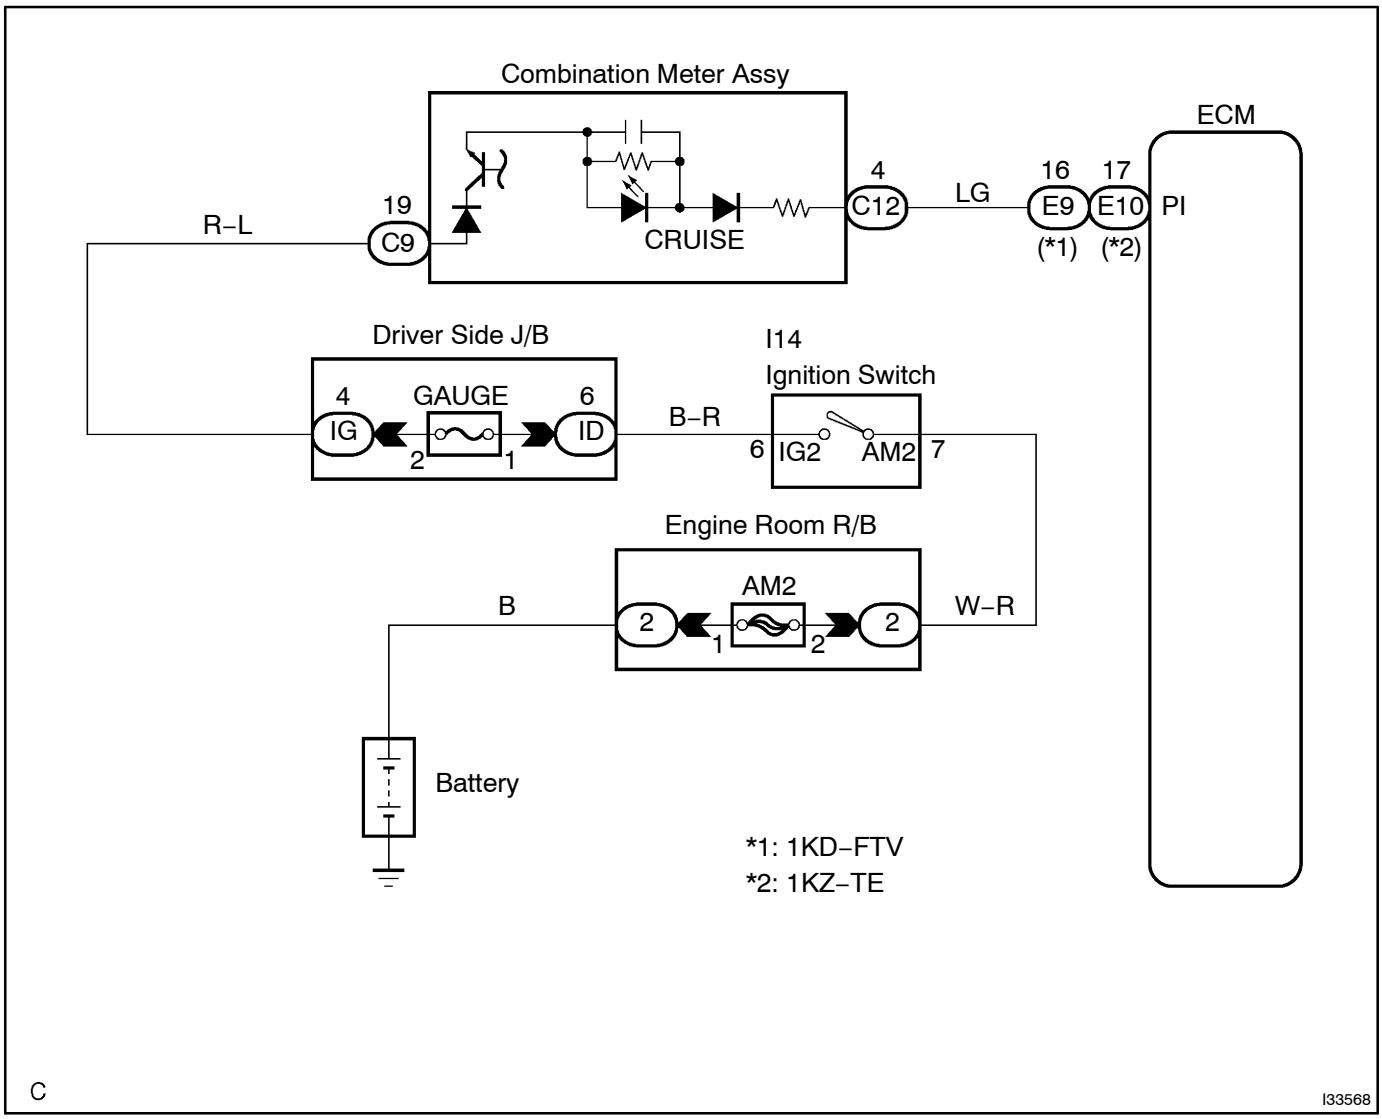

INSPECTION PROCEDURE

1	INSPECT COMBINATION METER ASSY

(a) See combination meter troubleshooting on page 71–1.

NG → REPAIR OR REPLACE COMBINATION METER ASSY

OK

2	CHECK HARNESS AND CONNECTOR(COMBINAITON METER ASSY – ECM)

(a) Check for open and short circuit in harness and connector between combination meter assy and ECM (See page 01–36).

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (See page 05–1861)