
DIAGNOSTIC CONNECTOR (DLC3) CIRCUIT

CIRCUIT DESCRIPTION


Making short circuit between terminal TC and CG of DLC3 will output DTC from the DLC3.

WIRING DIAGRAM

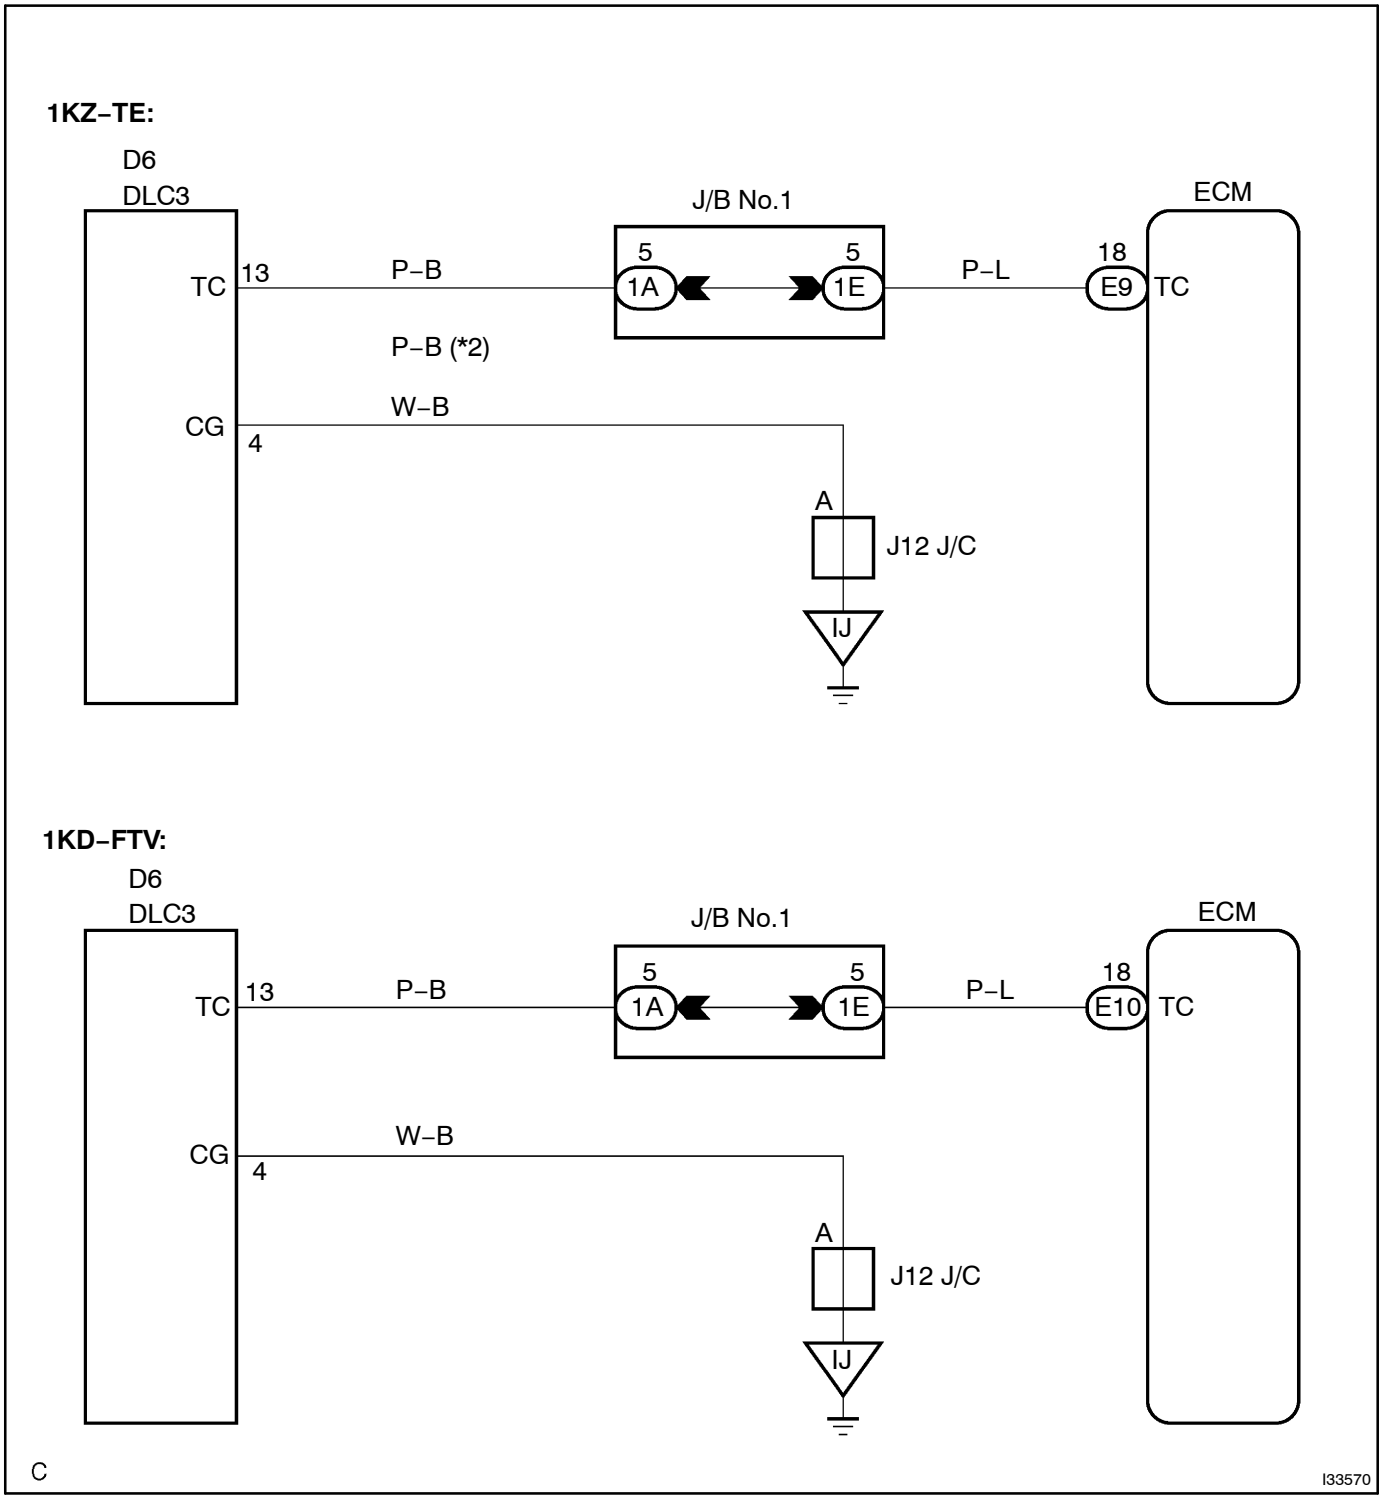

INSPECTION PROCEDURE

1	INSPECT DLC3 (TC TERMINAL VOLTAGE)

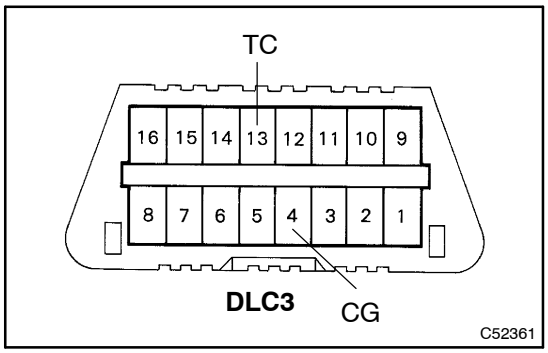

(a) Turn the ignition switch to ON.
(b) Measure voltage between terminals TC and CG of DLC3.
Standard:
10 – 14 V

OK	Go to step 3

NG

2	CHECK HARNESS AND CONNECTOR (DLC3 – BODY GROUND)

(a) Check for open and short circuit in harness and connector between terminal CG of DLC3 and body ground (See page 01–36).

NG	REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3	CHECK HARNESS AND CONNECTOR (DLC3 – ECM)

(a) Check for open and short circuit in harness and connector between terminal TC of DLC3 and ECM (See page 01–36).

NG	REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE ECM (See page 01–36)