
KNOCK SENSOR (3RZ–FE)

100C3–01

REPLACEMENT

1. REMOVE STARTER ASSY (See page 19–3)

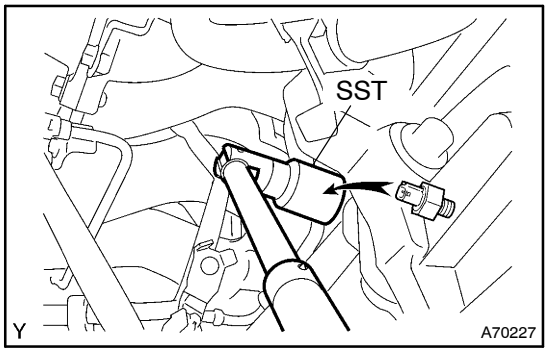

2. REMOVE KNOCK SENSOR

(a) Disconnect the knock sensor connector.

(b) Using SST, remove the knock sensor.
SST 09816–30010

3. INSTALL KNOCK SENSOR

(a) Using SST, install the knock sensor.
SST 09816–30010
Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)

(b) Connect the knock sensor connector.

4. INSTALL STARTER ASSY (See page 19–3)