
ACCELERATOR PEDAL ROD ASSY (DIESEL)

100CC–01

REPLACEMENT

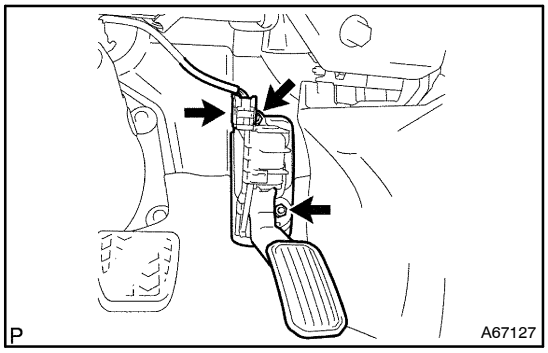

1. REMOVE ACCELERATOR PEDAL ROD ASSY

(a) Disconnect a accelerator pedal connector.

(b) Remove the 2 nuts and accelerator pedal assy.

2. INSTALL ACCELERATOR PEDAL ROD ASSY

NOTICE:

- **Be care not to give a shock to the accelerator pedal assy.**
- **Be care not to disassemble the accelerator pedal assy.**

(a) Install the accelerator pedal assy with the 2 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

(b) Connect a accelerator pedal connector.