
ECM

100CD–01

REPLACEMENT

1. **REMOVE INSTRUMENT PANEL UNDER COVER NO.2 (See page 71–13)**
2. **REMOVE DOOR ASSY, GLOVE COMPARTMENT (See page 71–13)**

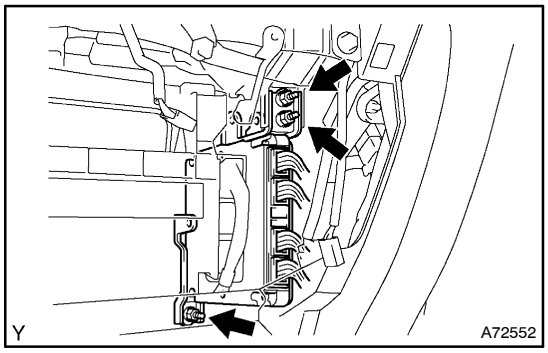

3. **REMOVE ECM**

(a) Disconnect the 3 ECM connector (3RZ–FE LEADED GASOLINE MODEL).
(b) Disconnect the 4 ECM connector (3RZ–FE UNLEADED GASOLINE MODEL 5L–E, 1KZ–TE, 1KD–FTV).
(c) Remove the 3 nuts and ECM.
(d) Remove the 2 screws and ECM bracket No. 1 from the ECM.
(e) Remove the 2 screws and ECM bracket No. 2 from the ECM.

4. **INSTALL ECM**

(a) Install the ECM bracket No. 2 with the 2 screws to the ECM.
(b) Install the ECM bracket No. 1 with the 2 screws to ECM.
(c) Install the ECM with the 3 nuts.
Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)
(d) Connect the 3 ECM connector (3RZ–FE LEADED GASOLINE MODEL).
(e) Connect the 4 ECM connector (3RZ–FE UNLEADED GASOLINE MODEL 5L–E, 1KZ–TE, 1KD–FTV).