

FUEL INJECTOR ASSY (3RZ–FE)

110LP–02

COMPONENTS

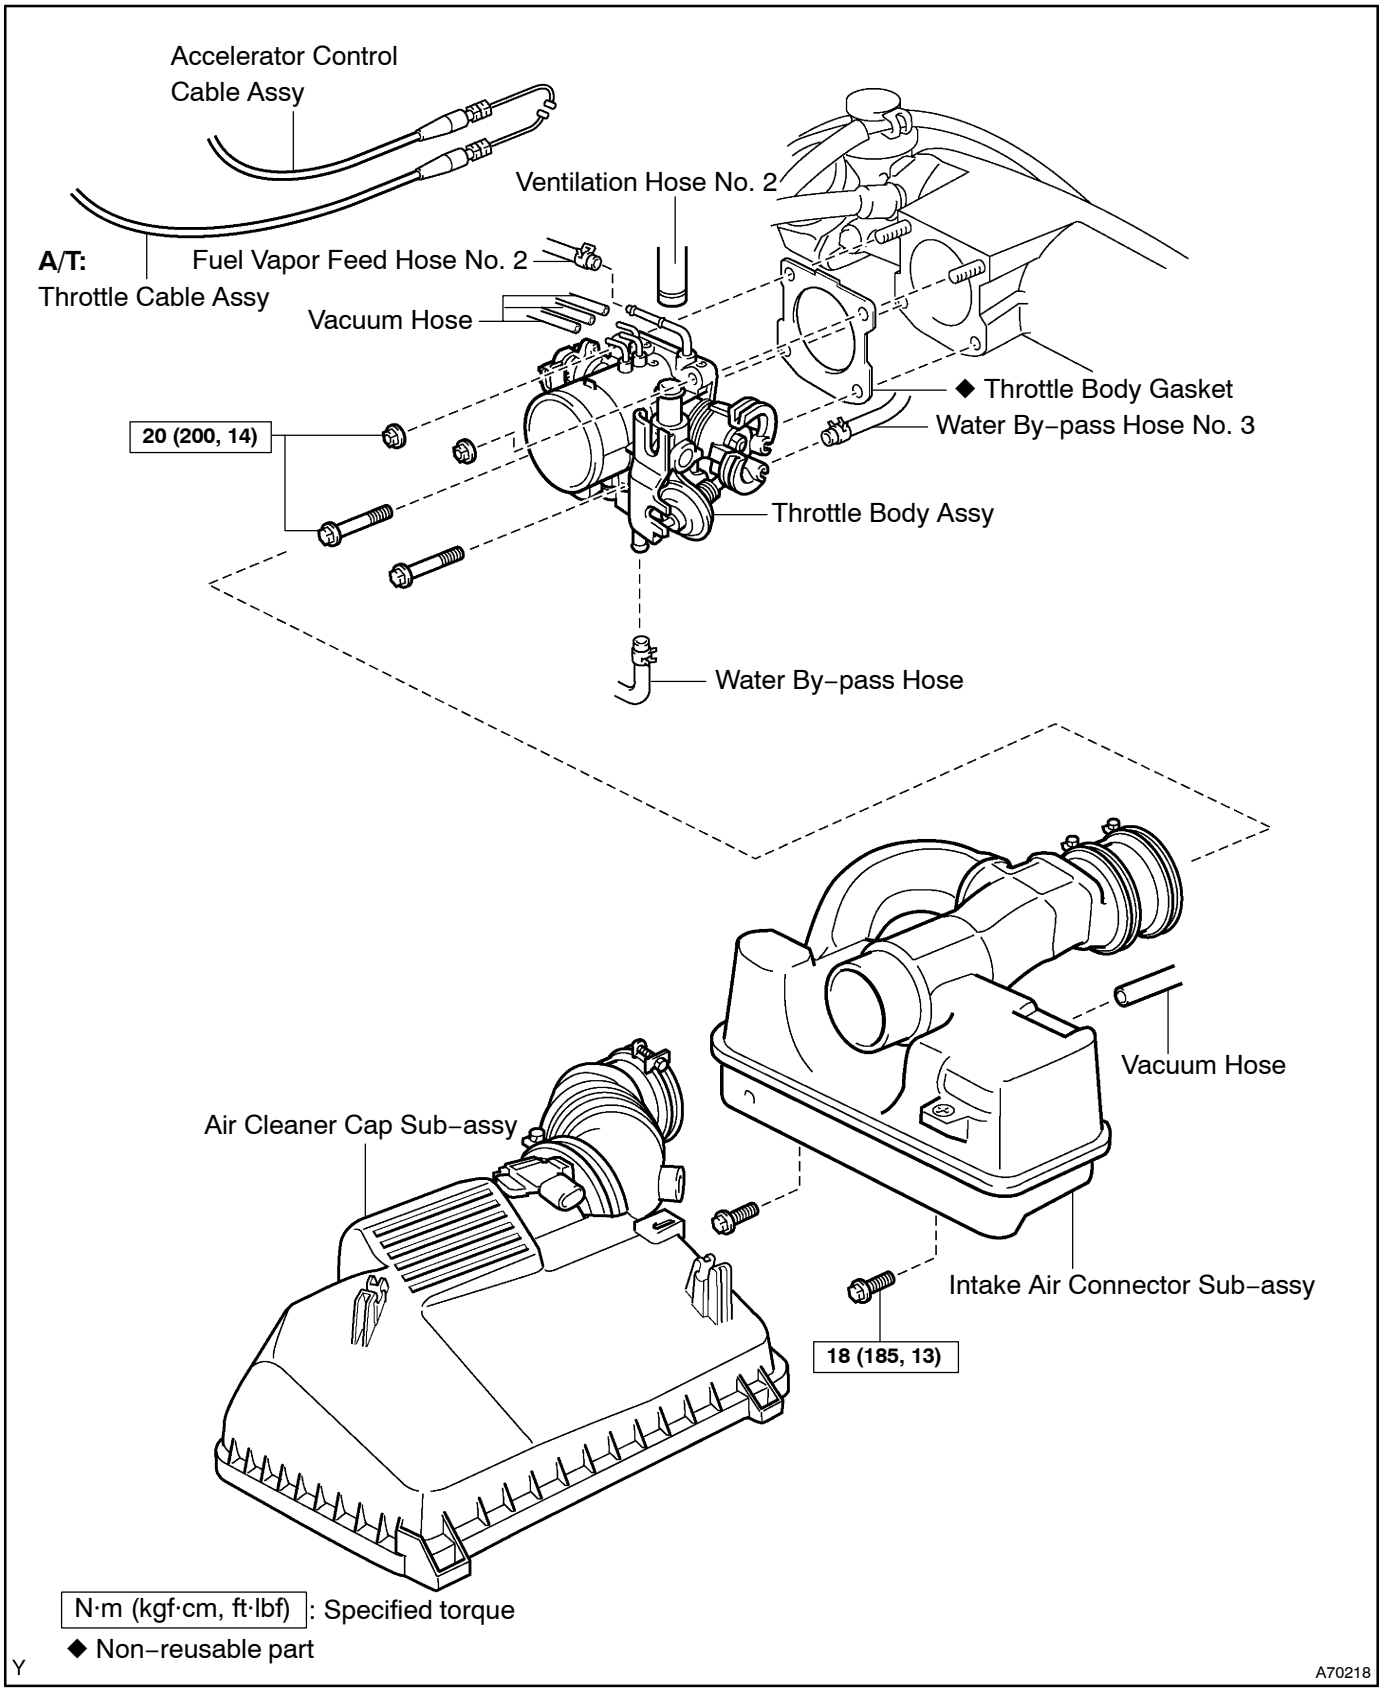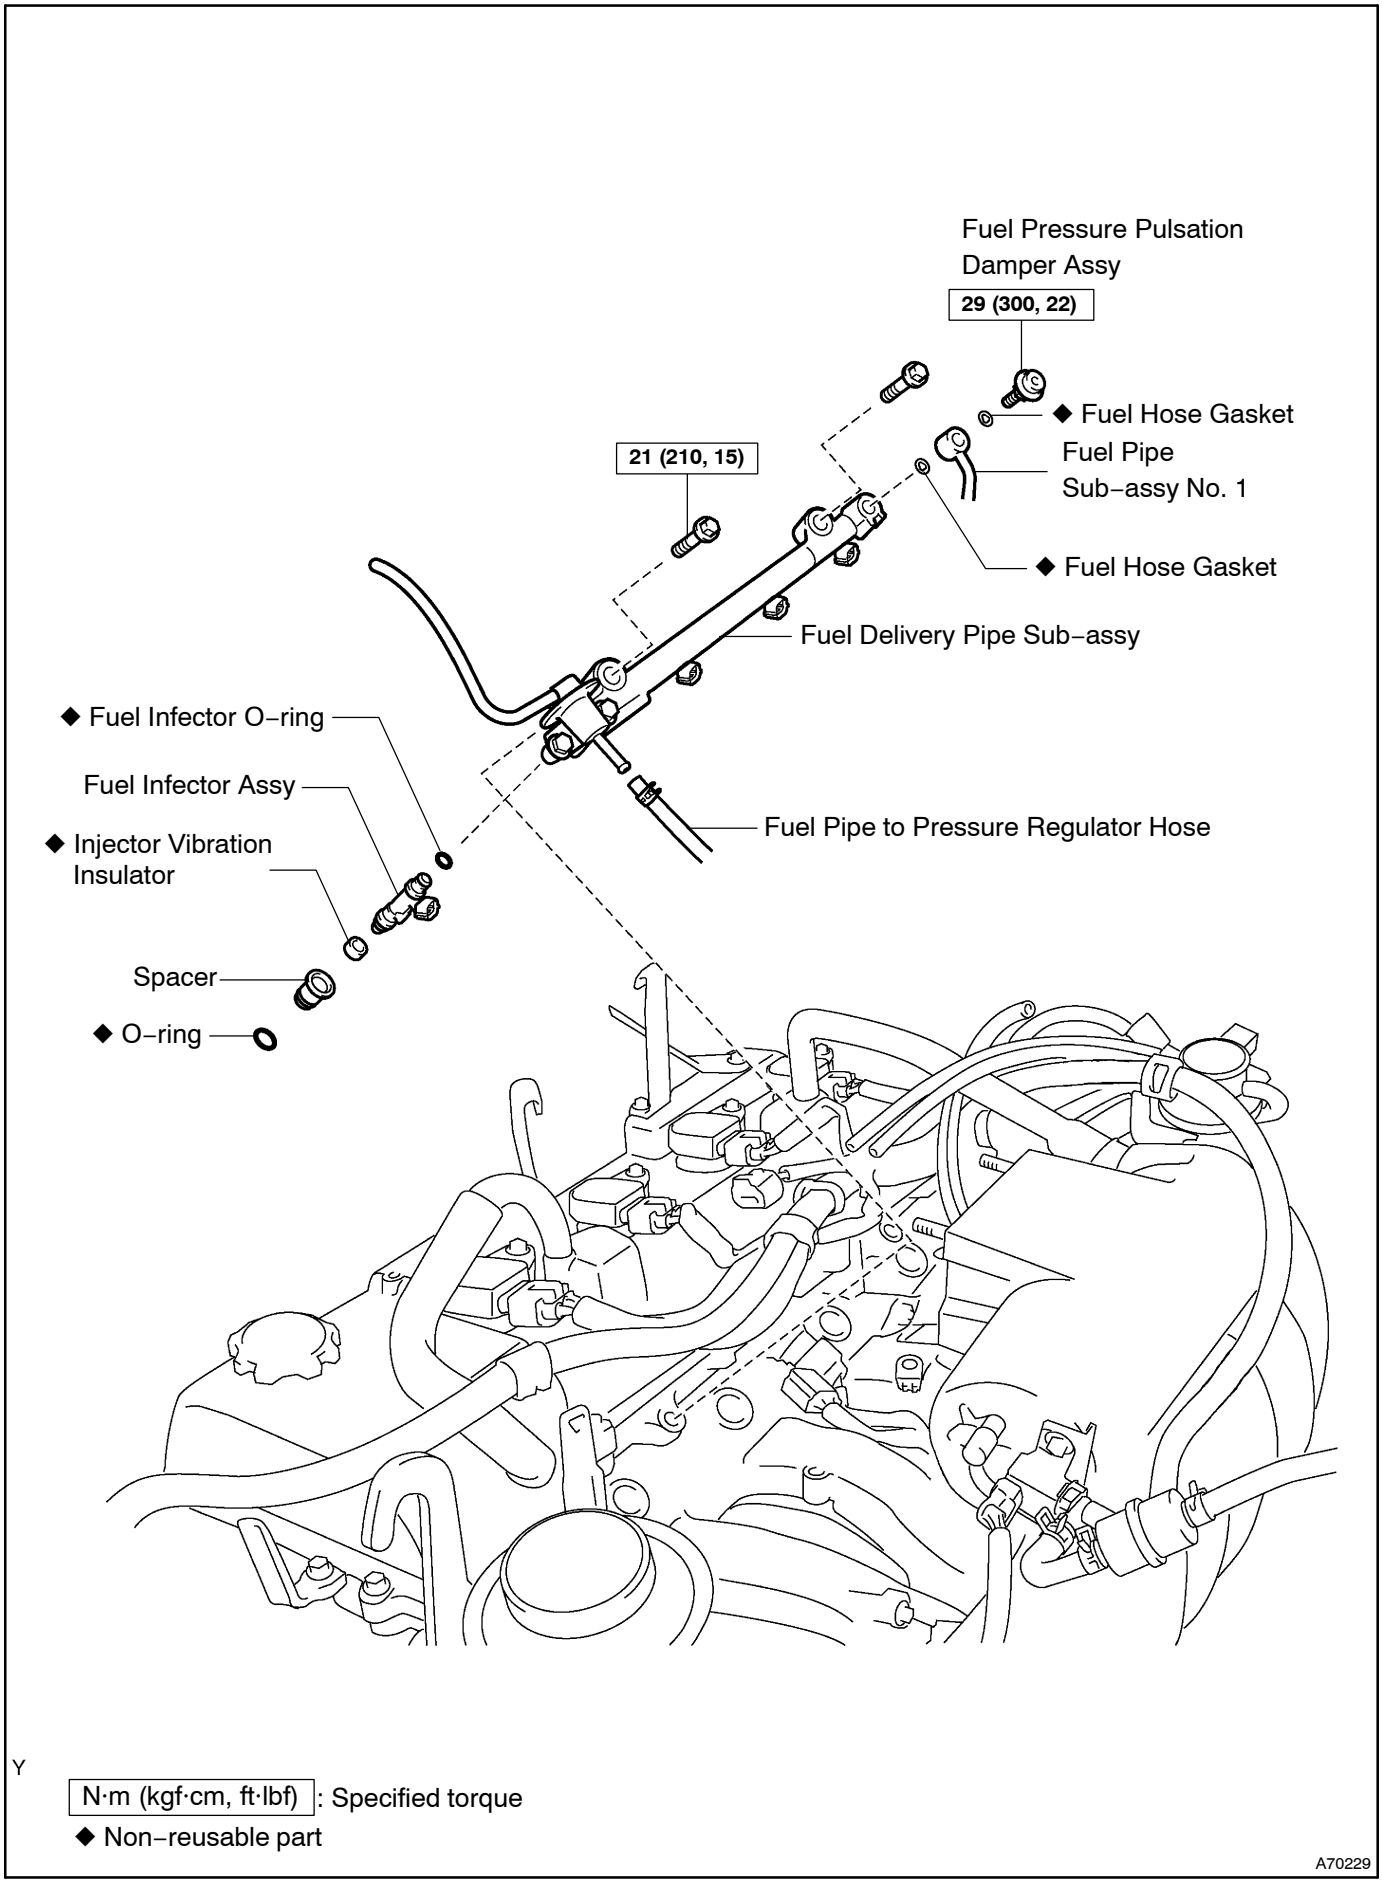


Fuel Pressure Pulsation Damper Assy
29 (300, 22)
◆ Fuel Hose Gasket
Fuel Pipe Sub–assy No. 1
21 (210, 15)
◆ Fuel Hose Gasket
Fuel Delivery Pipe Sub–assy
◆ Fuel Infector O–ring
Fuel Infector Assy
◆ Injector Vibration Insulator
Fuel Pipe to Pressure Regulator Hose
Spacer
◆ O–ring
Y
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A70229