
FUEL PRESSURE REGULATOR ASSY (3RZ–FE)

110LR–01

REPLACEMENT

1. WORK FOR PREVENTING GASOLINE FROM SPILLING OUT (See page 11–1)

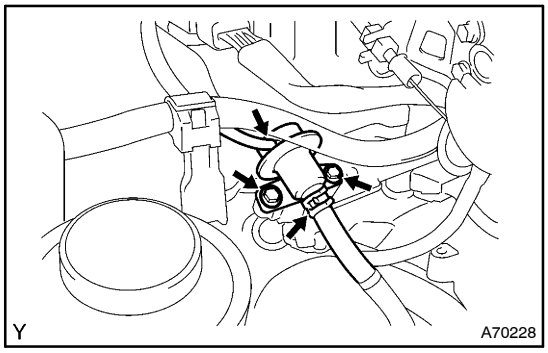

2. REMOVE FUEL PRESSURE REGULATOR ASSY

(a) Disconnect the vacuum hose.

(b) Disconnect the fuel pipe to pressure regulator fuel hose.

CAUTION:

Put a suitable container or shop rag under the fuel delivery pipe.

(c) Remove the 2 bolts and fuel pressure regulator.

3. INSTALL FUEL PRESSURE REGULATOR ASSY

(a) Apply a light coat of spindle oil or gasoline to a new O–ring and install it to the fuel pressure regulator.

(b) Install the fuel pressure regulator with the 2 bolts.

Torque: 8.0 N·m (80 kgf·cm, 69 in.·lbf)

(c) Connect fuel pipe to pressure regulator fuel hose.

(d) Connect the vacuum hose.

4. CHECK FOR FUEL LEAKS (See page 11–1)