

INJECTOR ASSY (1KD–FTV)

COMPONENTS

110LN–01

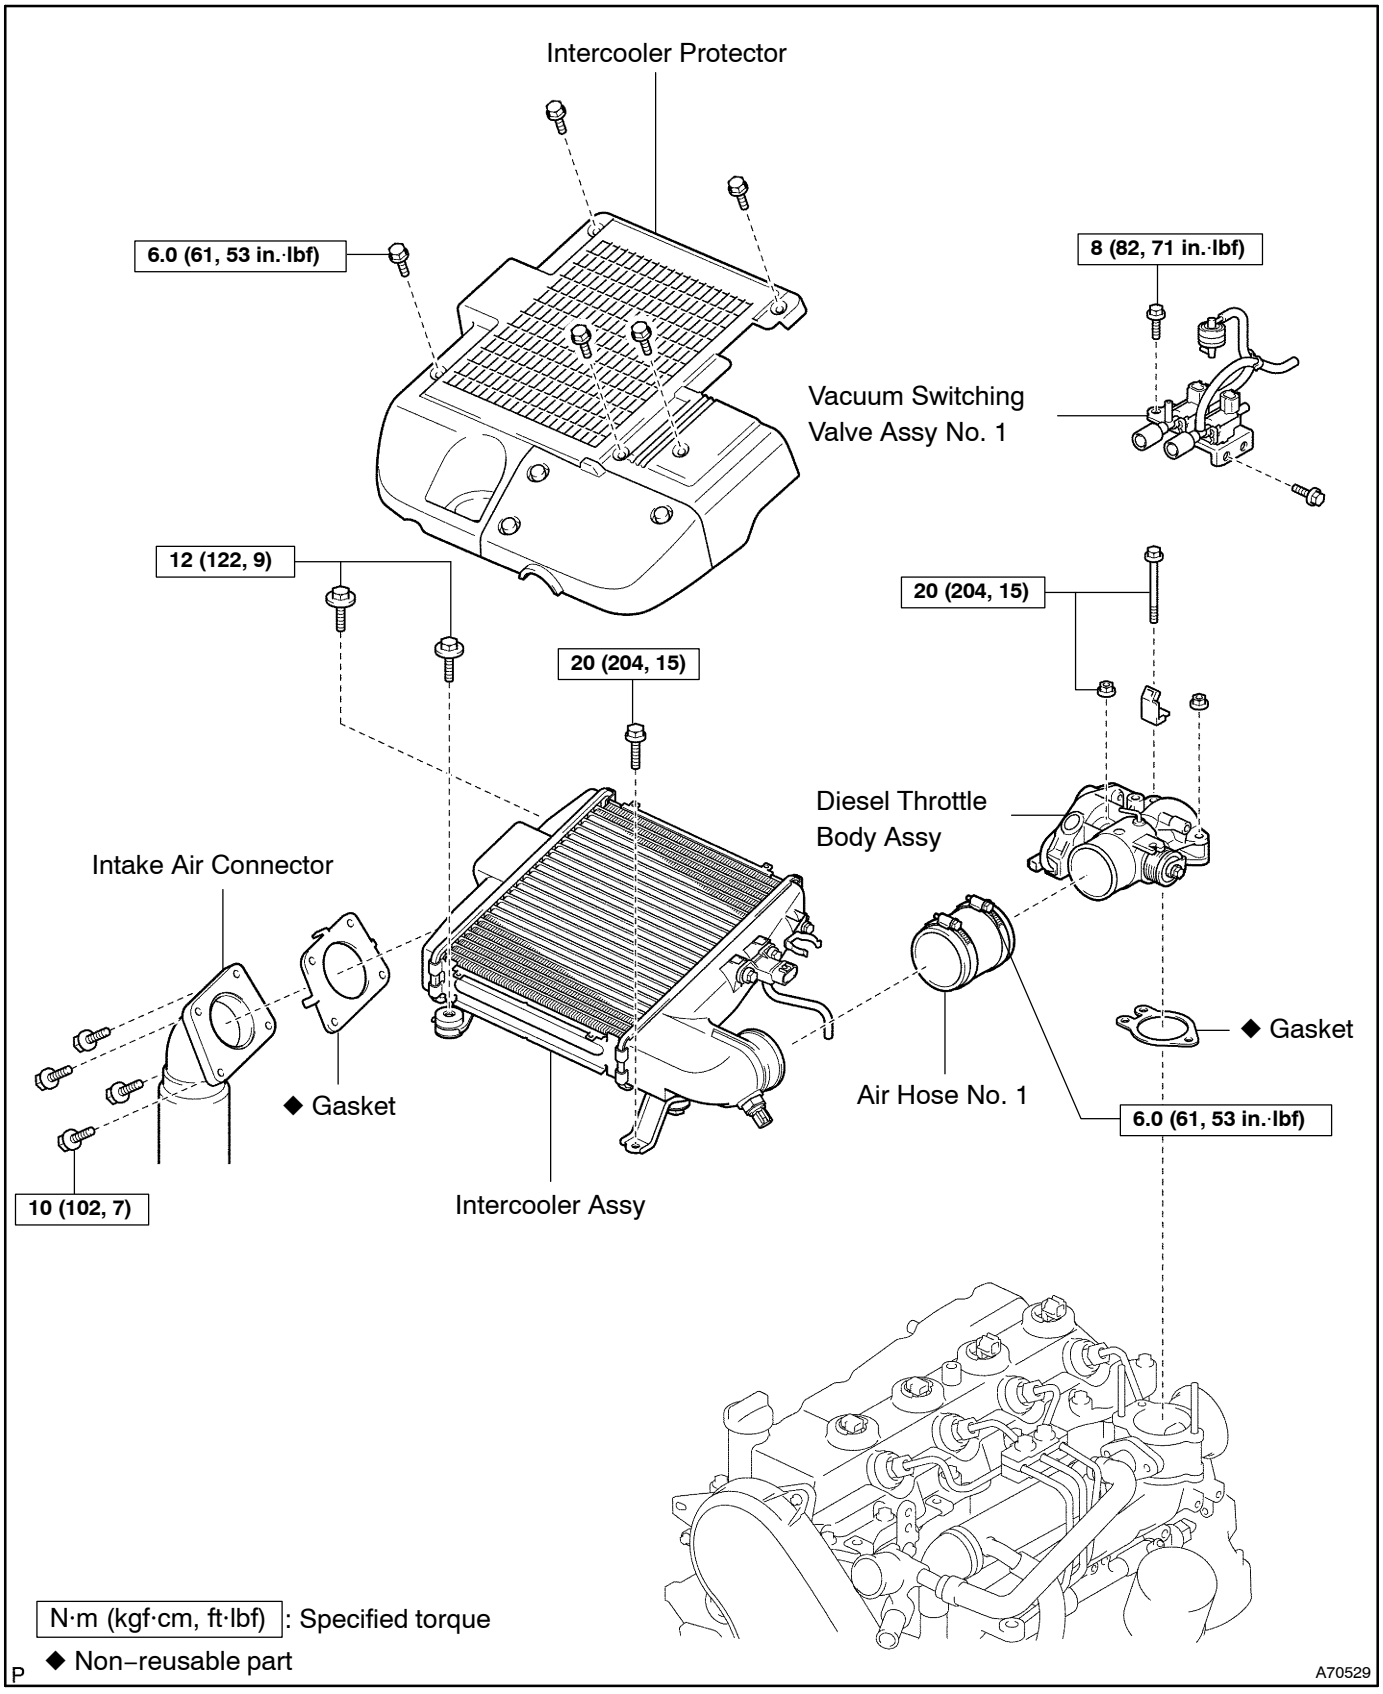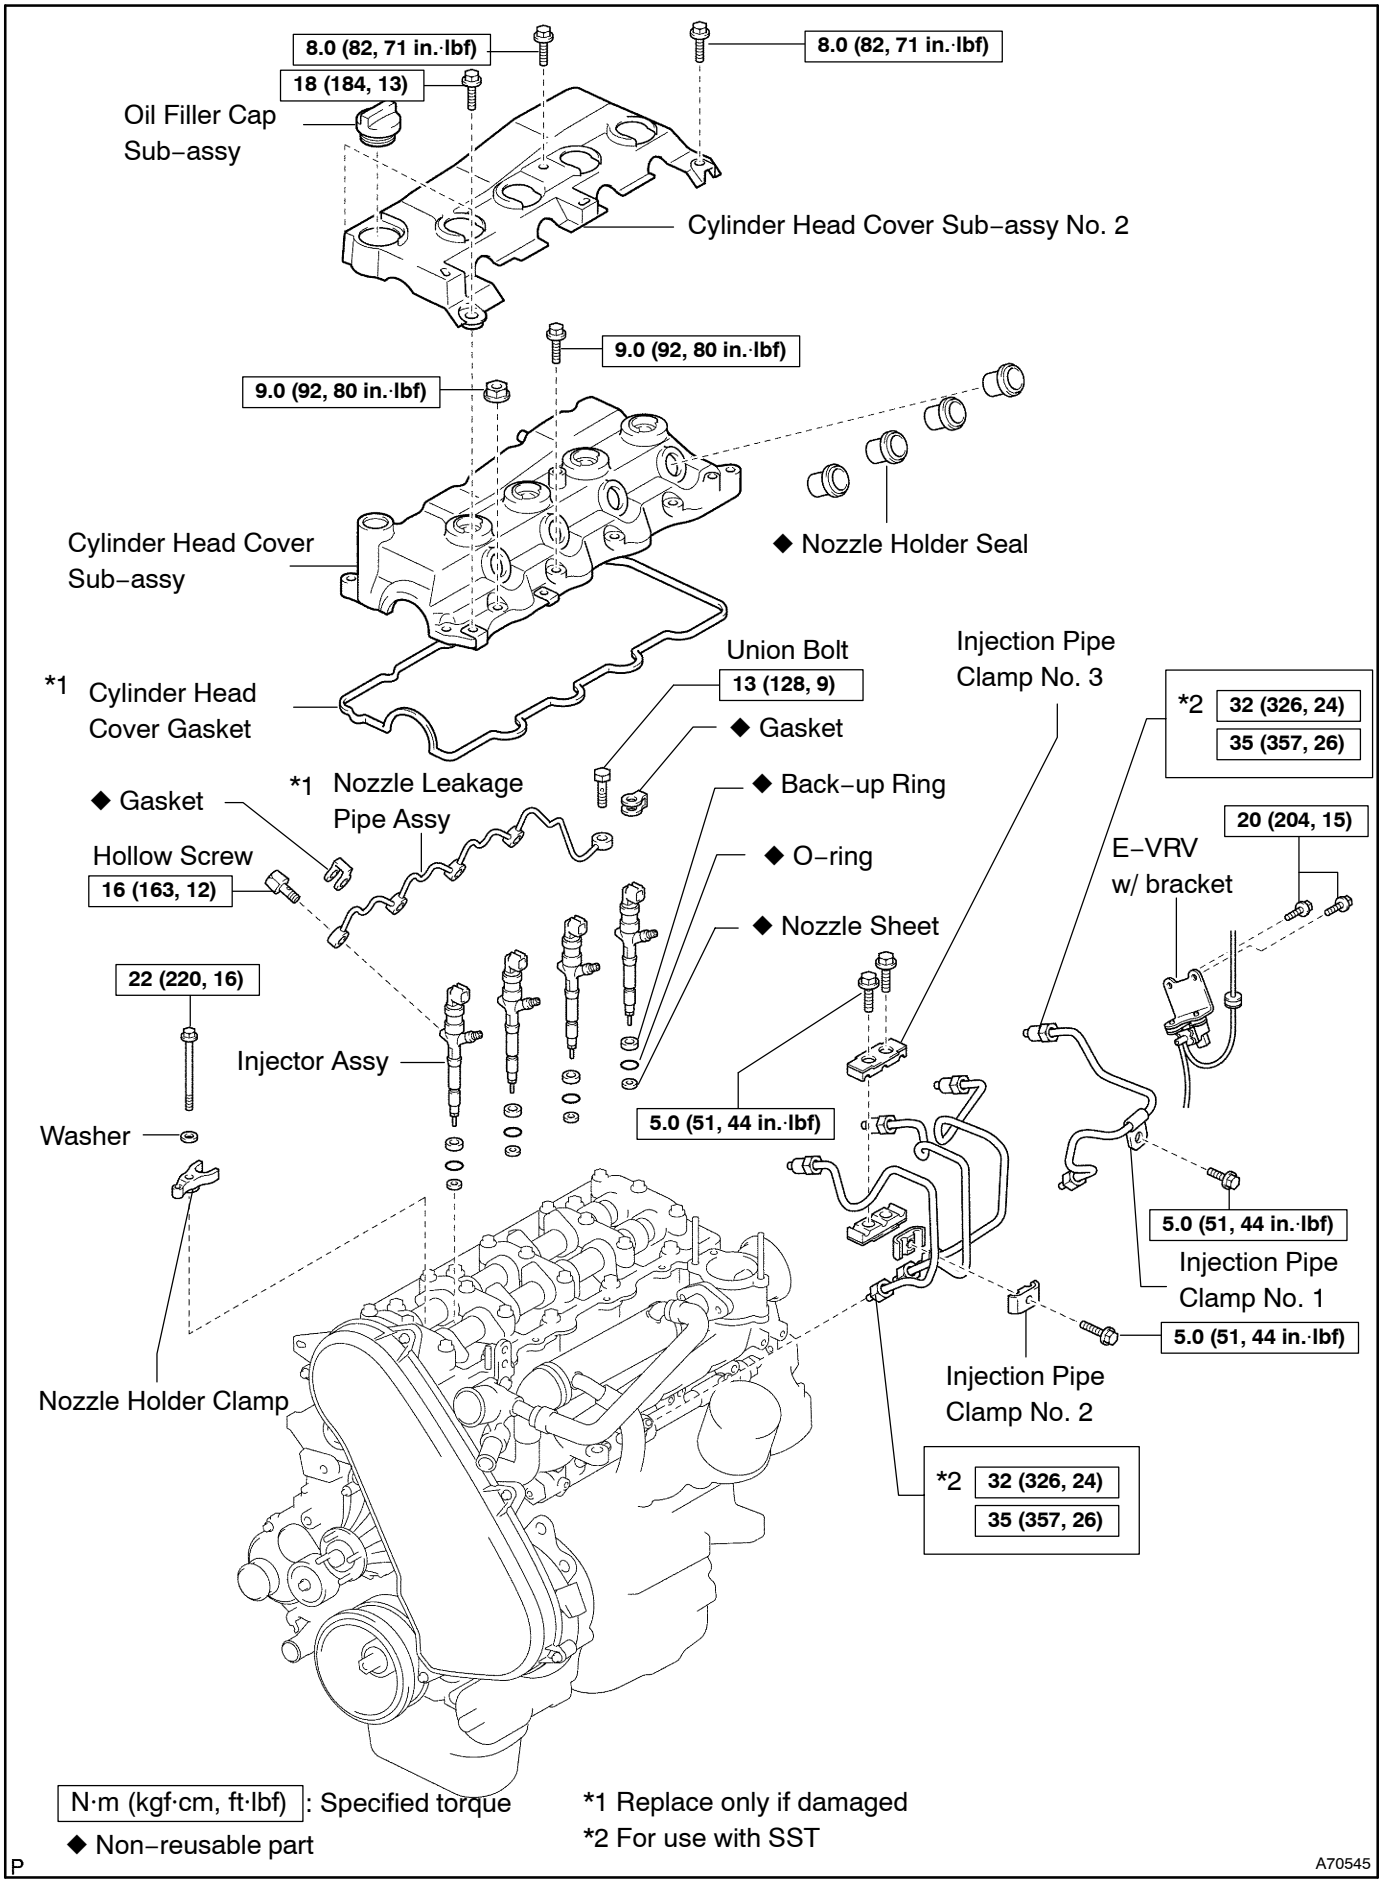


8.0 (82, 71 in.·lbf)
18 (184, 13)
8.0 (82, 71 in.·lbf)
Oil Filler Cap Sub–assy
Cylinder Head Cover Sub–assy No. 2
9.0 (92, 80 in.·lbf)
9.0 (92, 80 in.·lbf)
Cylinder Head Cover Sub–assy
◆ Nozzle Holder Seal
*1 Cylinder Head Cover Gasket
Union Bolt
13 (128, 9)
◆ Gasket
Injection Pipe Clamp No. 3
*2
32 (326, 24)
35 (357, 26)
◆ Gasket
*1 Nozzle Leakage Pipe Assy
◆ Back–up Ring
◆ O–ring
◆ Nozzle Sheet
Hollow Screw
16 (163, 12)
20 (204, 15)
E–VRV w/ bracket
22 (220, 16)
Injector Assy
Washer
5.0 (51, 44 in.·lbf)
5.0 (51, 44 in.·lbf)
Injection Pipe Clamp No. 1
5.0 (51, 44 in.·lbf)
Injection Pipe Clamp No. 2
Nozzle Holder Clamp
*2
32 (326, 24)
35 (357, 26)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
*1 Replace only if damaged
*2 For use with SST
P
A70545