
1207E–01

INSPECTION

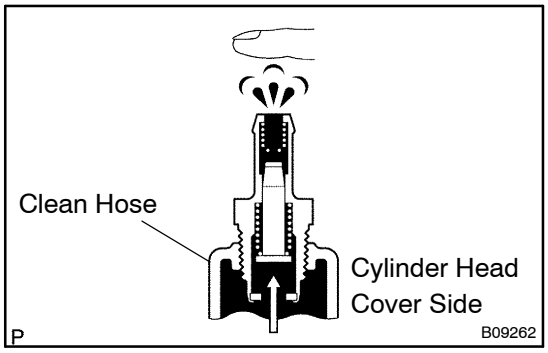


1. VENTILATION VALVE SUB–ASSY

(a) Blow air into the cylinder head side, and check that air passes through easily.

CAUTION:


Do not suck air through the value. Petroleum substances inside the valve air harmful.

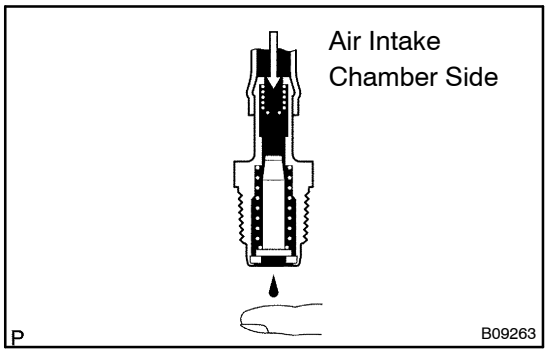

(b) Blow air into the intake manifold side, and check that air passes through with difficulty.


HINT:

If operation is not as specified, replace the PCV valve.

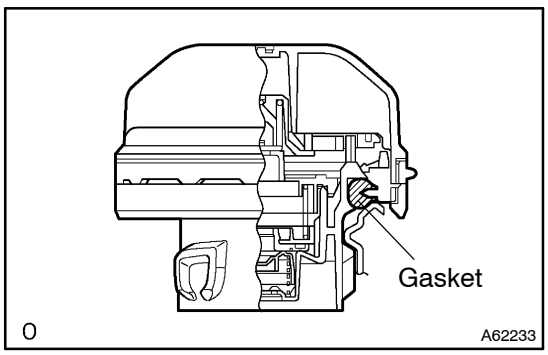

2. FUEL TANK CAP ASSY

(a) Visually check if the cap and/or gasket are deformed or damaged.

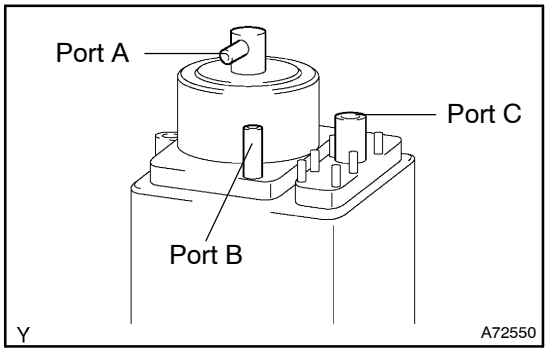


3. CHARCOAL CANISTER ASSY

(a) Inspect charcoal canister operation.

(1) Check the charcoal canister operation according to the table below.

Criterion:

Checking way	Criterion
Close the port B and C, then apply vacuum to port A	No leak
Close the port C, then apply vacuum to port A	Air flows from the port B
Close the port C, then blow air into the port A	Air flows from the port B
Blow air into the port A	Air flows from both the port B and C

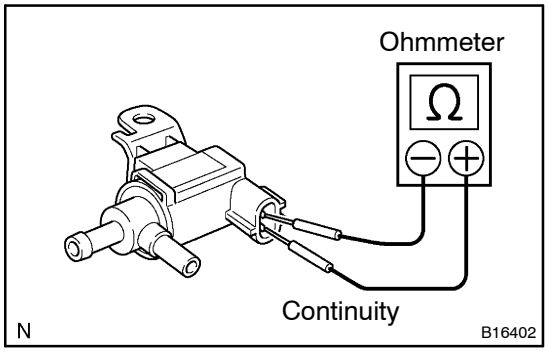


4. VACUUM SWITCHING VALVE ASSY NO.2

(a) Inspect the VSV for open circuit.

(1) Using an ohmmeter, check that there is continuity between the terminals.

Resistance: 30 – 34 Ω at 20 °C (68 °F)


If there is no continuity, replace the VSV.

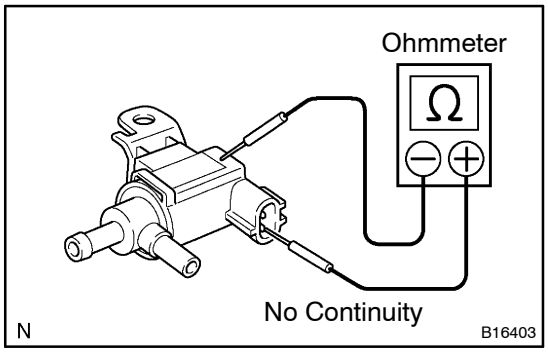

(b) Inspect the VSV for ground.


(1) Using an ohmmeter, check that there is no continuity between each terminal and the body.

If there is continuity, replace the VSV.

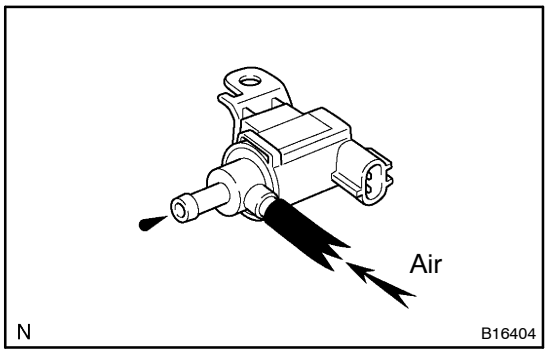

(c) Inspect the VSV operation.


(1) Check that air does not flow from parts.

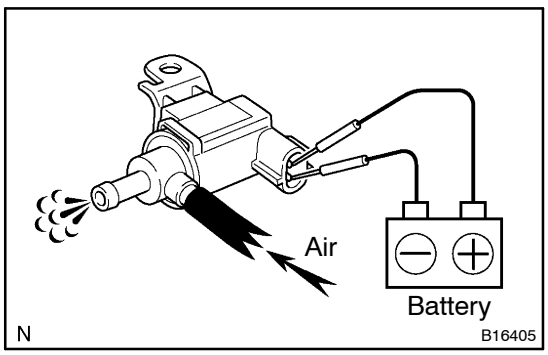

(2) Apply battery positive voltage across the terminals.

(3) Check that air flows from ports.

If operation is not as specified, replace the VSV.

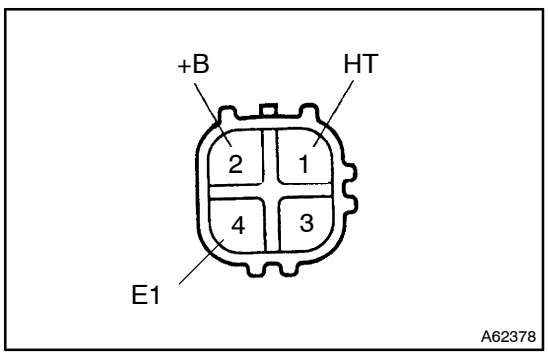

5. HEATED OXYGEN SENSOR

(a) Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Terminal No.	Resistance
1 (HT) ⇔ 2 (+B)	11 – 16 Ω at 20 °C (68 °F)
1 (HT) ⇔ 4 (E1)	No Continuity

If the resistance is not as specified, replace the sensor.