
13054–01

INSPECTION

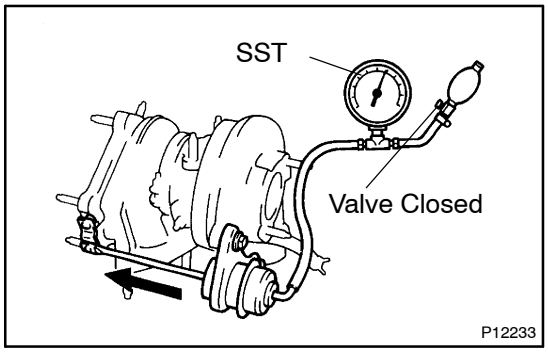

1. TURBOCHARGER SUB–ASSY

(a) Inspect actuator and waste gate valve operation.

(1) Disconnect the actuator hose from the compressor housing.

(2) Using SST, apply approx. 111 kPa (1.13 kgf/cm^2, 15.9 psi) of pressure to the actuator.

SST 09992–00242

(3) Move the actuator push rod, and check that the waste gate valve is open.

If the rod does not move, replace the actuator or turbocharger.

NOTICE:

Never apply more than 147 kPa (1.50 kgf/cm^2, 21.3 psi) or pressure to the actuator.

(b) Reconnect the actuator hose to the compressor housing.