

TURBOCHARGER SUB–ASSY (1KD–FTV)

13050–01

COMPONENTS

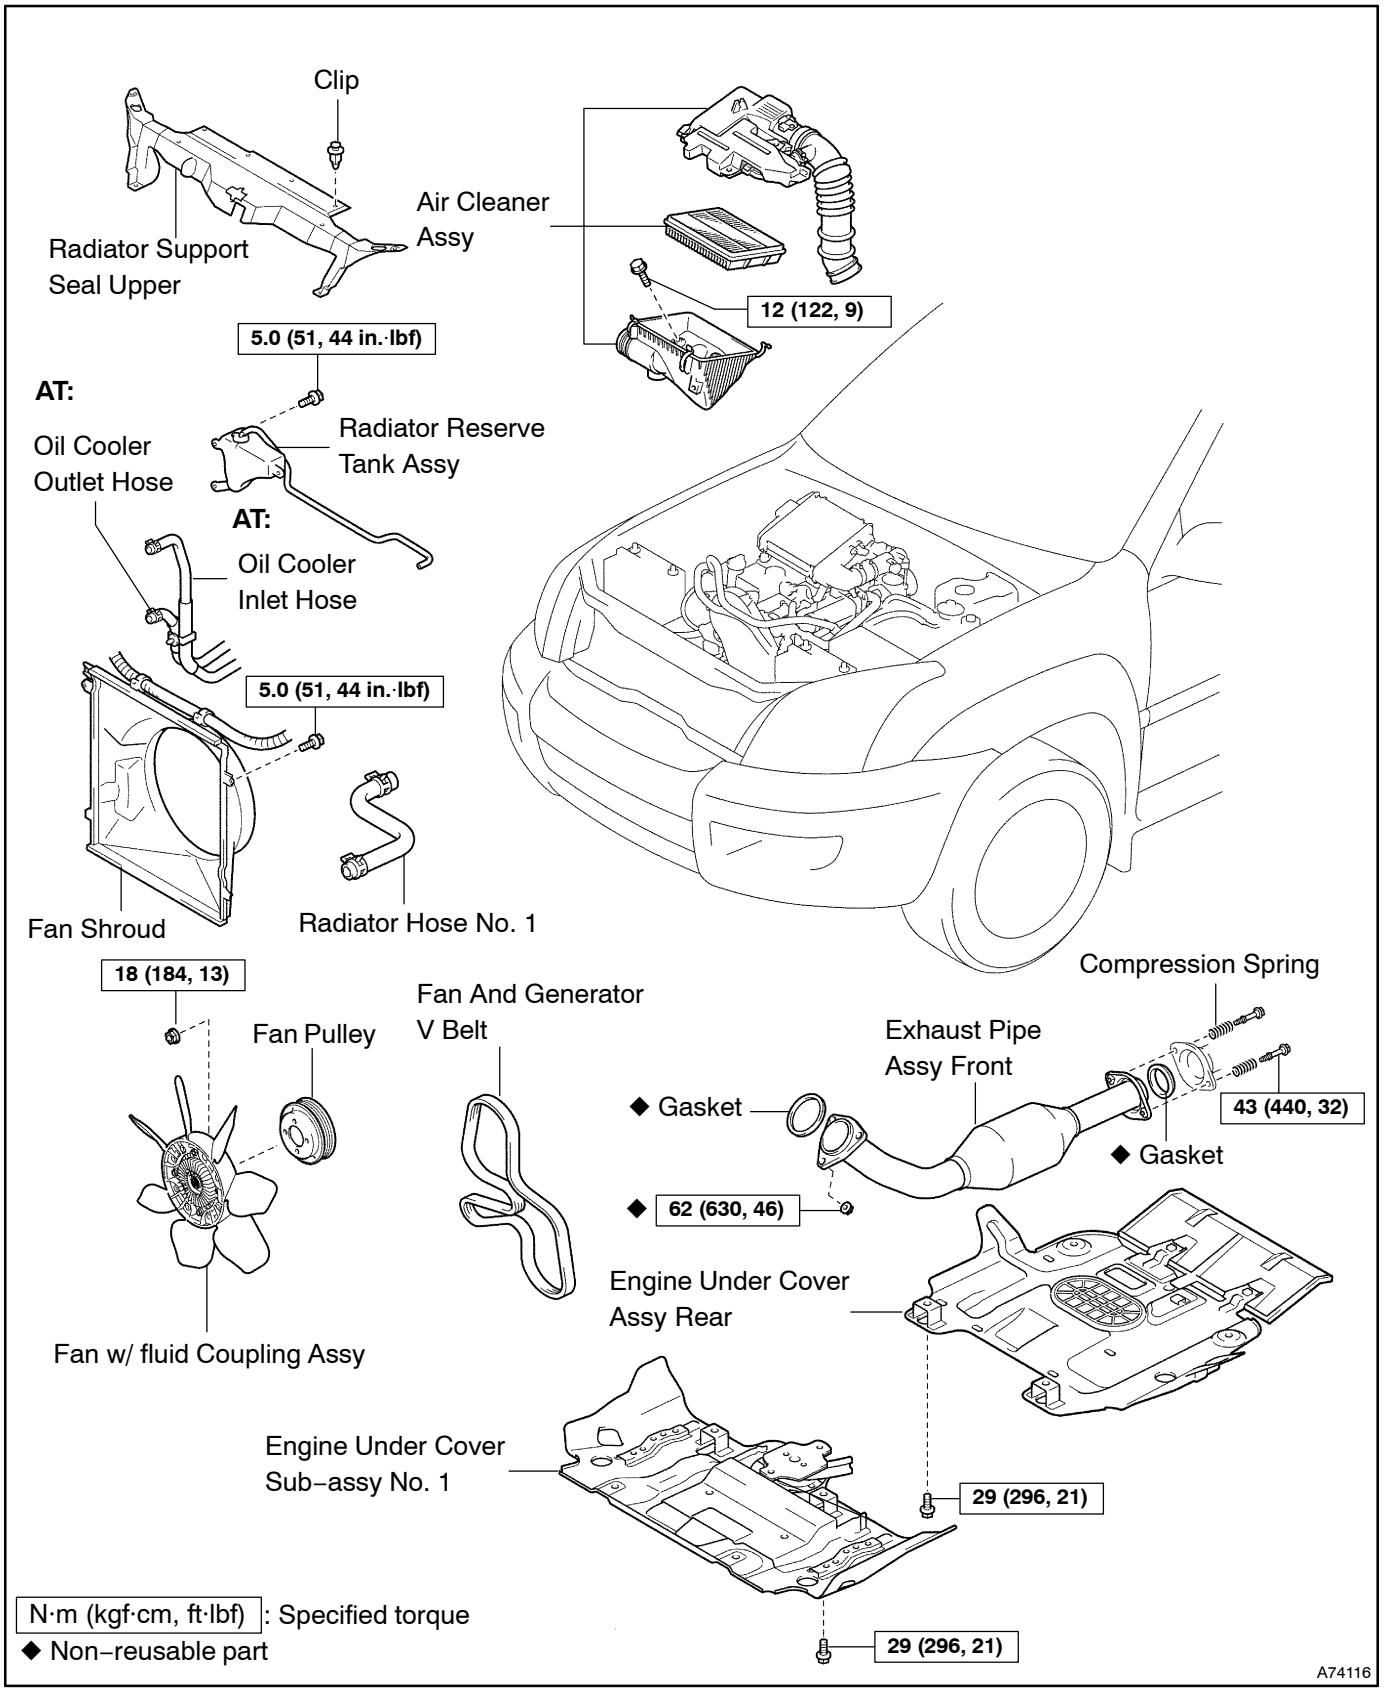


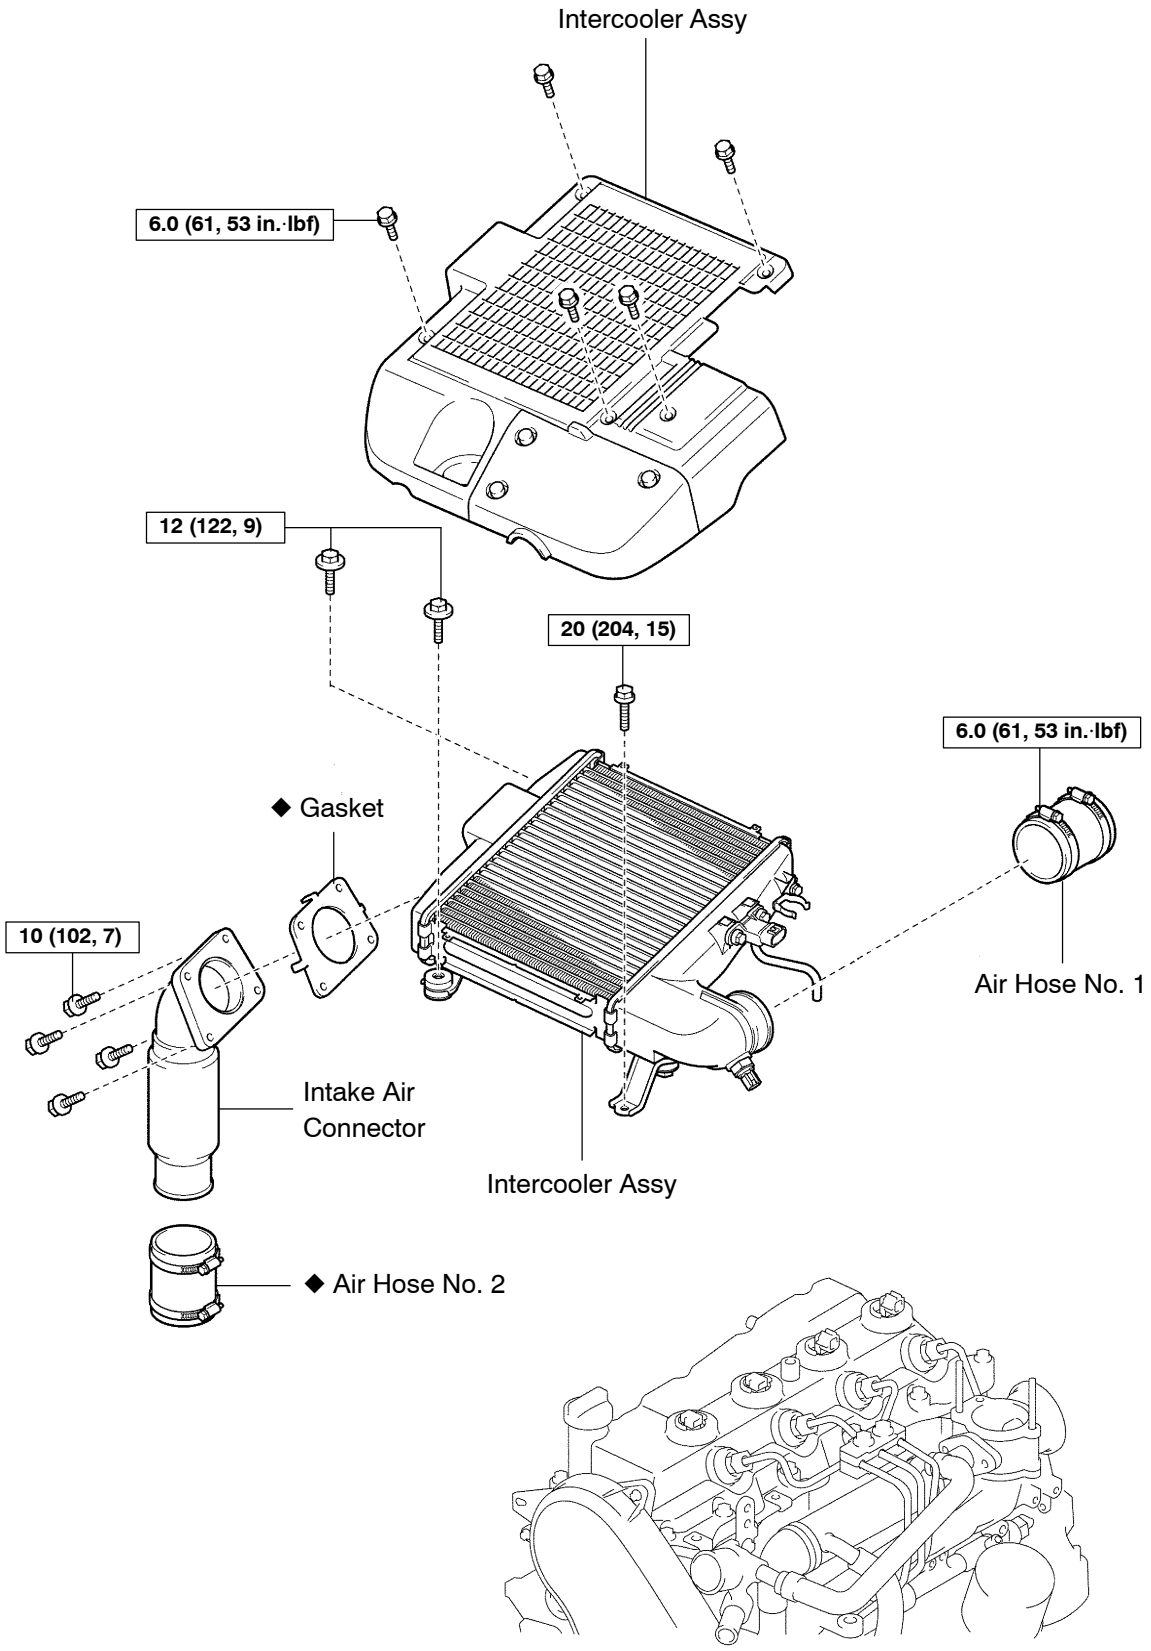


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part


A74117

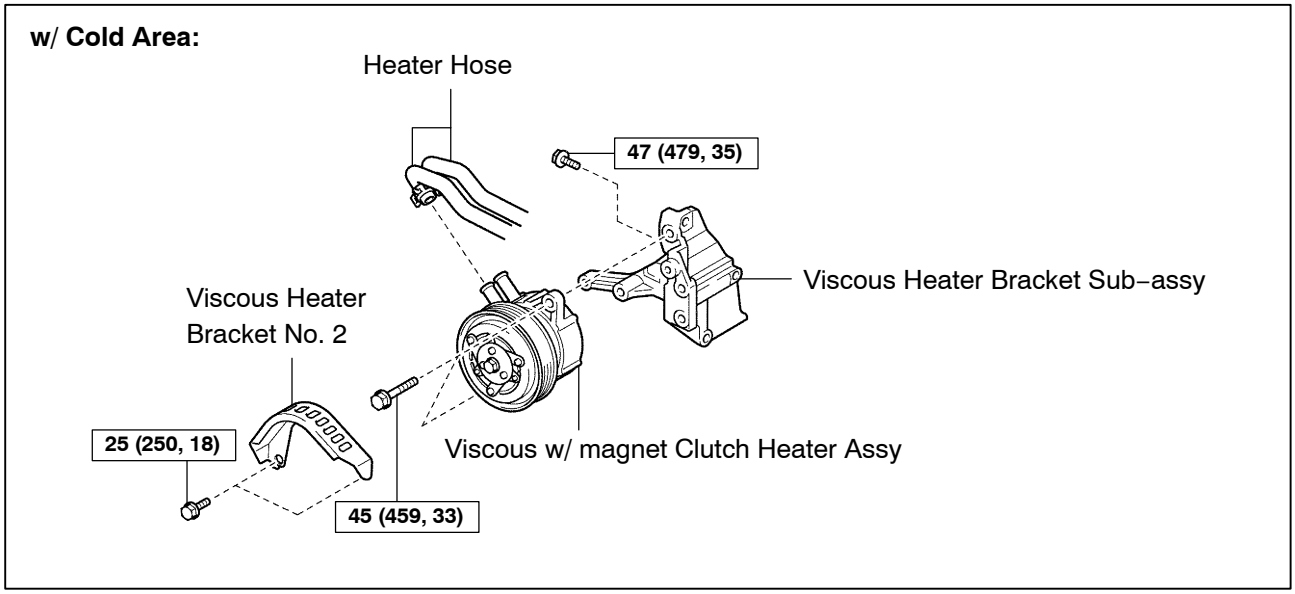


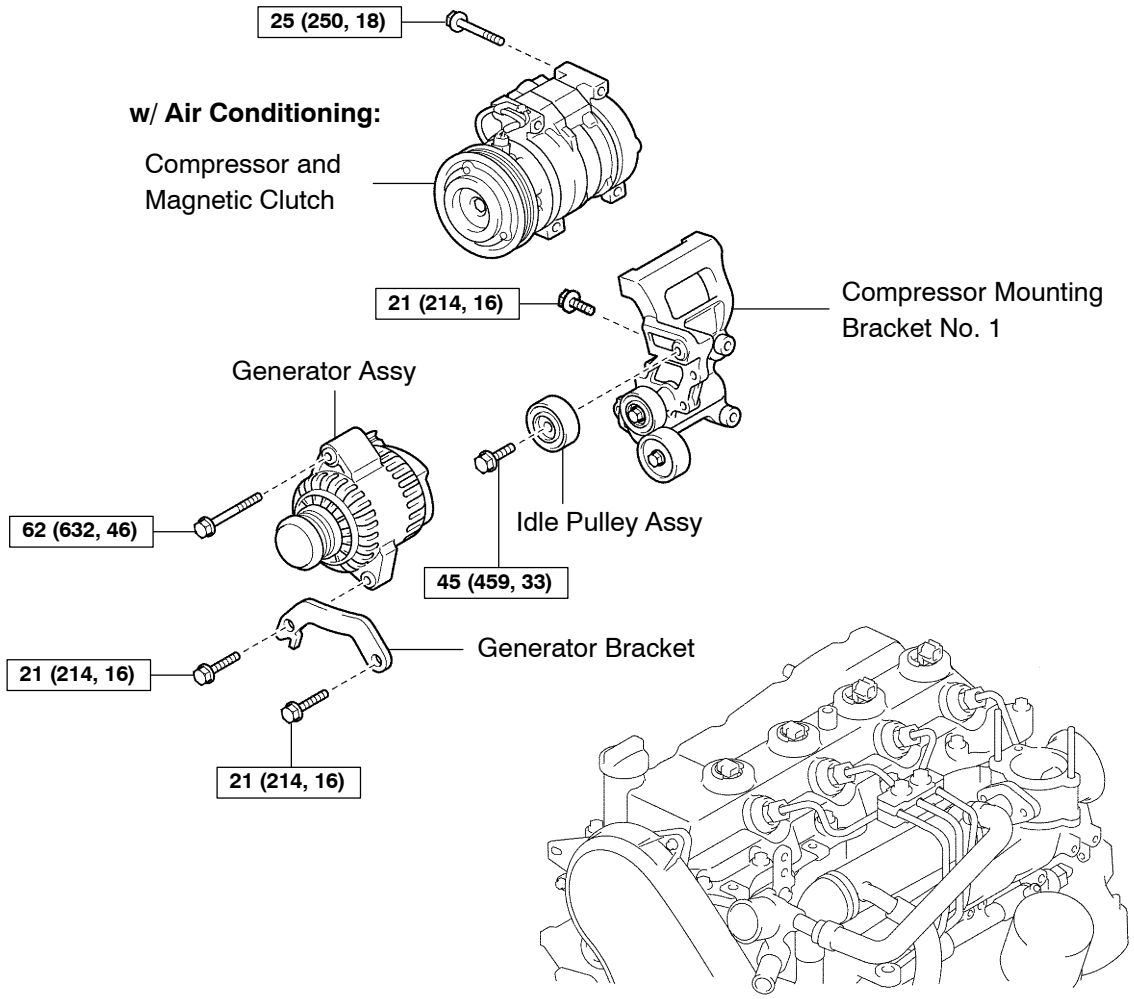

N·m (kgf·cm, ft·lbf) : Specified torque

A74118

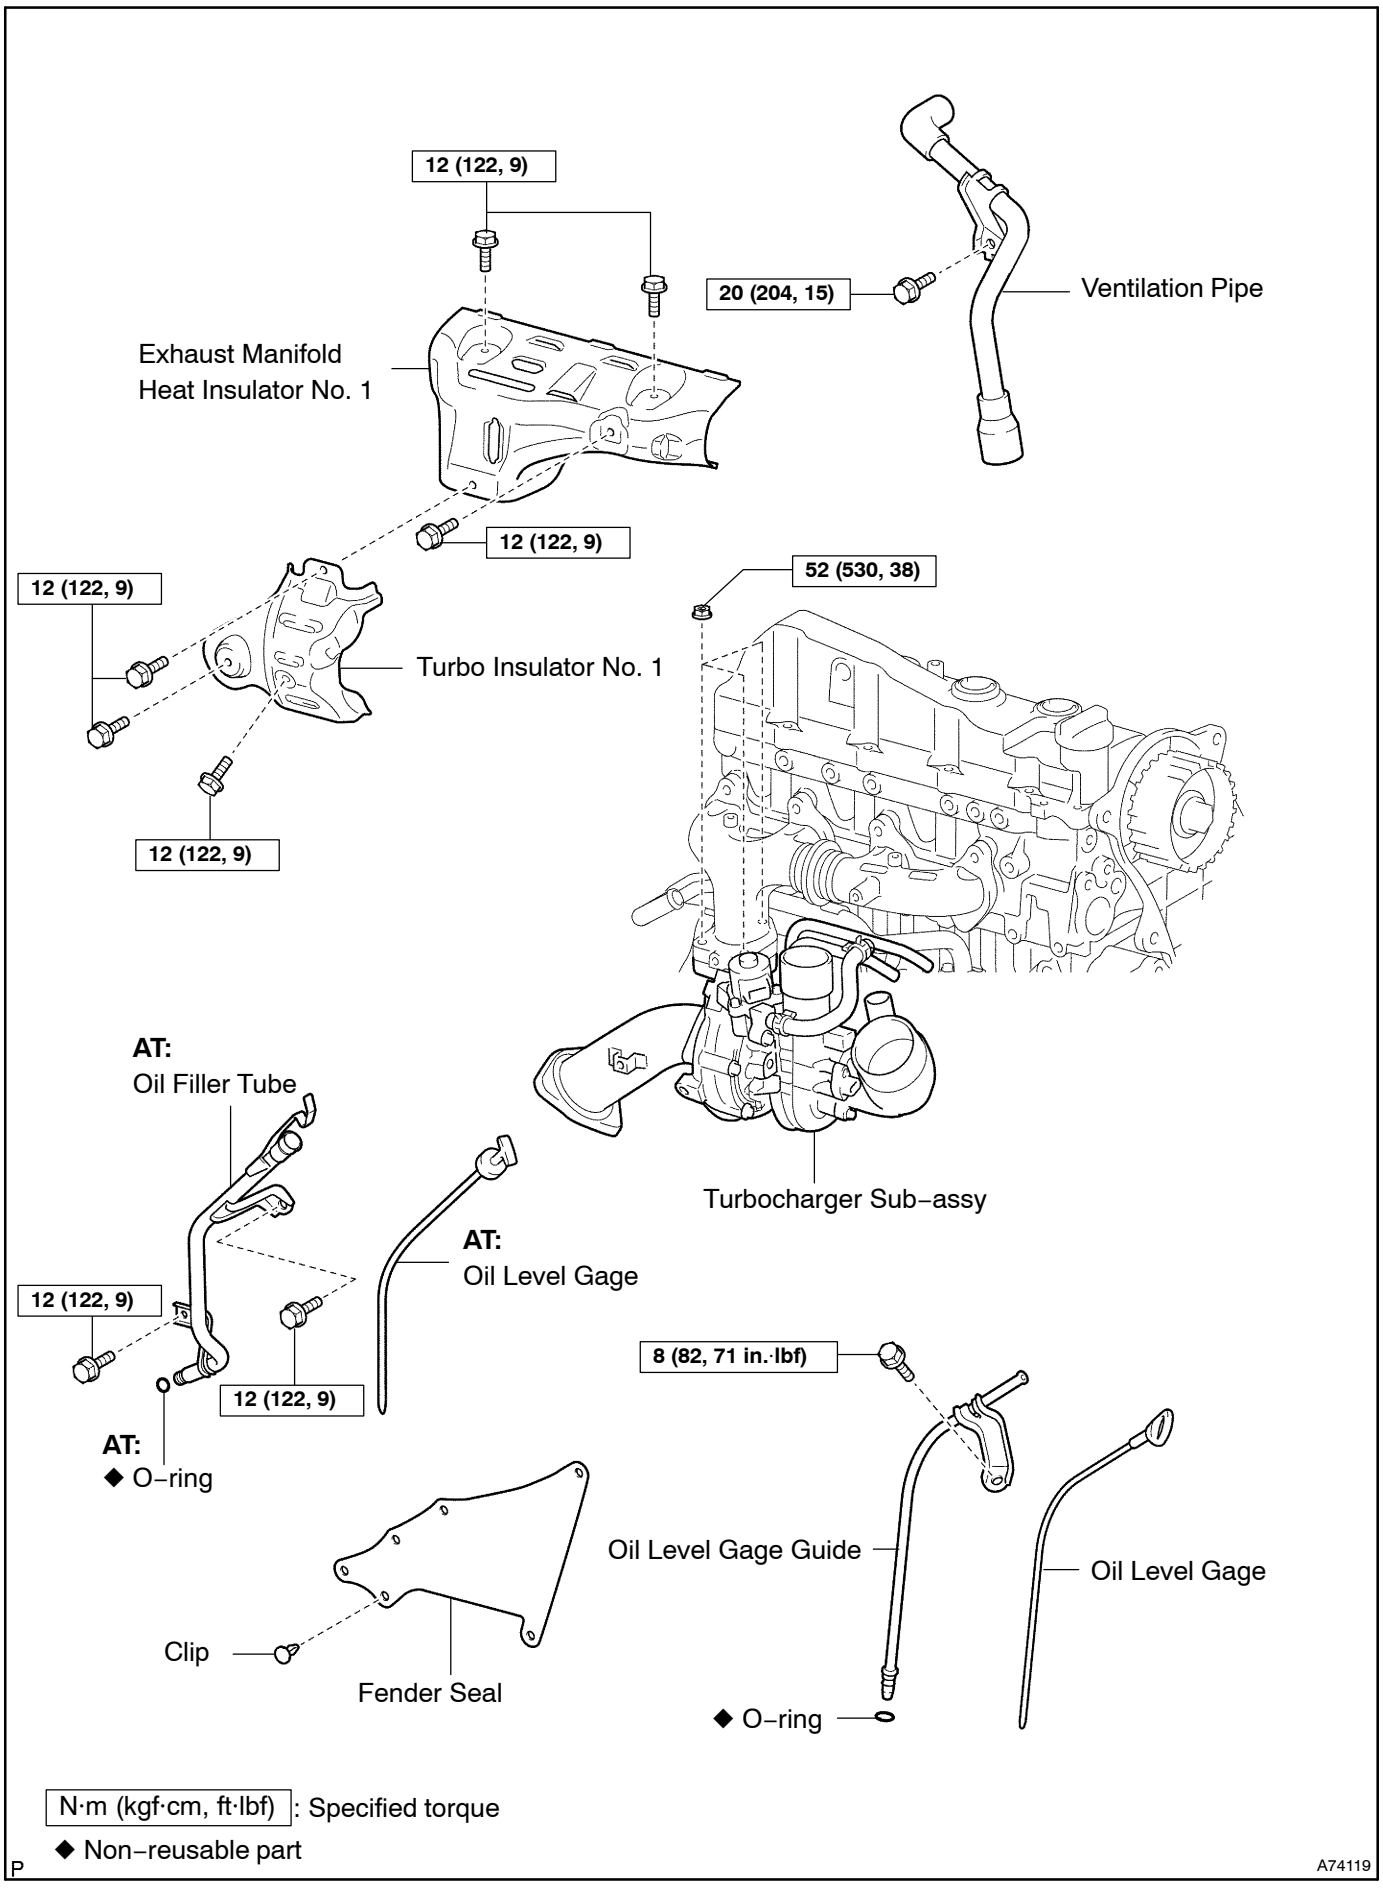
12 (122, 9)
20 (204, 15)
Ventilation Pipe
Exhaust Manifold
Heat Insulator No. 1
12 (122, 9)
12 (122, 9)
52 (530, 38)
Turbo Insulator No. 1
12 (122, 9)
Turbocharger Sub–assy
AT:
Oil Filler Tube
AT:
Oil Level Gage
12 (122, 9)
12 (122, 9)
AT:
◆ O–ring
8 (82, 71 in.·lbf)
Oil Level Gage Guide
Oil Level Gage
Clip
Fender Seal
◆ O–ring
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
P
A74119

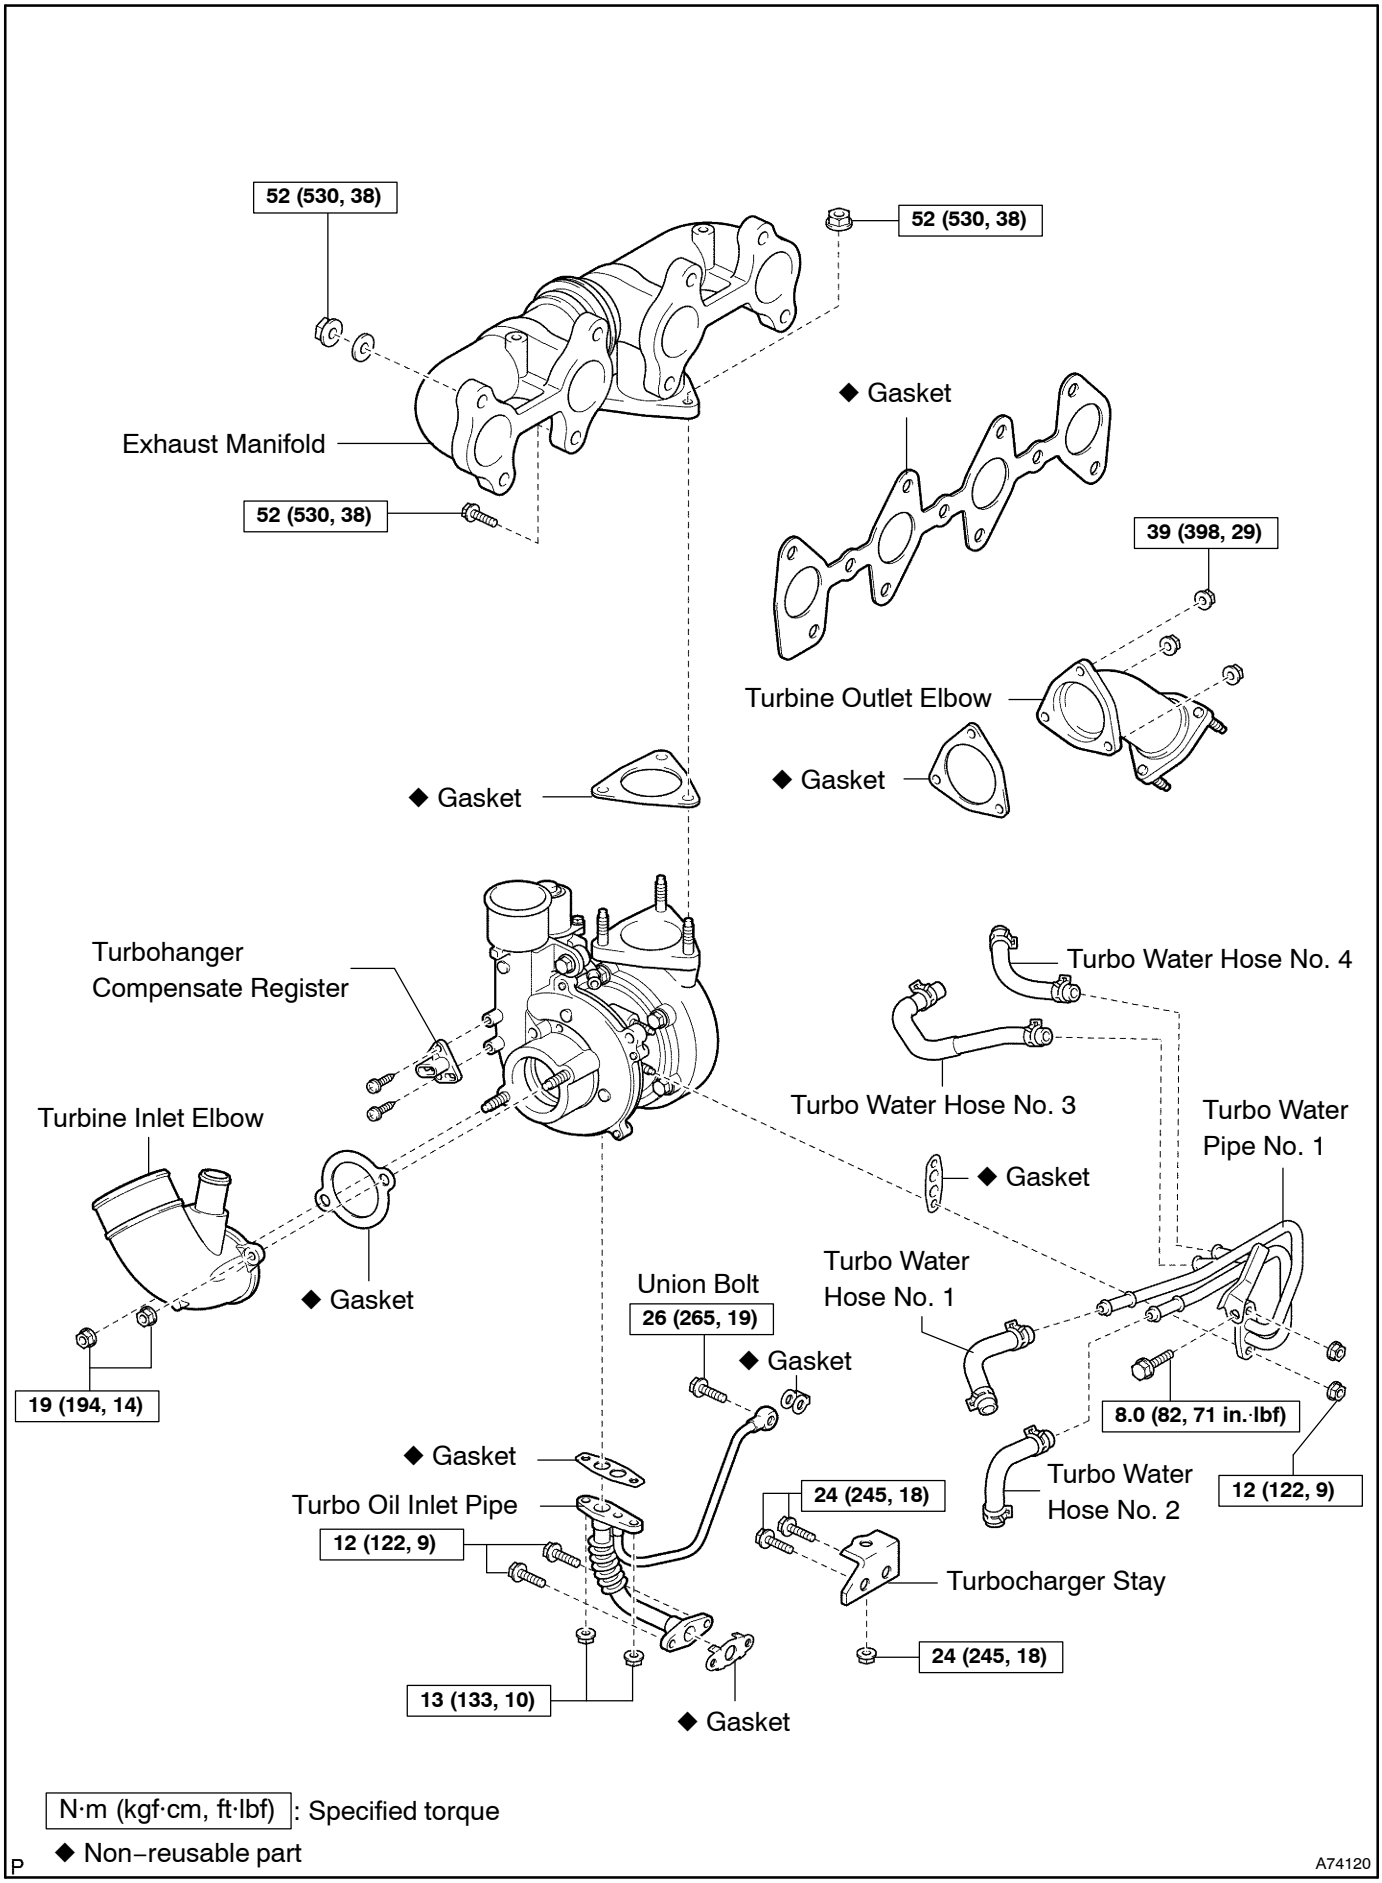
52 (530, 38)
52 (530, 38)
Exhaust Manifold
52 (530, 38)
◆ Gasket
39 (398, 29)
Turbine Outlet Elbow
◆ Gasket
◆ Gasket
Turbohanger
Compensate Register
Turbo Water Hose No. 4
Turbo Water Hose No. 3
Turbine Inlet Elbow
Turbo Water
Pipe No. 1
◆ Gasket
◆ Gasket
Union Bolt
26 (265, 19)
Turbo Water
Hose No. 1
◆ Gasket
19 (194, 14)
8.0 (82, 71 in.·lbf)
◆ Gasket
Turbo Water
Hose No. 2
12 (122, 9)
24 (245, 18)
Turbo Oil Inlet Pipe
12 (122, 9)
Turbocharger Stay
24 (245, 18)
13 (133, 10)
◆ Gasket
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
P
A74120