
SPARK PLUG TUBE GASKET (3RZ–FE)

1411Y–01


REPLACEMENT

1. SEPARATE ACCELERATOR CONTROL CABLE ASSY
2. SEPARATE THROTTLE CABLE ASSY (A/T TRANSAXLE)
3. REMOVE AIR CLEANER CAP SUB–ASSY (See page 10–10)
4. REMOVE INTAKE AIR CONNECTOR SUB–ASSY (See page 10–10)
5. DISCONNECT VENTILATION HOSE (See page 14–9)
6. DISCONNECT VENTILATION HOSE NO.2 (See page 14–9)
7. REMOVE COIL AND SPARK CORD SET W/RESISTIVE (LEADED GASOLINE) (See page 14–9)
8. REMOVE IGNITION COIL NO.1 (UNLEADED GASOLINE) (See page 14–9)
9. REMOVE CYLINDER HEAD COVER SUB–ASSY (See page 14–9)

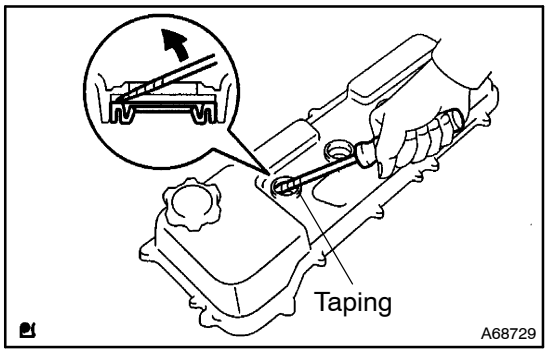

10. REMOVE SPARK PLUG TUBE GASKET

(a) Using a screwdriver with taping its tip, pry out the spark plug tube gasket.

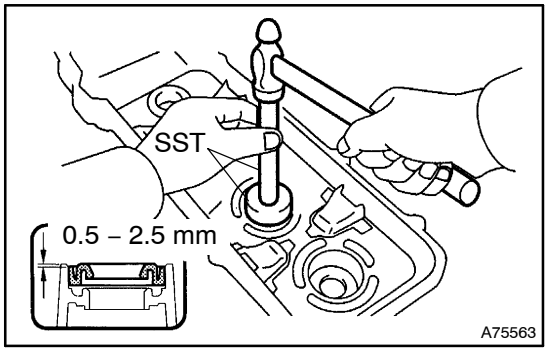

11. INSTALL SPARK PLUG TUBE GASKET

(a) Using SST, tap in the spark plug tube gasket as shown in the illustration.

SST 09950–60010 (09951–00480), 09950–70010 (09951–07150)

(b) Apply a light coat of MP grease to the gasket lip.

12. INSTALL CYLINDER HEAD COVER SUB–ASSY (See page 14–9)
13. INSTALL COIL AND SPARK CORD SET W/RESISTIVE (LEADED GASOLINE) (See page 14–9)
14. INSTALL IGNITION COIL NO.1 (UNLEADED GASOLINE) (See page 14–9)
15. CONNECT VENTILATION HOSE NO.2
16. CONNECT VENTILATION HOSE
17. INSTALL INTAKE AIR CONNECTOR SUB–ASSY (See page 10–10)
18. INSTALL AIR CLEANER CAP SUB–ASSY
19. INSTALL THROTTLE CABLE ASSY (A/T TRANSAXLE)
20. INSTALL ACCELERATOR CONTROL CABLE ASSY