# FAN AND GENERATOR V BELT (1KD–FTV)

1411I–01

## REPLACEMENT

**1. REMOVE ENGINE UNDER COVER SUB–ASSY NO.1**

(a) Remove the 4 bolts and engine under cover No. 1.

**2. REMOVE FAN AND GENERATOR V BELT**


(a) Remove the V belt by rotating the tensioner pulley in clockwise direction to loosen its tension with pulley set bolt of the tensioner.


**3. INSTALL FAN AND GENERATOR V BELT**

(a) Install the V belt with a condition being rotated the tensioner pulley in clockwise direction with the pulley set bolt of the tensioner.

**NOTICE:**

**Make sure that the V belt is set properly at each pulley.**

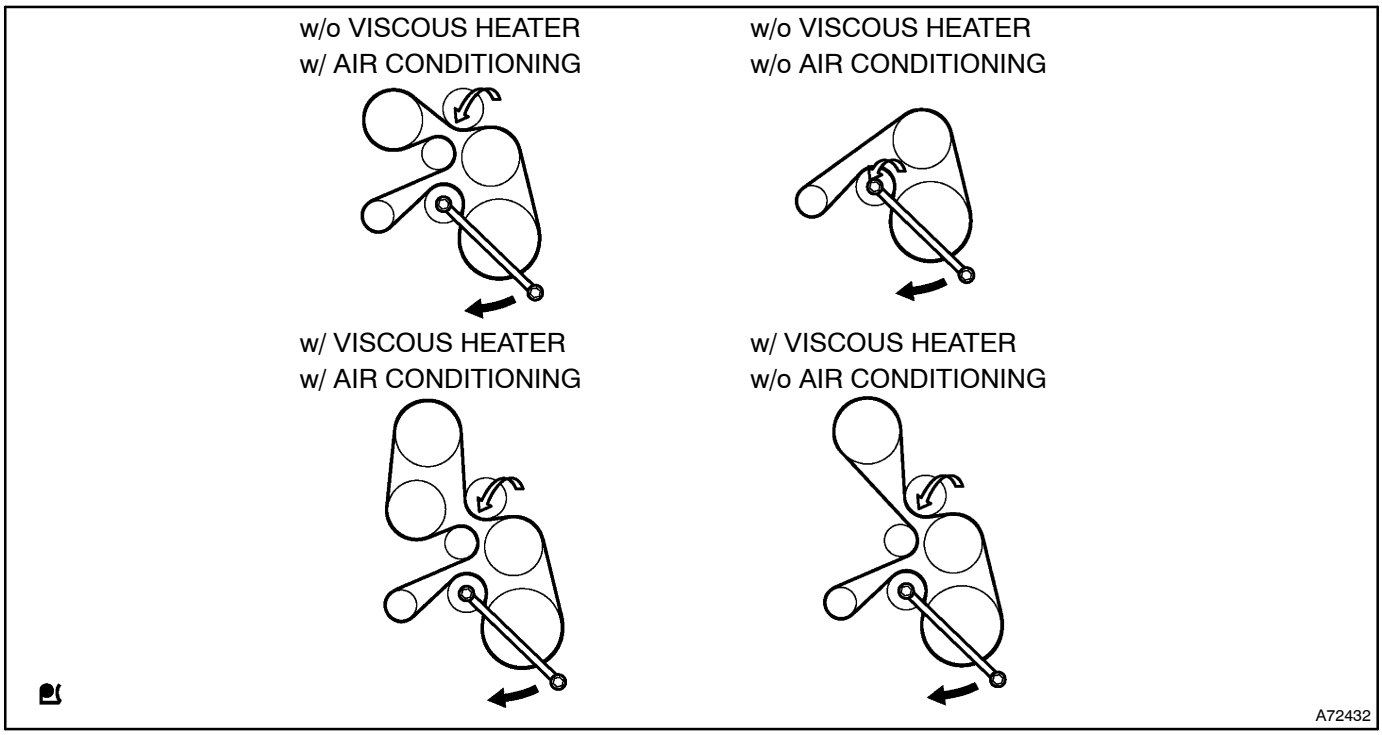

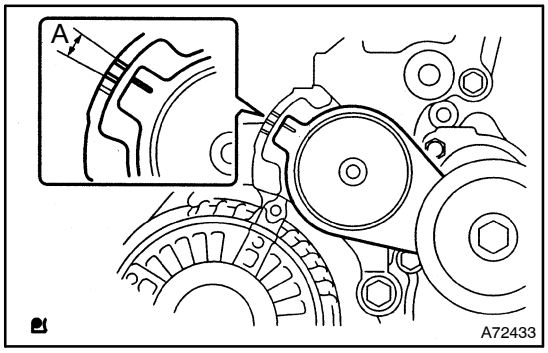
(b) Make sure that the indicator mark of the tensioner is within Range A.

**4. INSTALL ENGINE UNDER COVER SUB–ASSY NO.1**

(a) Install the engine under cover No. 1 with the 4 bolts.

**Torque: 29 N·m (296 kgf·cm, 21 ft·lbf)**