
STARTER ASSY (3RZ–FE)

REPLACEMENT

190HT–01

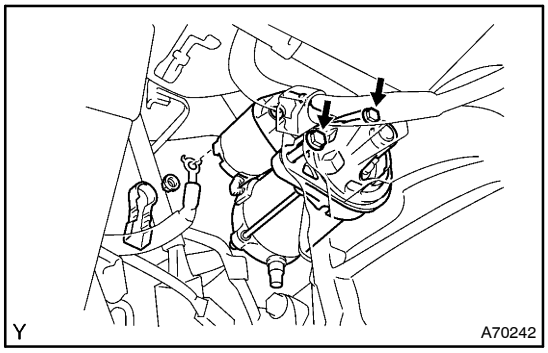

1. REMOVE STARTER ASSY

(a) Disconnect the starter connector.
(b) Remove the terminal cap.
(c) Remove the nut, and disconnect the engine wire No. 2.
(d) Remove the 2 bolts and starter.

2. INSTALL STARTER ASSY

(a) Install the starter with the 2 bolts.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
(b) Install the engine wire No. 2 with the nut.
Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)
(c) Install the terminal cap.
(d) Connect the starter connector.