HEIGHT CONTROL DRYER ASSY


25020–01

REPLACEMENT

HINT:

COMPONENTS: See page 25–8


1. **REMOVE REAR DISC WHEEL**
2. **REMOVE QUARTER PANEL MUDGUARD REAR LH**
3. **REMOVE FUEL TANK FILLER PIPE PROTECTOR (See page 25–11)**
4. **REMOVE HEIGHT CONTROL COMPRESSOR COVER (See page 25–11)**
5. **REMOVE HEIGHT CONTROL FILTER (See page 25–11)**
6. **DISCONNECT HEIGHT CONTROL TUBE NO.2 (See page 25–11)**

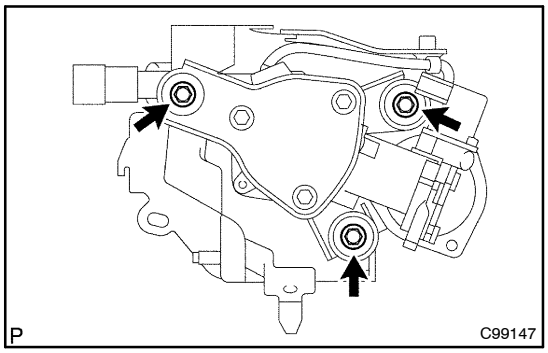

7. **REMOVE HEIGHT CONTROL DRYER ASSY**

(a) Disconnect the connector.

(b) Remove the 3 bolts.

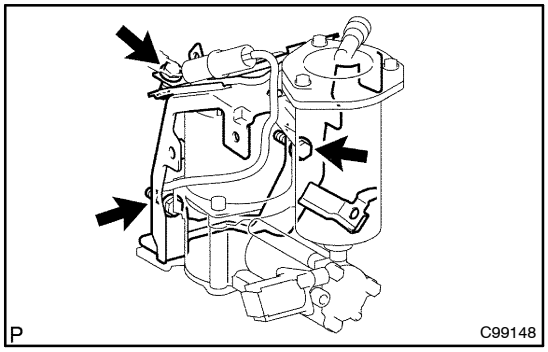

(c) Remove the 3 bolts, the height control compressor and the dryer with the bracket.

(d) Remove the bolt and the dryer.

(e) Remove the O–ring.

8. **INSTALL HEIGHT CONTROL DRYER ASSY**

(a) Install the bolt, the dryer and a new O–ring.
Torque: 6.4 N·m (65 kgf·cm, 57 in.·lbf)

(b) Assemble the height control compressor, the dryer and the bracket as a unit to the vehicle, and tighten the 3 bolts to fix the bracket to the frame.
Torque: 29 N·m (300 kgf·cm, 21 ft·lbf)

(c) Install the height control compressor assy to the bracket with the 3 bolts.
Torque: 5.9 N·m (60 kgf·cm, 52 in.·lbf)

(d) Connect the connector.

9. **CONNECT HEIGHT CONTROL TUBE NO.2 (See page 25–11)**
10. **INSTALL HEIGHT CONTROL FILTER (See page 25–11)**
11. **INSTALL HEIGHT CONTROL COMPRESSOR COVER (See page 25–11)**
12. **INSPECT AIR LEAK (See page 25–3)**
13. **INSTALL FUEL TANK FILLER PIPE PROTECTOR (See page 25–11)**
14. **INSTALL QUARTER PANEL MUDGUARD REAR LH**

15. INSTALL REAR DISC WHEEL
Torque: 112 N·m (1,140 kgf·cm, 83 ft·lbf)