HEIGHT CONTROL SENSOR SUB–ASSY REAR LH


25024–01

REPLACEMENT

HINT:

COMPONENTS: See page 25–8

1. REMOVE REAR DISC WHEEL

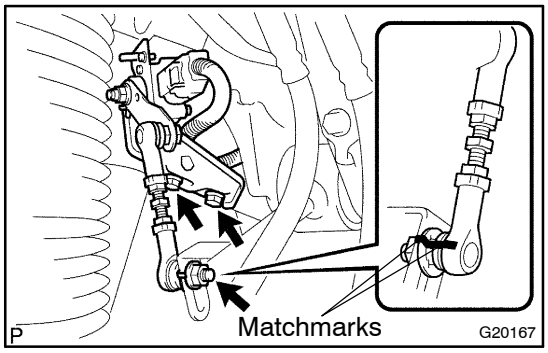

2. REMOVE HEIGHT CONTROL SENSOR SUB–ASSY REAR LH

(a) Disconnect the connector from the height control sensor.
(b) Place matchmarks on the link and the bracket.
(c) Remove the nut and disconnect the sensor link.
(d) Remove the 2 bolts and height control sensor.

3. INSTALL HEIGHT CONTROL SENSOR SUB–ASSY REAR LH

(a) Install the height control sensor with the 2 bolts.
Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)
(b) Align the matchmarks on the link and the bracket.
(c) Connect the sensor link with the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
(d) Connect the connector to the height control sensor.

4. INSTALL REAR DISC WHEEL
Torque: 112 N·m (1,140 kgf·cm, 83 ft·lbf)

5. MEASURE VEHICLE HEIGHT (See page 26–6)

6. ADJUST VEHICLE HEIGHT (See page 25–3)