ACCELERATION SENSOR (LHD)


25025–01

REPLACEMENT

HINT:

LOCATION:See page 05–591

1. **REMOVE FRONT DOOR SCUFF PLATE RH (See page 71–13)**
2. **REMOVE COWL SIDE TRIM BOARD RH (See page 71–13)**
3. **REMOVE INSTRUMENT PANEL UNDER COVER SUB–ASSY NO.1 (See page 71–13)**
4. **REMOVE INSTRUMENT PANEL FINISH PLATE (See page 71–13)**
5. **REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH (See page 71–13)**
6. **REMOVE INSTRUMENT PANEL LOWER LH (See page 71–13)**

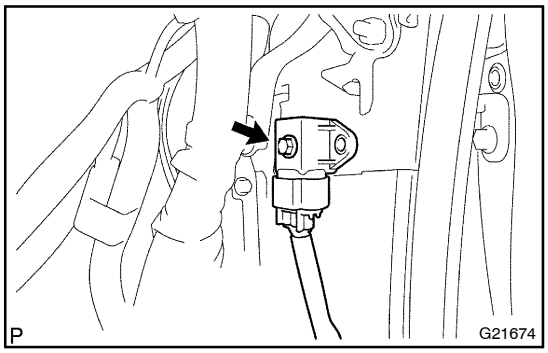

7. **REMOVE ACCELERATION SENSOR**

(a) Disconnect the connector from the acceleration sensor.

(b) Remove a bolt and the acceleration sensor.

8. **INSTALL ACCELERATION SENSOR**

(a) Install the acceleration sensor with a bolt.

Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

(b) Connect the connector to the acceleration sensor.

9. **INSTALL INSTRUMENT PANEL LOWER LH**
10. **INSTALL INSTRUMENT PANEL FINISH LOWER PANEL RH**
11. **INSTALL INSTRUMENT PANEL FINISH PLATE**
12. **INSTALL INSTRUMENT PANEL UNDER COVER SUB–ASSY NO.1**
13. **INSTALL COWL SIDE TRIM BOARD RH**
14. **INSTALL FRONT DOOR SCUFF PLATE RH**