ACCELERATION SENSOR (RHD)


25026–01

REPLACEMENT

HINT:


LOCATION:See page 05–591

1. **REMOVE FRONT DOOR SCUFF PLATE RH (See page 71–13)**
2. **REMOVE COWL SIDE TRIM BOARD RH (See page 71–13)**
3. **REMOVE INSTRUMENT PANEL UNDER COVER NO.2 (See page 71–13)**
4. **REMOVE GLOVE COMPARTMENT DOOR SUB–ASSY (See page 71–13)**
5. **REMOVE INSTRUMENT PANEL ORNAMENT (See page 71–13)**
6. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71–13)**

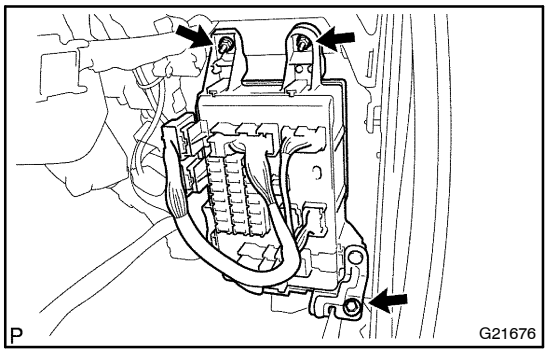

7. **REMOVE ACCELERATION SENSOR**

(a) Remove the 2 nuts and a bolt, disconnect the junction block.

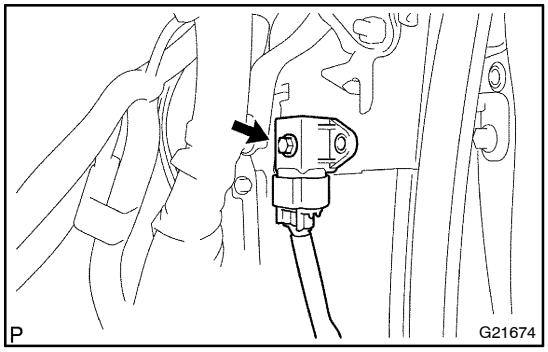

(b) Disconnect the connector from the acceleration sensor.

(c) Remove a bolt and the acceleration sensor.

8. **INSTALL ACCELERATION SENSOR**

(a) Install the acceleration sensor with a bolt.

Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

(b) Connect the connector to the acceleration sensor.

(c) Install the junction block with the 2 nuts and a bolt.

Torque: 8.4 N·m (86 kgf·cm, 74 in.·lbf)

9. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER NO.2**
10. **INSTALL INSTRUMENT PANEL ORNAMENT**
11. **INSTALL GLOVE COMPARTMENT DOOR SUB–ASSY**
12. **INSTALL INSTRUMENT PANEL UNDER COVER NO.2**
13. **INSTALL COWL SIDE TRIM BOARD RH**
14. **INSTALL FRONT DOOR SCUFF PLATE RH**