ACCELERATION SENSOR ASSY


25027–01

REPLACEMENT

HINT:

LOCATION: See page 05–591

1. **REMOVE REAR NO. 2 SEAT ASSY LH (See page 72–46)**
2. **REMOVE QUARTER SCUFF PLATE INSIDE LH (See page 76–58)**
3. **REMOVE REAR DOOR SCUFF PLATE LH (See page 76–58)**
4. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH (See page 76–58)**
5. **REMOVE BACK DOOR WEATHERSTRIP (See page 76–58)**
6. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (See page 76–58)**
7. **REMOVE QUARTER INSIDE TRIM BOARD LH (See page 76–58)**

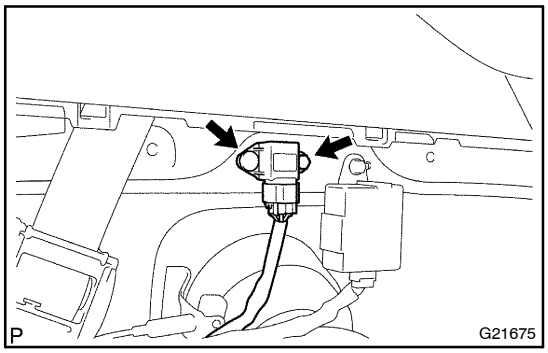

8. **REMOVE ACCELERATION SENSOR ASSY**

(a) Disconnect the connector.

(b) Remove a clip, bolt and the acceleration sensor assy.

9. **INSTALL ACCELERATION SENSOR ASSY**

(a) Install the acceleration sensor assy with a clip and a bolt.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

(b) Connect the connector.

10. **INSTALL REAR NO. 2 SEAT ASSY LH (See page 72–46)**