
270B4–02

REPLACEMENT


1. REMOVE REAR WHEEL

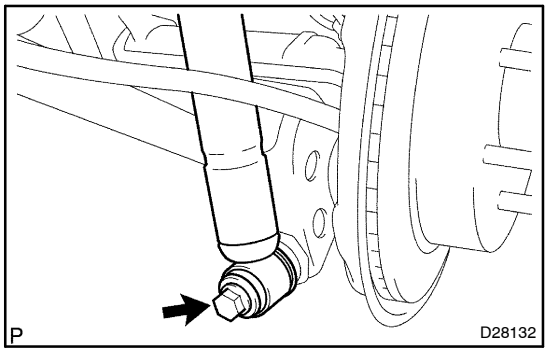

2. SEPARATE SHOCK ABSORBER ASSY REAR LH

(a) Support the rear axle housing.


(b) Remove the bolt, separate the shock absorber assy rear LH from the rear axle.

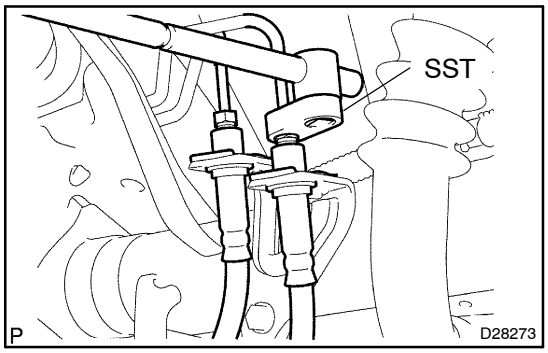

3. DISCONNECT BRAKE TUBE FLEXIBLE HOSE

(a) w/ ABS:
Using SST, disconnect the 2 rear brake tubes from the each of the flexible hoses.
Use a container to catch brake fluid as it drains out.
SST 09023–00100

(b) w/ ABS:
Remove the 2 clips and disconnect the 2 flexible hoses.

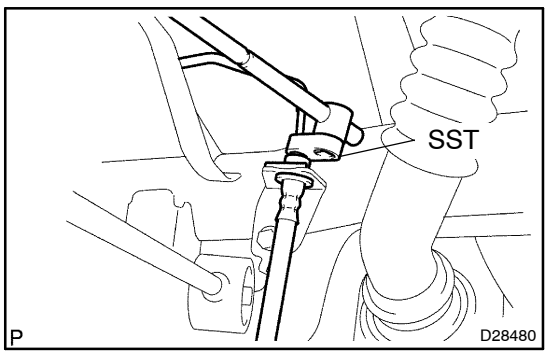

(c) w/o ABS:
Using SST, disconnect the rear brake tube from the each flexible hose.
Use a container to catch brake fluid as it drains out.
SST 09023–00100

(d) w/o ABS:
Remove the clip and disconnect the flexible hose.


4. REMOVE COIL SPRING REAR LH

(a) Begin to lower the rear axle housing.

NOTICE:

Be careful not to snap the brake line and parking brake cable.


(b) While lowering the rear axle housing, remove the coil spring rear LH.

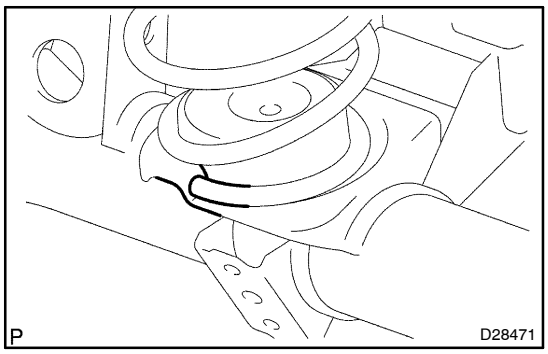

5. INSTALL COIL SPRING REAR LH

(a) Install the coil spring rear LH to the rear axle housing.


HINT:
Fit the lower end of the coil spring into the gap of the spring lower seat.

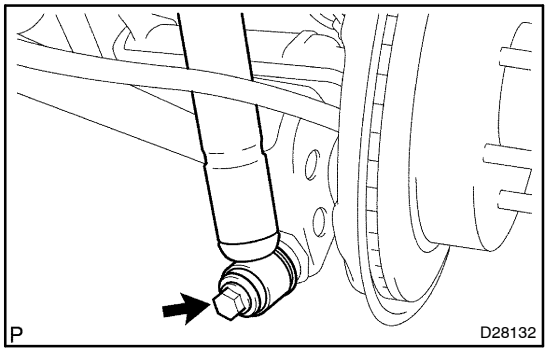

6. CONNECT SHOCK ABSORBER ASSY REAR LH


(a) Install the shock absorber, temporarily tighten the bolt.

7. STABILIZE SUSPENSION (See page 27–4)

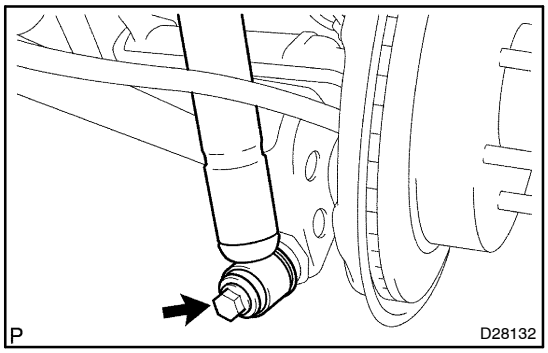


8. FULLY TIGHTEN SHOCK ABSORBER ASSY REAR LH

(a) Fully tighten the bolt.
Torque: 98 N·m (1,000 kgf·cm, 72 ft·lbf)

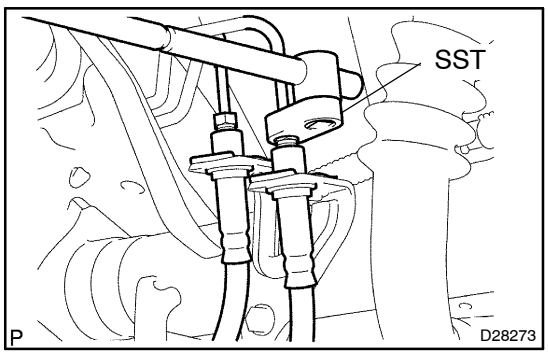

9. CONNECT BRAKE TUBE FLEXIBLE HOSE

(a) w/ ABS:
Install the 2 clips with the 2 flexible hoses.

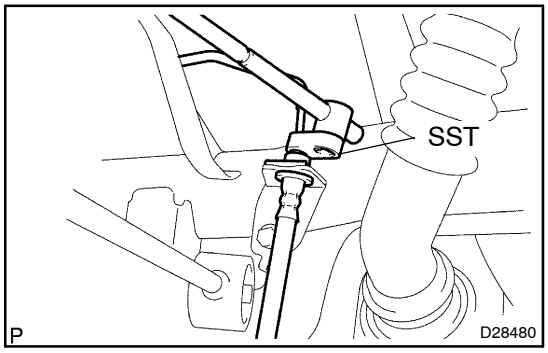

(b) w/o ABS:
Install the clip with the flexible hose.

(c) Using SST, connect the break tubes to the flexible hose.
Torque: 15.2 N·m (155 kgf·cm, 11 ft·lbf)
SST 09023–00100

10. **FILL RESERVOIR WITH BRAKE FLUID**
11. **BLEED BRAKE LINE (W/O VSC) (See page 32–4)**
12. **BLEED BRAKE LINE (W/ VSC) (See page 32–6)**
13. **CHECK FLUID LEVEL IN RESERVOIR**
14. **CHECK BRAKE FLUID LEAKAGE**
15. **INSTALL REAR WHEEL**
    Torque: 112 N·m (1,137 kgf·cm, 82 ft·lbf)