
270B8–01

REPLACEMENT

1. REMOVE REAR WHEEL
2. DISCONNECT HEIGHT CONTROL SENSOR LINK SUB–ASSY REAR (W/ AIR SUSPENSION, AIR SUSPENSION SUSPENSION) (See page 25–18)

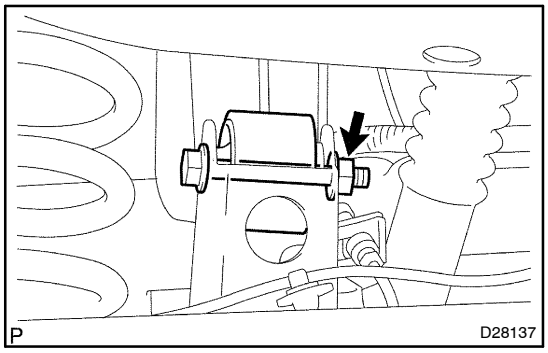


3. REMOVE UPPER CONTROL ARM ASSY

(a) Remove the nut, washer and bolt from rear axle housing.

HINT:


While fixing the bolt, turn and remove the nut.

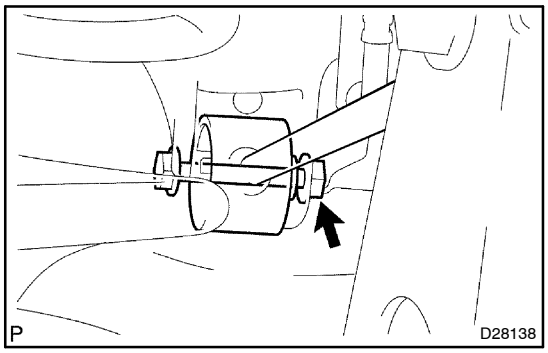

(b) Remove the nut, washer and bolt with the upper control arm assy.

HINT:

While fixing the bolt, turn and remove the nut.

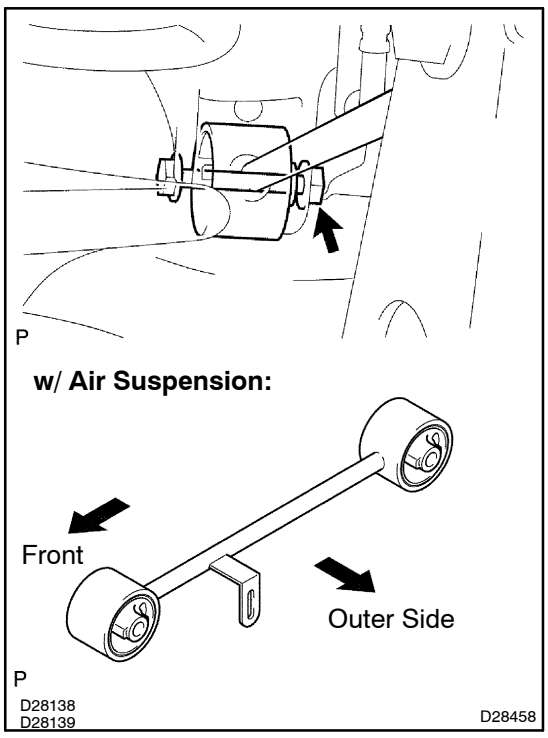


4. INSTALL UPPER CONTROL ARM ASSY

(a) Install the upper control arm assy, temporarily tighten the nut, washer and bolt.

HINT:

In the case of the air suspensions, install them by referring to the illustration.

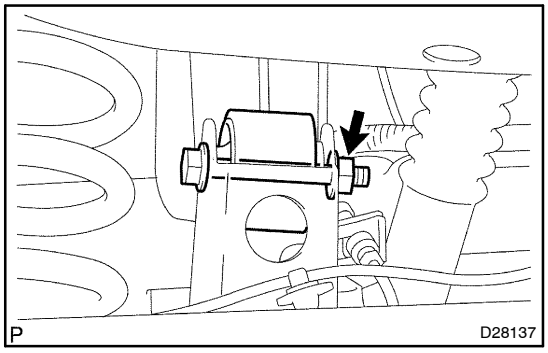


(b) Install the rear axle housing, temporarily tighten the nut, washer and bolt.

5. CONNECT HEIGHT CONTROL SENSOR LINK SUB–ASSY REAR (W/ AIR SUSPENSION)
(See page 25–18)

6. INSTALL REAR WHEEL
Torque: 112 N·m (1,137 kgf·cm, 82 ft·lbf)

7. STABILIZE SUSPENSION (See page 27–4)

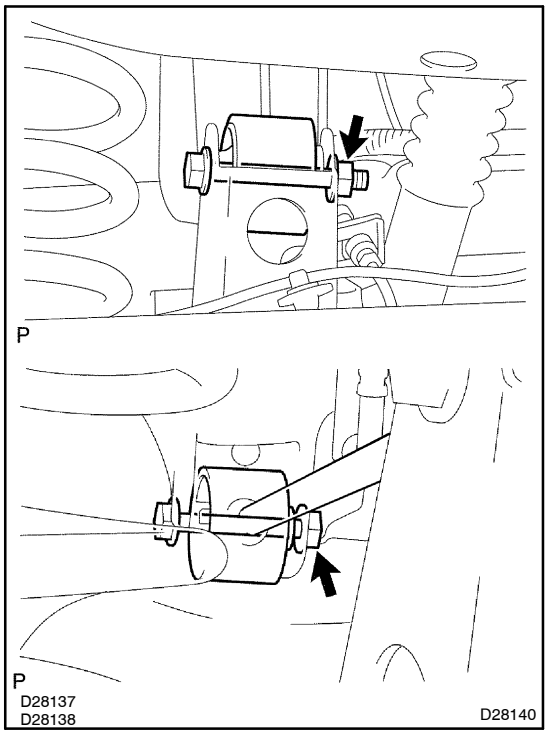

8. FULLY TIGHTEN UPPER CONTROL ARM ASSY

(a) Fully tighten the 2 nuts.
Torque: 80 N·m (816 kgf·cm, 59 ft·lbf)

HINT:
While fixing the bolt, turn and install the nut.