

270BC–01

REPLACEMENT

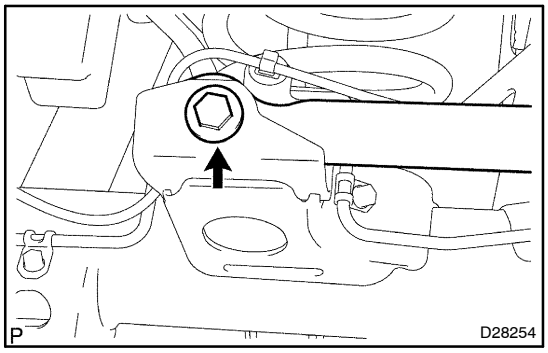

1. REMOVE REAR LATERAL CONTROL ROD ASSY


(a) Remove the bolt.

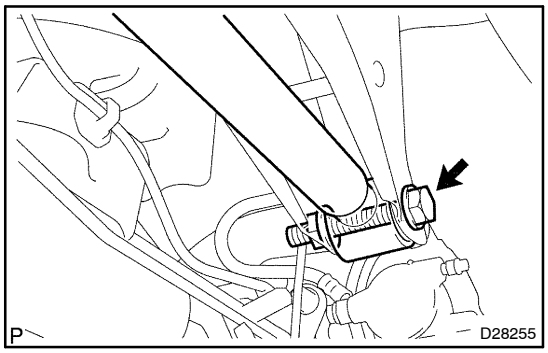

(b) Remove the bolt, nut and lateral control rod assy.


HINT:

While fixing the nut, turn and remove the bolt.

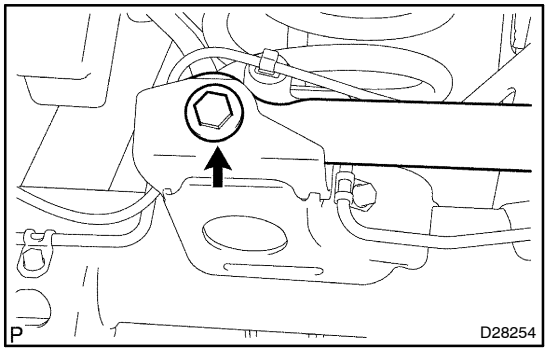


2. INSTALL REAR LATERAL CONTROL ROD ASSY

(a) Install the lateral control rod assy with the bolt.

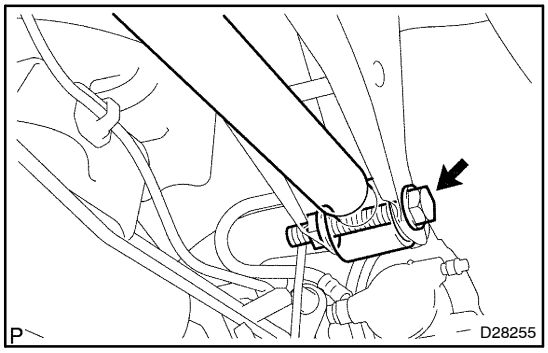

(b) Install the bolt and the nut.

3. STABILIZE SUSPENSION (See page 27–4)

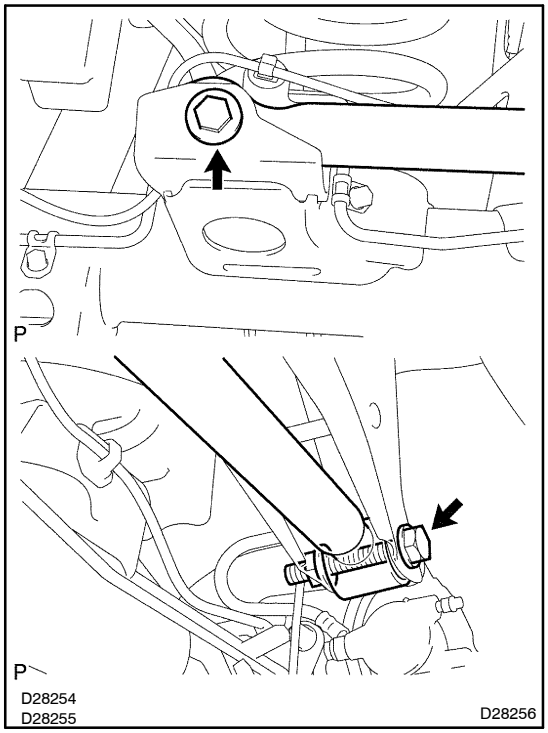

4. FULLY TIGHTEN REAR LATERAL CONTROL ROD ASSY

(a) Fully tighten the 2 bolts.

Torque: 130 N·m (1,326 kgf·cm, 96 ft·lbf)

HINT:

While fixing the nut, turn and install the bolt.