
FRONT AXLE LH HUB BOLT

300FX–01

REPLACEMENT

1. REMOVE FRONT WHEEL

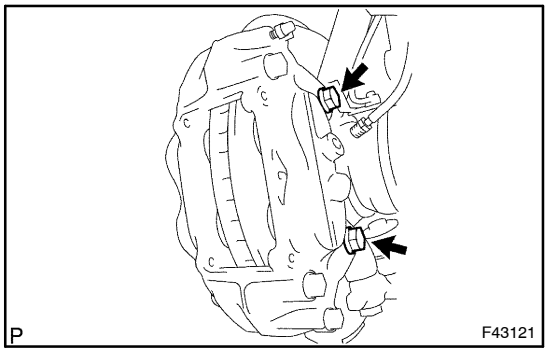


2. REMOVE FRONT DISC BRAKE CALIPER ASSY LH

(a) Using SST, disconnect the brake tube from the disc brake caliper assy.
SST 09023–00100


(b) Remove the 2 bolts and disc brake caliper assy.

3. REMOVE FRONT DISC

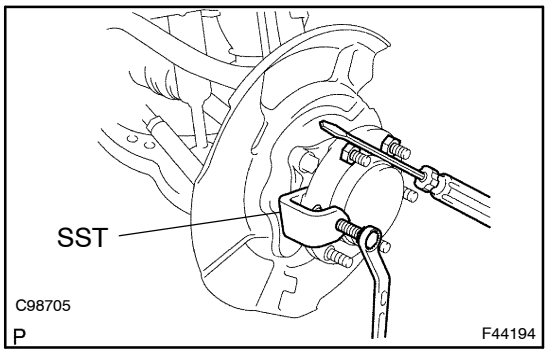

4. REMOVE FRONT AXLE LH HUB BOLT

(a) Using SST and a screwdriver, remove the hub bolt.
SST 09611–12010

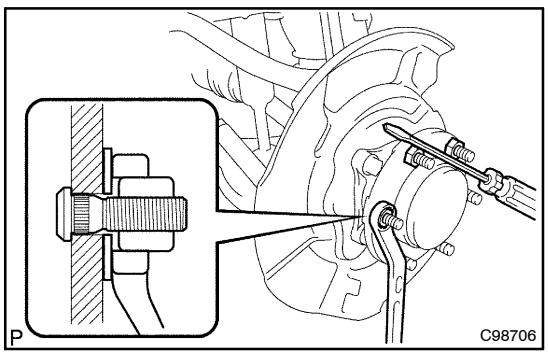


5. INSTALL FRONT AXLE LH HUB BOLT

(a) Pass a new hub bolt through the axle hub.

(b) Pass a washer plate, as shown in the illustration, through the hub bolt, and install the hub bolt as tightening the hub nut.

6. INSTALL FRONT DISC

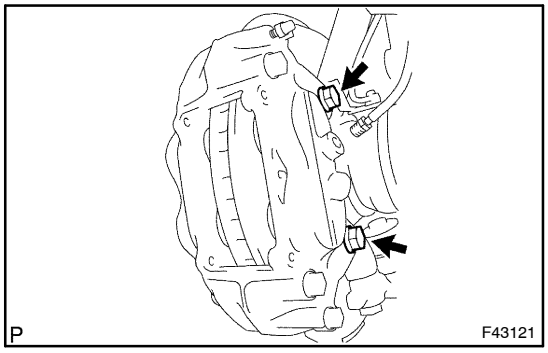

7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH

(a) Install the disc brake caliper assy with the 2 bolts.
Torque: 123 N·m (1,254 kgf·cm, 91 ft·lbf)

(b) Using SST, connect the brake tube to the disc brake caliper assy.
SST 09023–00100
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

8. BLEED BRAKE LINE (See page 32–4 or 32–6)
9. CHECK FLUID LEVEL IN RESERVOIR (See page 32–4 or 32–6)
10. CHECK BRAKE FLUID LEAKAGE (See page 32–4 or 32–6)
11. INSTALL FRONT WHEEL
Torque: 112 N·m (1,142 kgf·cm, 83 ft·lbf)