
REAR AXLE LH HUB BOLT


3007A–02

REPLACEMENT

1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH (See page 32–73)
3. REMOVE REAR DISC
4. REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33–15)
5. REMOVE PARKING BRAKE SHOE STRUT COMPRESSION SPRING (See page 33–15)
6. REMOVE PARKING BRAKE SHOE STRUT LH (See page 33–15)
7. REMOVE PARKING BRAKE SHOE (See page 33–15)

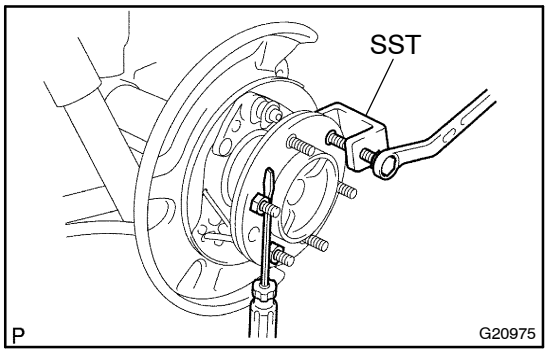

8. REMOVE REAR AXLE LH HUB BOLT
(a) Using SST, remove the hub bolt.
SST 09650–17011

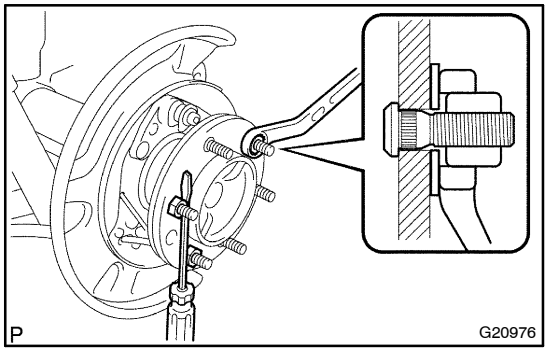

9. INSTALL REAR AXLE LH HUB BOLT
(a) Pass a new hub bolt through the axle hub.
(b) Pass a washer plate, as shown in the illustration, through the hub bolt, and install the hub bolt as tightening the hub nut.

10. INSTALL PARKING BRAKE SHOE (See page 33–15)
11. INSTALL PARKING BRAKE SHOE STRUT LH (See page 33–15)
12. INSTALL PARKING BRAKE SHOE STRUT COMPRESSION SPRING (See page 33–15)
13. INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33–15)
14. CHECK PARKING BRAKE INSTALLATION (See page 33–15)
15. INSTALL REAR DISC
16. INSTALL REAR DISC BRAKE CALIPER ASSY LH (See page 32–73)
17. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33–15)
18. INSTALL REAR WHEEL
Torque: 112 N·m (1,142 kgf·cm, 83 ft·lbf)
19. INSPECT PARKING BRAKE LEVER TRAVEL (See page 33–2)
20. ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–2)