
TRANSFER OIL

ADJUSTMENT

3103A–01

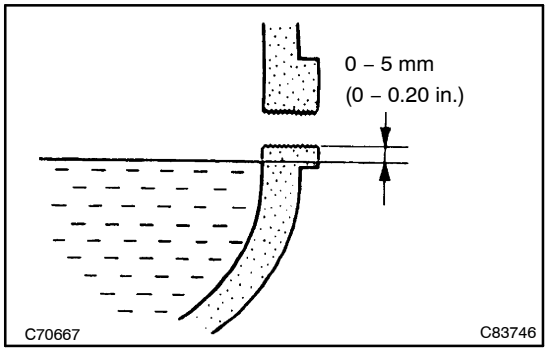

1. INSPECT TRANSFER OIL

(a) Remove the case plug No.1 (filler plug) and gasket.

(b) Check the oil level is within 0 – 5 mm (0 – 0.20 in.) down from the lowest end of the hole for case plug No.1 (filler plug).

NOTICE:

- **When changing oil, recheck the oil level after driving.**
- **Excessively large or small quantity of oil may cause some trouble.**

(c) When the oil level is too low, check for oil leakage.

(d) Tighten the case plug No.1 (filler plug) with a new gasket.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

2. ADJUST TRANSFER OIL

(a) Remove the case plug No.1 (filler plug) and gasket, and supply oil.

NOTICE:

- **When supplying oil, pour it slowly.**
- **Repeat supplying oil several times at several minutes interval.**

HINT:

Within 0 – 5 mm (0 – 0.20 in.) down from the lowest end of the hole for the case plug No.1 (filler plug).

(b) After leaving it alone for 5 min., check the oil level again.

(c) Tighten the case plug No.1 (filler plug) with a new gasket.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)