
SPEEDOMETER DRIVEN GEAR ASSY

REPLACEMENT

3103D–01

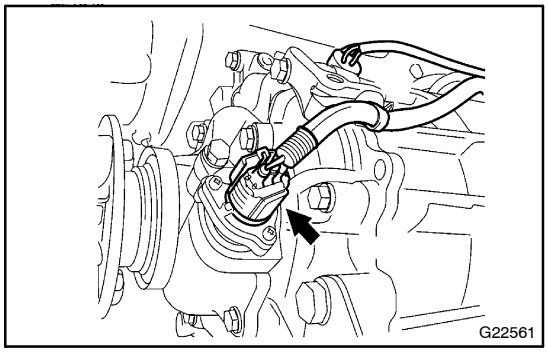

1. SEPARATE CONNECTOR

(a) Separate the speedmeteter sensor connecor.

2. REMOVE SPEEDOMETER DRIVEN GEAR ASSY W/SENSOR

(a) Remove a bolt and speedmeter driven gear w/sensor.

3. REMOVE SPEEDOMETER DRIVEN GEAR ASSY


(a) Remove a clip with the speedmeter driven gear assy.

4. INSTALL SPEEDOMETER DRIVEN GEAR ASSY

(a) Install a clip with the speedmeter driven gear assy.

5. INSTALL SPEEDOMETER DRIVEN GEAR ASSY W/SENSOR

(a) Install a bolt and speedmeter driven gear w/sensor.

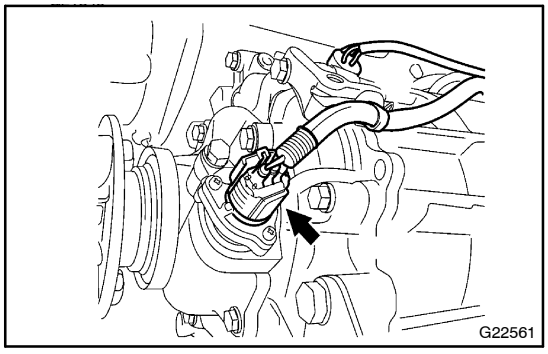

6. CONNECT CONNECTOR

(a) Connect the speedmeteter sensor connecor.