


TRANSFER ASSY (VF4BM)


COMPONENTS


3103G–01

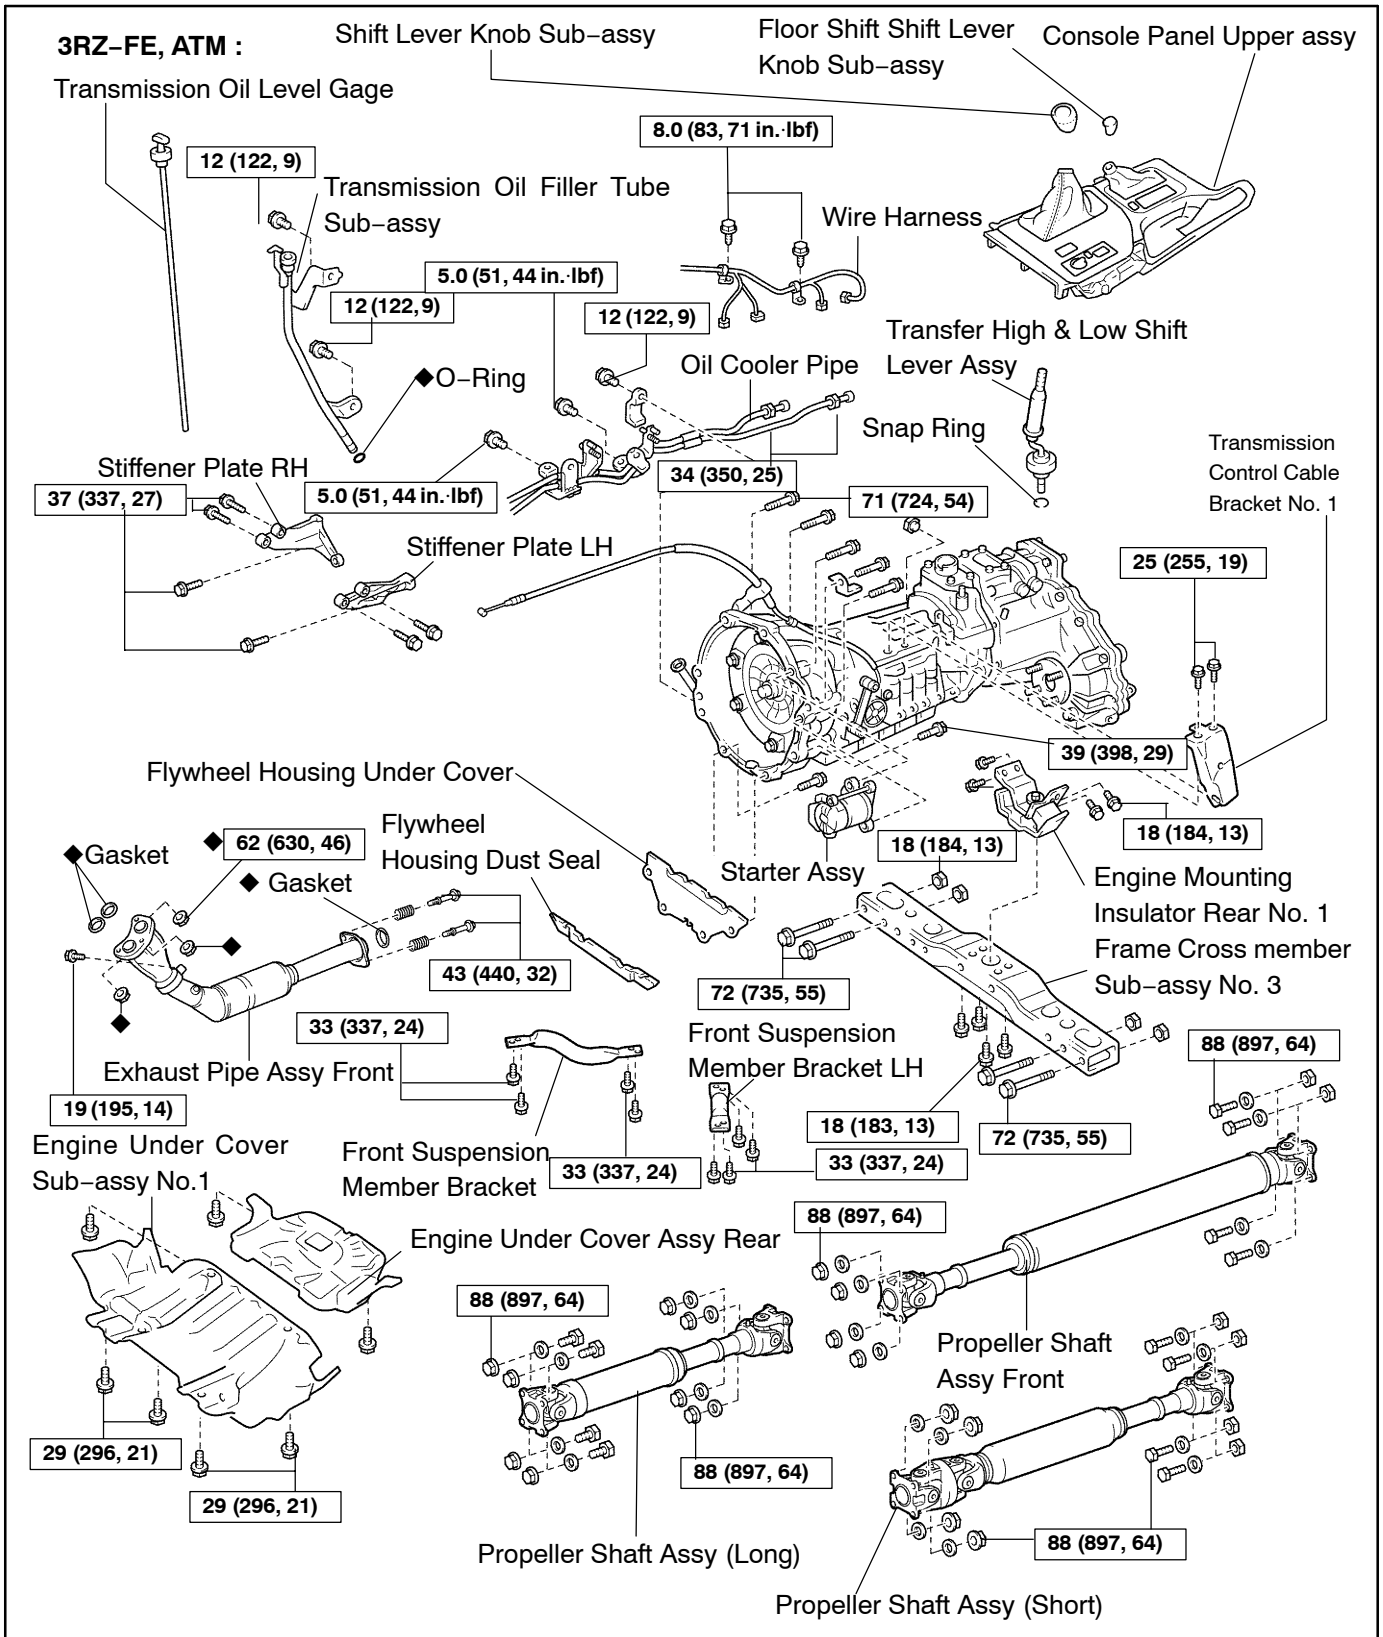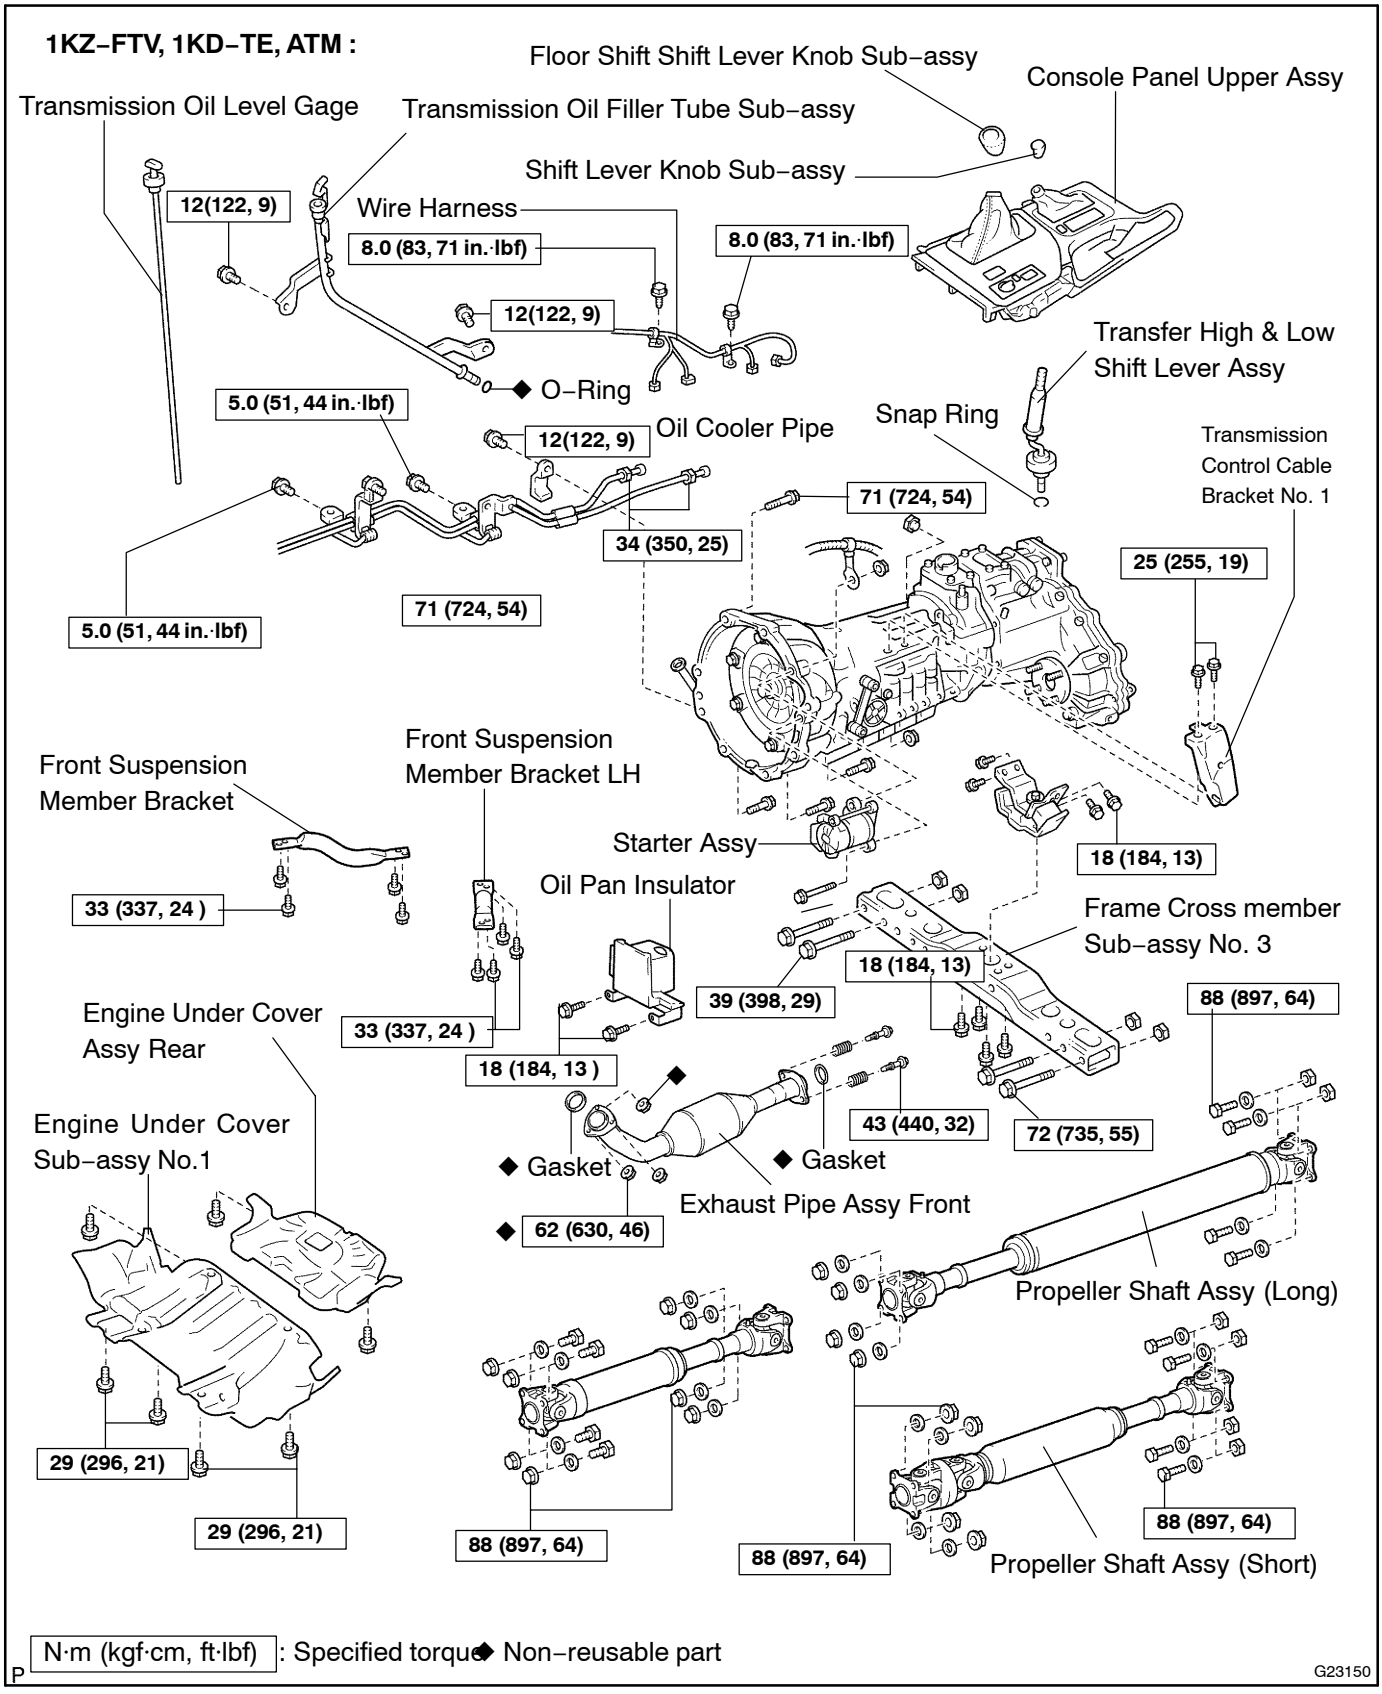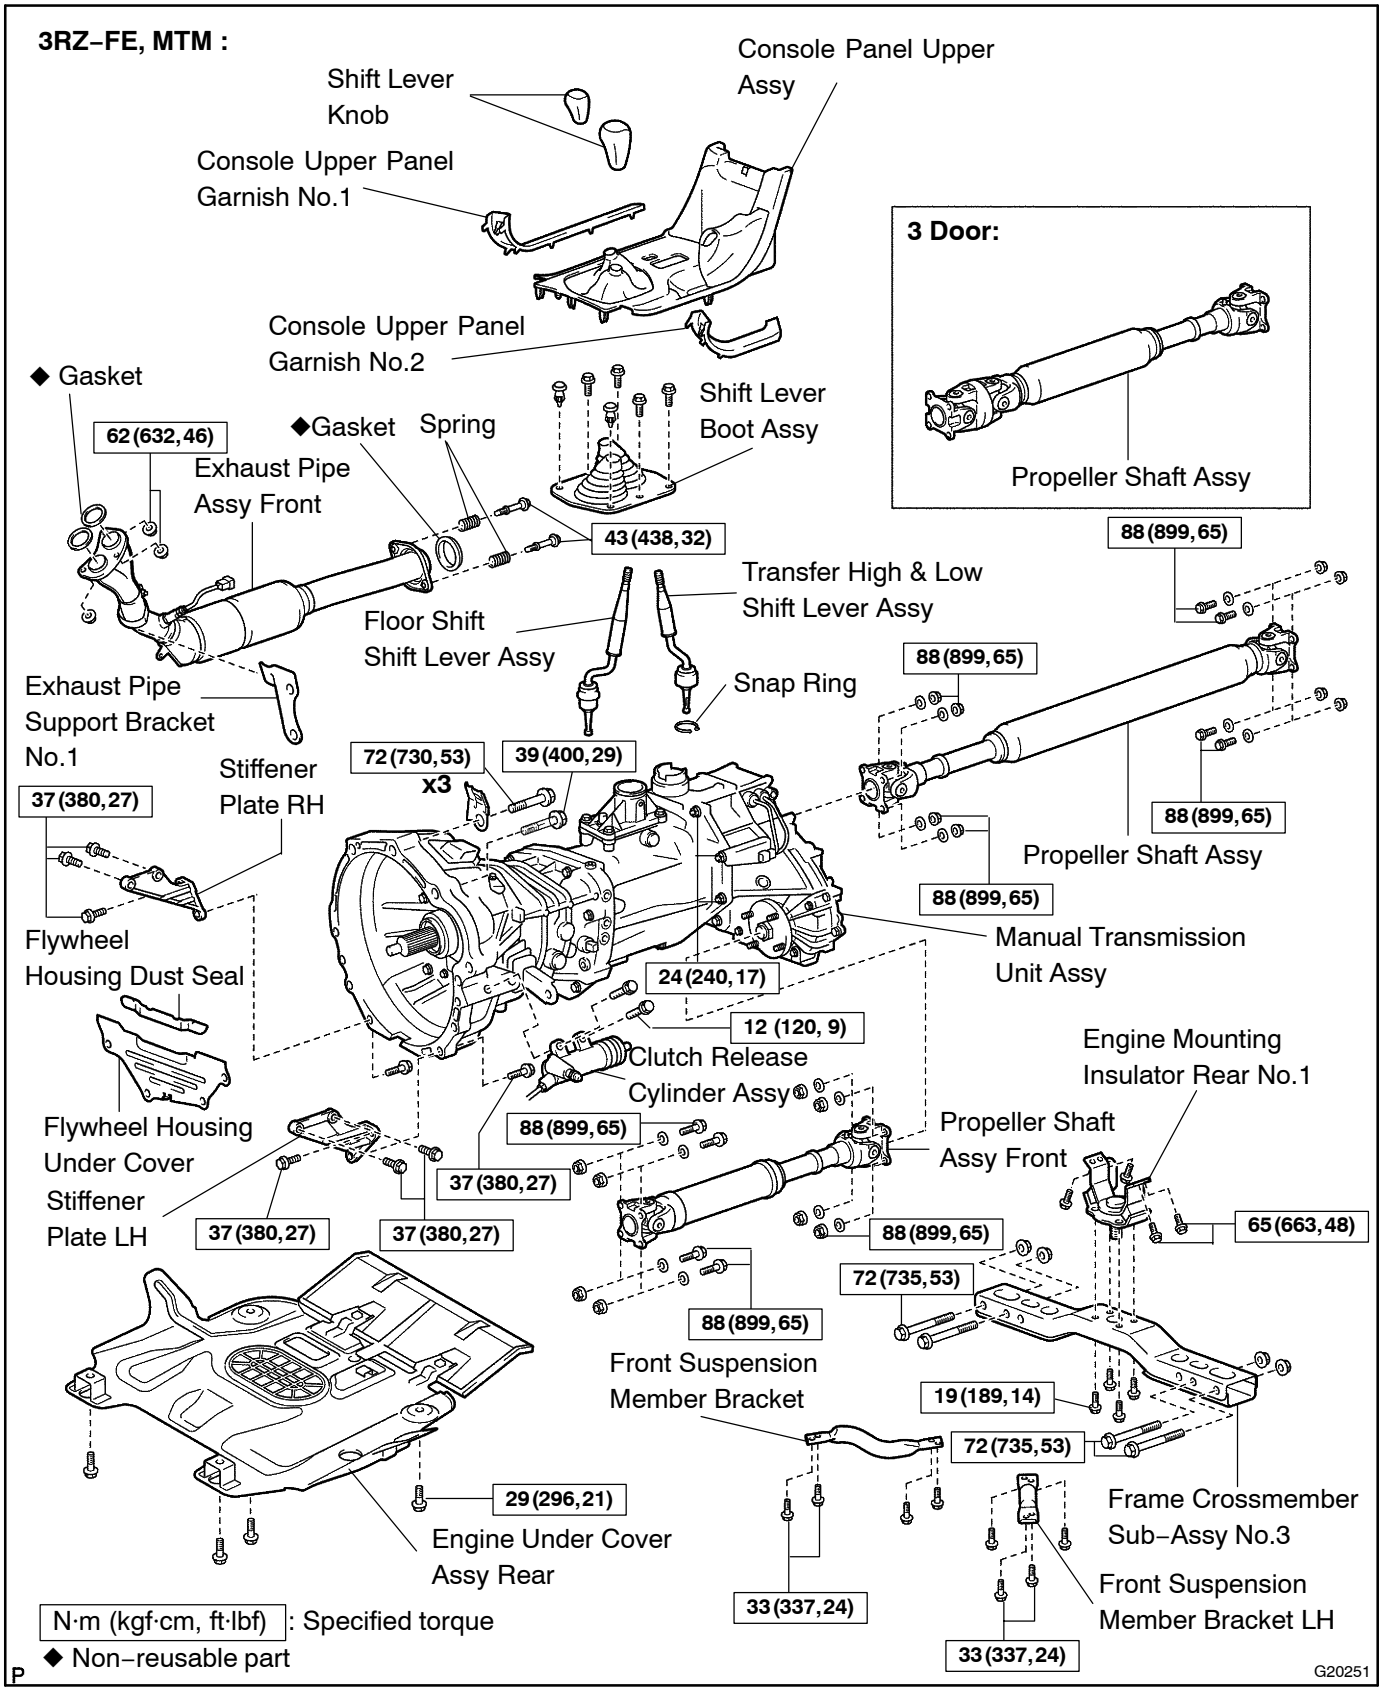


1KZ–FTV, 1KD–TE, ATM :
Floor Shift Shift Lever Knob Sub–assy
Console Panel Upper Assy
Transmission Oil Level Gage
Transmission Oil Filler Tube Sub–assy
Shift Lever Knob Sub–assy
12(122, 9)
Wire Harness
8.0 (83, 71 in.·lbf)
8.0 (83, 71 in.·lbf)
12(122, 9)
◆ O–Ring
Transfer High & Low Shift Lever Assy
5.0 (51, 44 in.·lbf)
12(122, 9)
Oil Cooler Pipe
Snap Ring
Transmission Control Cable Bracket No. 1
71 (724, 54)
34 (350, 25)
25 (255, 19)
71 (724, 54)
5.0 (51, 44 in.·lbf)
Front Suspension Member Bracket
Front Suspension Member Bracket LH
Starter Assy
18 (184, 13)
33 (337, 24)
Oil Pan Insulator
Frame Cross member Sub–assy No. 3
18 (184, 13)
39 (398, 29)
88 (897, 64)
Engine Under Cover Assy Rear
33 (337, 24)
18 (184, 13)
43 (440, 32)
72 (735, 55)
Engine Under Cover Sub–assy No.1
◆ Gasket
◆ Gasket
Exhaust Pipe Assy Front
◆ 62 (630, 46)
Propeller Shaft Assy (Long)
29 (296, 21)
29 (296, 21)
88 (897, 64)
88 (897, 64)
88 (897, 64)
Propeller Shaft Assy (Short)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
G23150


3RZ–FE, MTM :
Shift Lever Knob
Console Panel Upper Assy
Console Upper Panel Garnish No.1
Console Upper Panel Garnish No.2
◆ Gasket
62 (632, 46)
◆Gasket
Spring
Exhaust Pipe Assy Front
43 (438, 32)
Shift Lever Boot Assy
3 Door:
Propeller Shaft Assy
88 (899, 65)
Transfer High & Low Shift Lever Assy
Floor Shift Shift Lever Assy
Snap Ring
Exhaust Pipe Support Bracket No.1
Stiffener Plate RH
72 (730, 53)
x3
39 (400, 29)
37 (380, 27)
Flywheel Housing Dust Seal
Manual Transmission Unit Assy
24 (240, 17)
12 (120, 9)
Clutch Release Cylinder Assy
Engine Mounting Insulator Rear No.1
Flywheel Housing Under Cover Stiffener Plate LH
Propeller Shaft Assy Front
65 (663, 48)
72 (735, 53)
Front Suspension Member Bracket
19 (189, 14)
Frame Crossmember Sub–Assy No.3
29 (296, 21)
Engine Under Cover Assy Rear
33 (337, 24)
Front Suspension Member Bracket LH
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
G20251

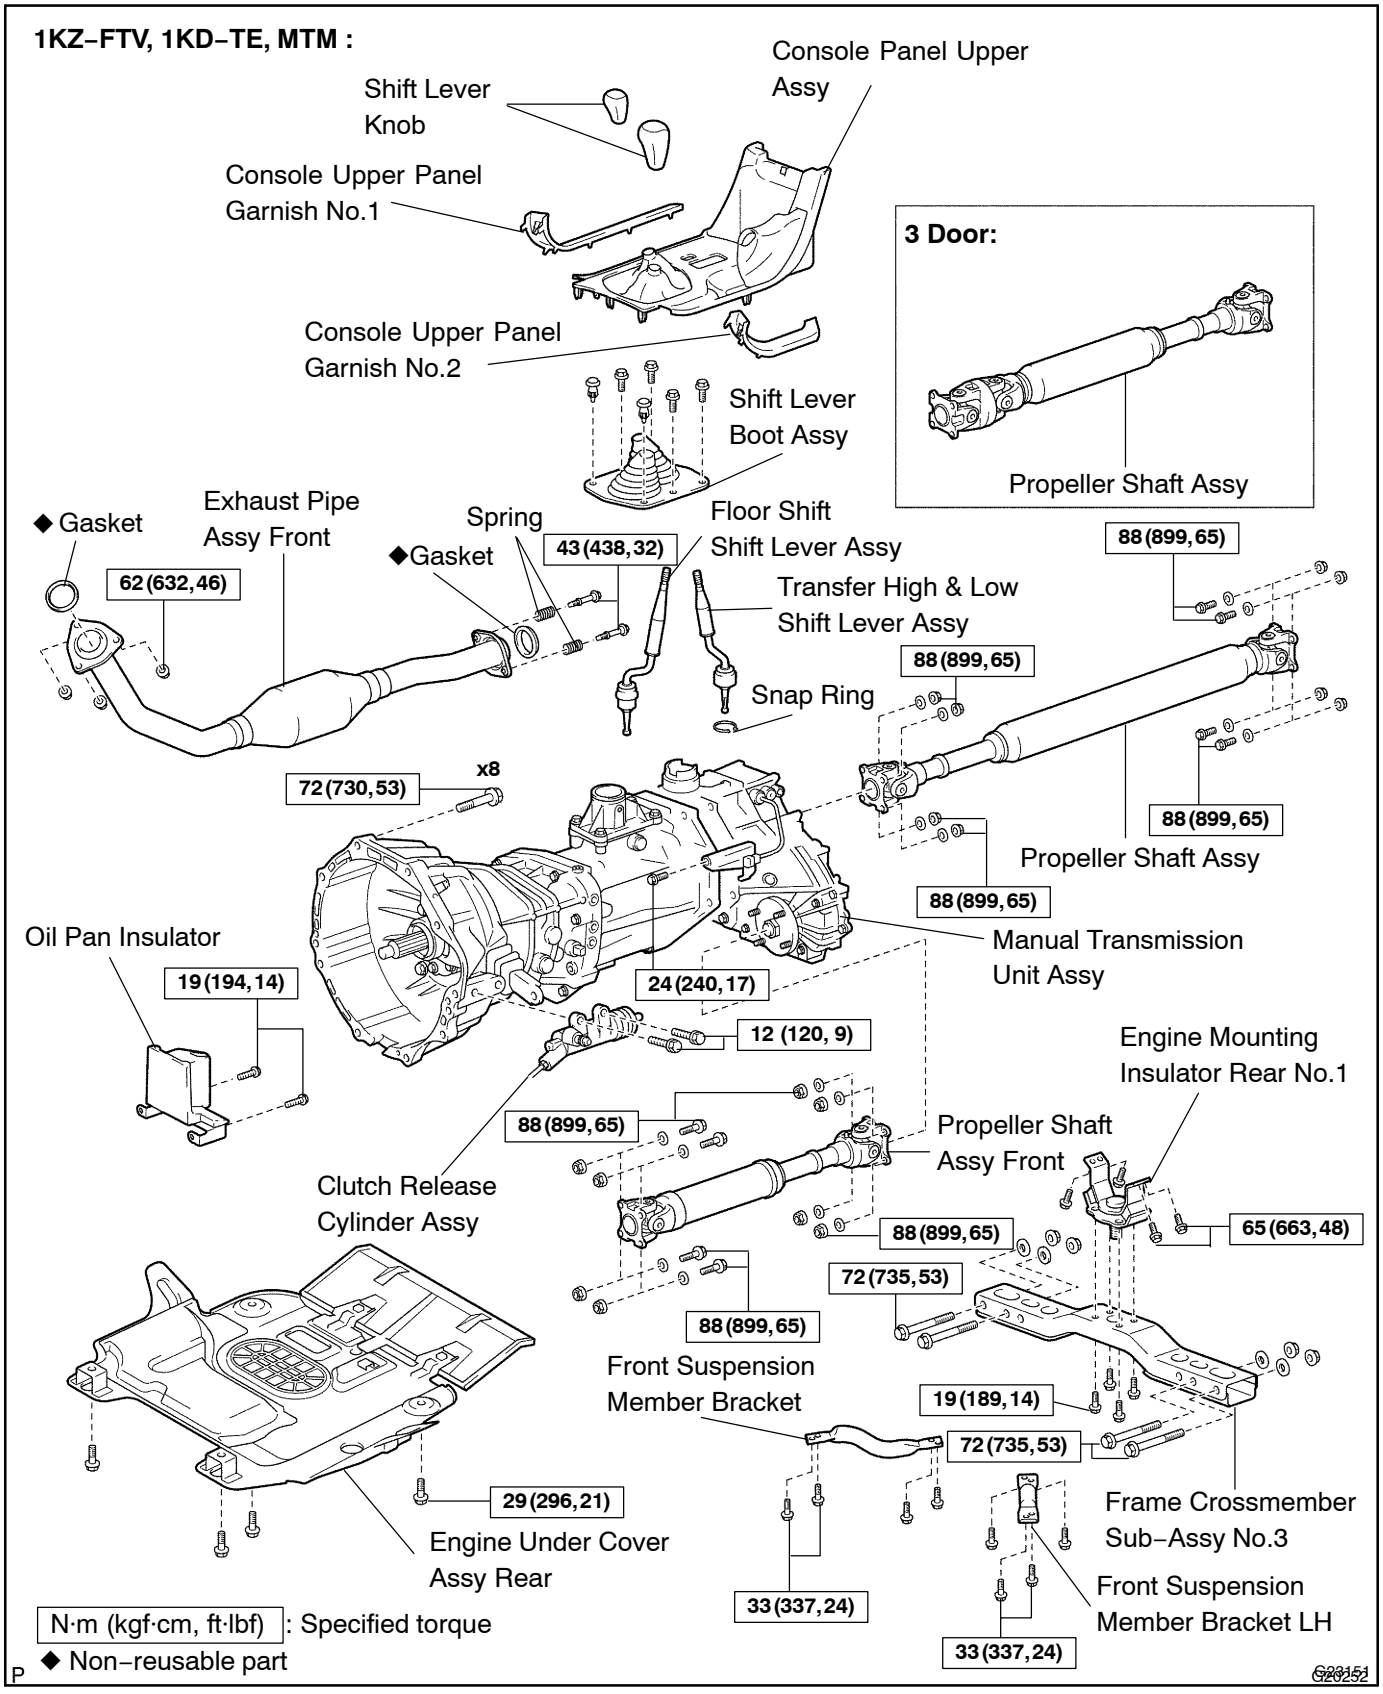

1KZ–FTV, 1KD–TE, MTM :
Console Panel Upper Assy
Shift Lever Knob
Console Upper Panel Garnish No.1
Console Upper Panel Garnish No.2
Shift Lever Boot Assy
3 Door:
Propeller Shaft Assy
◆ Gasket
Exhaust Pipe Assy Front
◆Gasket
Spring
43 (438, 32)
Floor Shift Shift Lever Assy
Transfer High & Low Shift Lever Assy
Snap Ring
62 (632, 46)
88 (899, 65)
88 (899, 65)
88 (899, 65)
88 (899, 65)
Propeller Shaft Assy
72 (730, 53)
x8
Oil Pan Insulator
19 (194, 14)
24 (240, 17)
Manual Transmission Unit Assy
12 (120, 9)
Engine Mounting Insulator Rear No.1
88 (899, 65)
Propeller Shaft Assy Front
Clutch Release Cylinder Assy
65 (663, 48)
88 (899, 65)
72 (735, 53)
88 (899, 65)
Front Suspension Member Bracket
19 (189, 14)
72 (735, 53)
29 (296, 21)
Engine Under Cover Assy Rear
Frame Crossmember Sub–Assy No.3
33 (337, 24)
Front Suspension Member Bracket LH
33 (337, 24)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
G20252

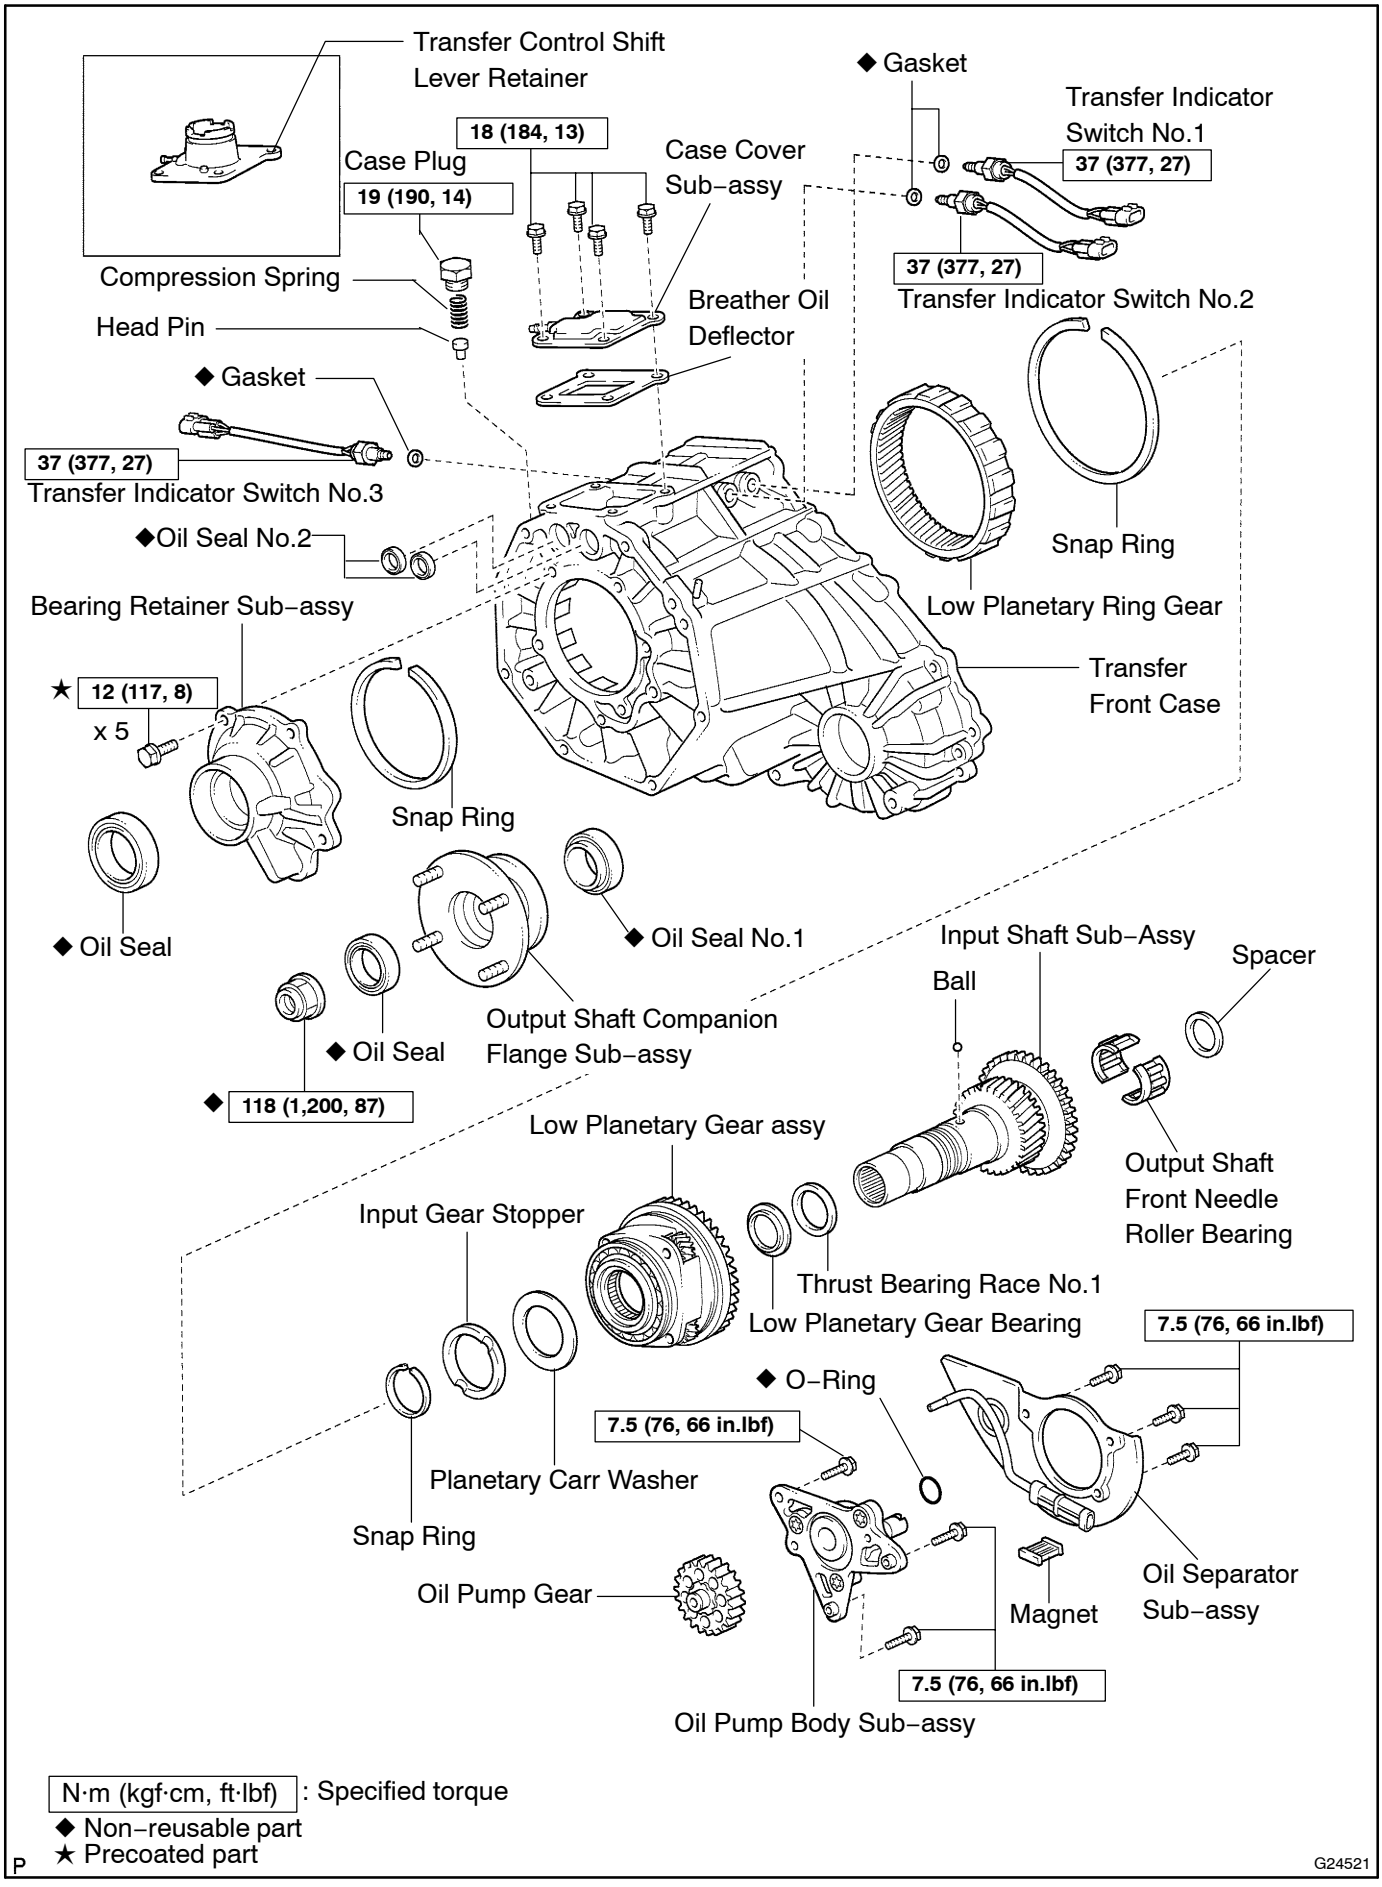


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part


P

G24521

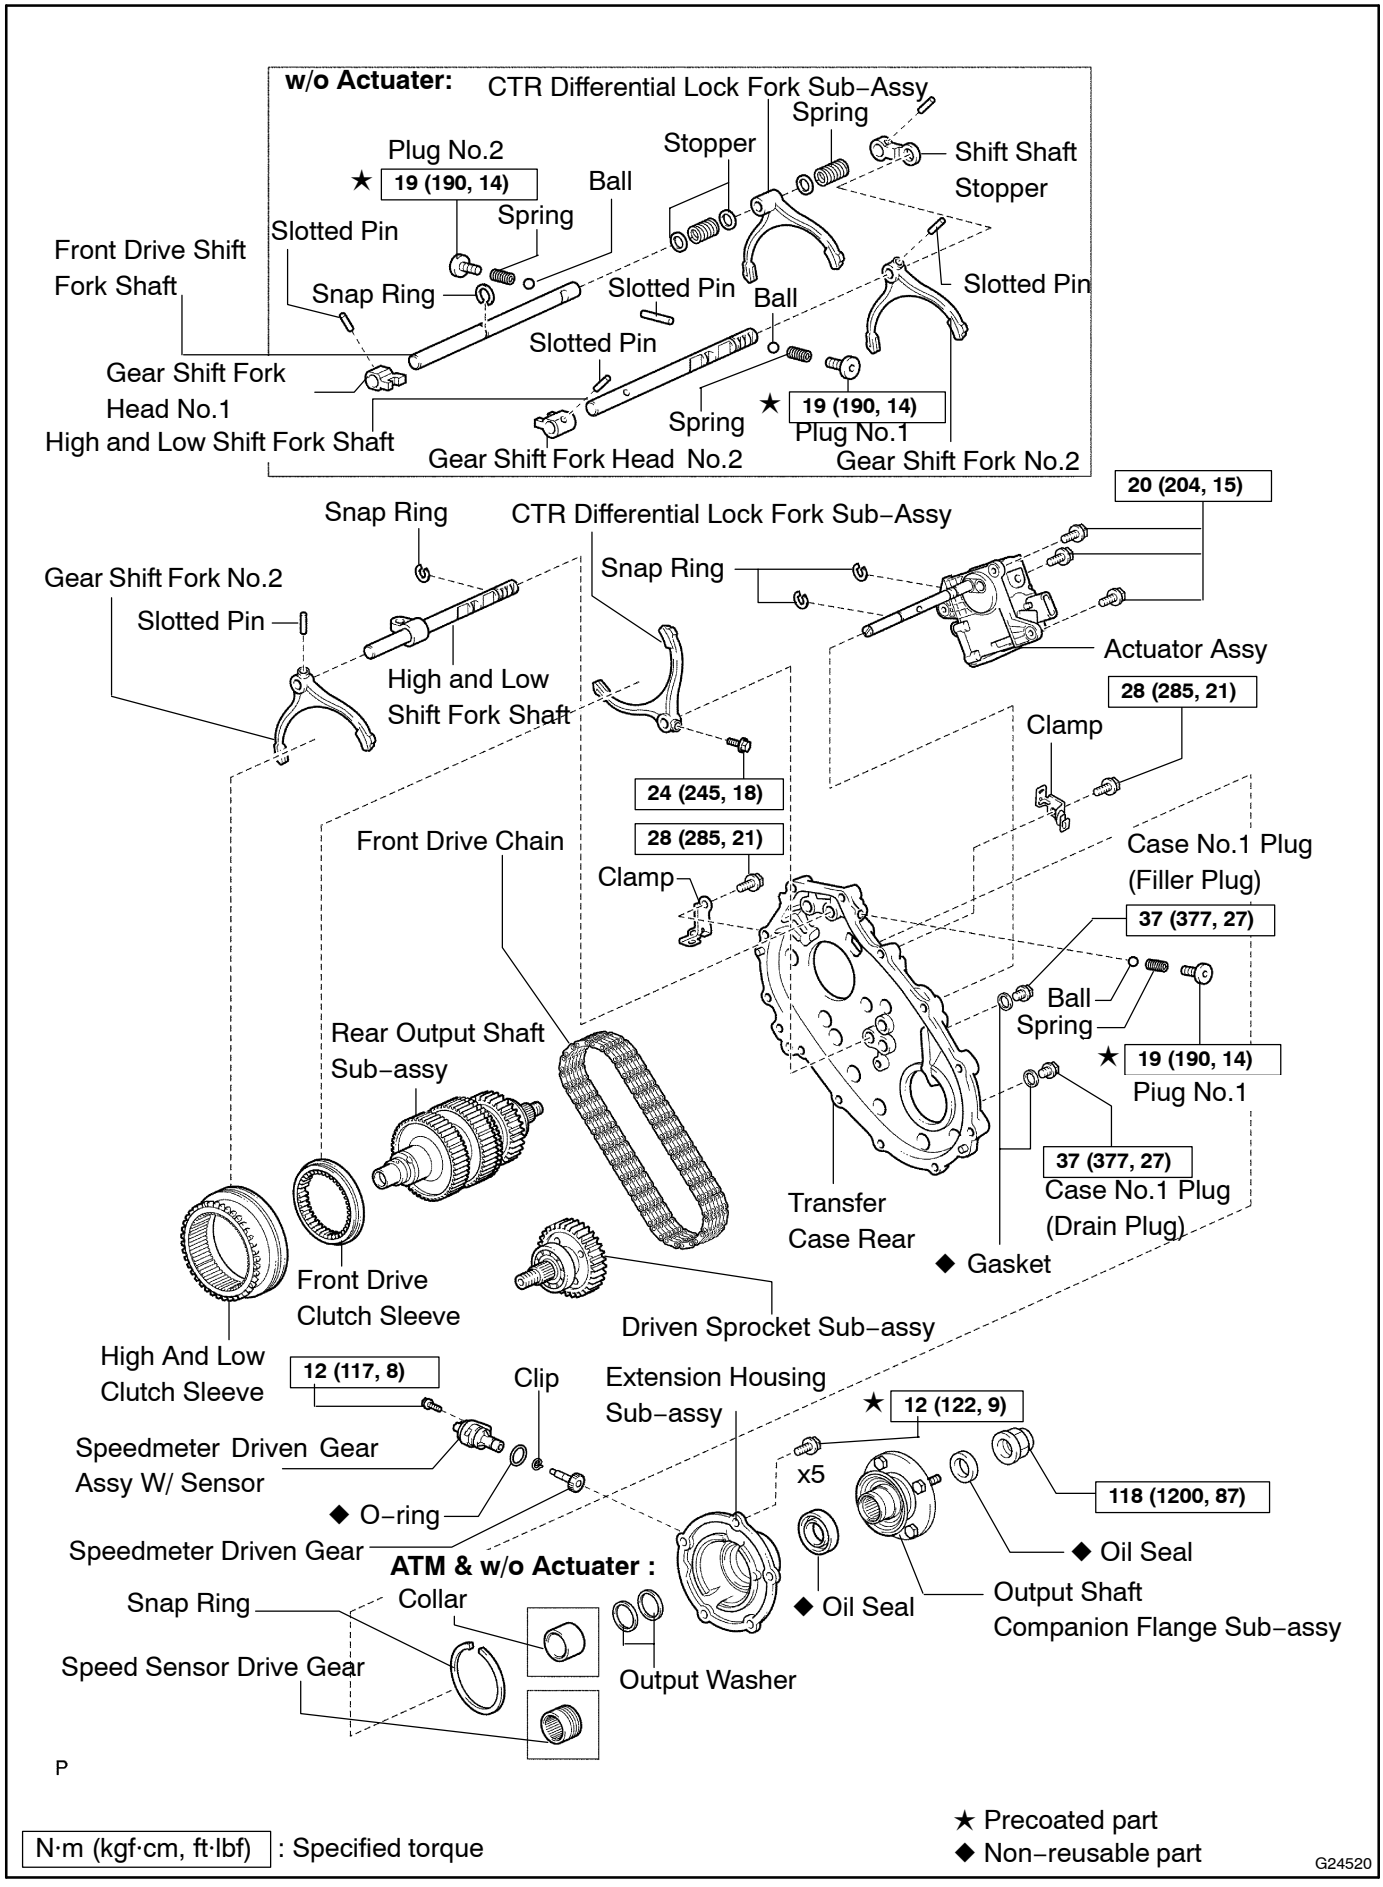
w/o Actuater:
CTR Differential Lock Fork Sub–Assy
Spring
Stopper
Plug No.2
★ 19 (190, 14)
Ball
Shift Shaft Stopper
Slotted Pin
Spring
Front Drive Shift Fork Shaft
Snap Ring
Slotted Pin
Ball
Slotted Pin
Slotted Pin
Gear Shift Fork Head No.1
High and Low Shift Fork Shaft
Spring
★ 19 (190, 14)
Plug No.1
Gear Shift Fork Head No.2
Gear Shift Fork No.2
20 (204, 15)
Snap Ring
CTR Differential Lock Fork Sub–Assy
Snap Ring
Gear Shift Fork No.2
Slotted Pin
Actuator Assy
High and Low Shift Fork Shaft
28 (285, 21)
Clamp
24 (245, 18)
28 (285, 21)
Front Drive Chain
Clamp
Case No.1 Plug (Filler Plug)
37 (377, 27)
Ball
Spring
★ 19 (190, 14)
Piug No.1
Rear Output Shaft Sub–assy
37 (377, 27)
Case No.1 Plug (Drain Plug)
Transfer Case Rear
◆ Gasket
Front Drive Clutch Sleeve
Driven Sprocket Sub–assy
High And Low Clutch Sleeve
12 (117, 8)
Clip
Extension Housing Sub–assy
★ 12 (122, 9)
Speedmeter Driven Gear Assy W/ Sensor
x5
118 (1200, 87)
◆ O–ring
◆ Oil Seal
Speedmeter Driven Gear
ATM & w/o Actuater :
Snap Ring
Collar
◆ Oil Seal
Output Shaft Companion Flange Sub–assy
Speed Sensor Drive Gear
Output Washer
P
N·m (kgf·cm, ft·lbf) : Specified torque
★ Precoated part
◆ Non–reusable part
G24520

Rear Output Shaft Sub–assy:

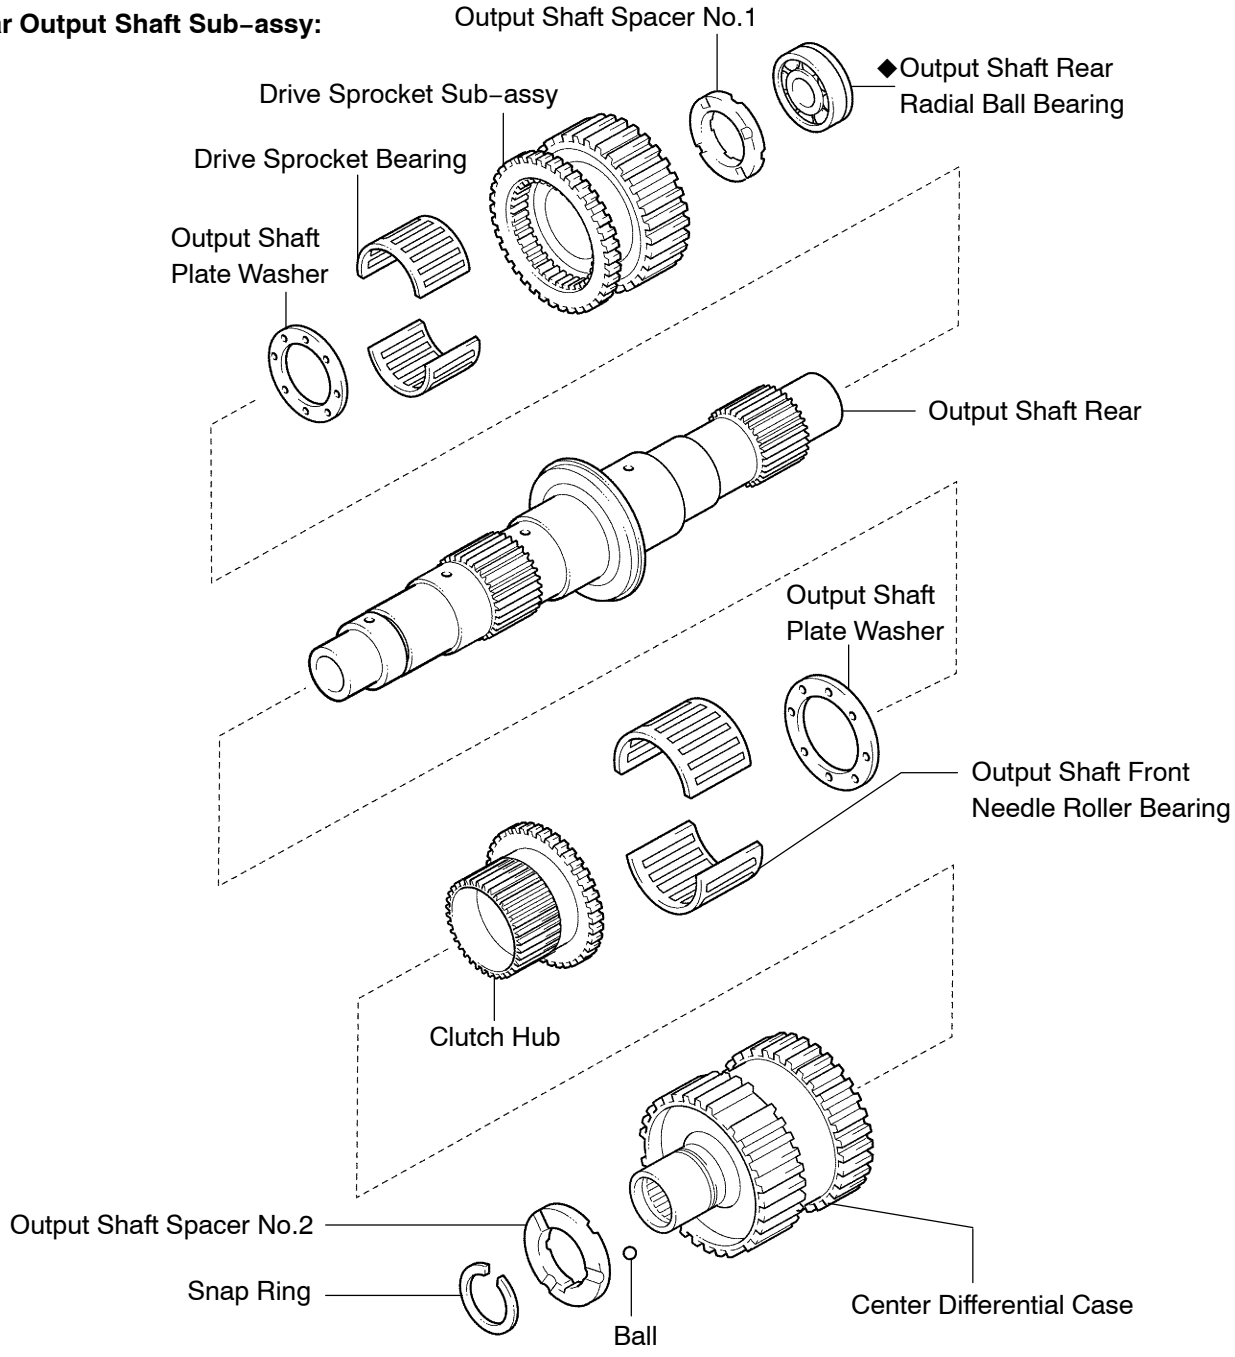


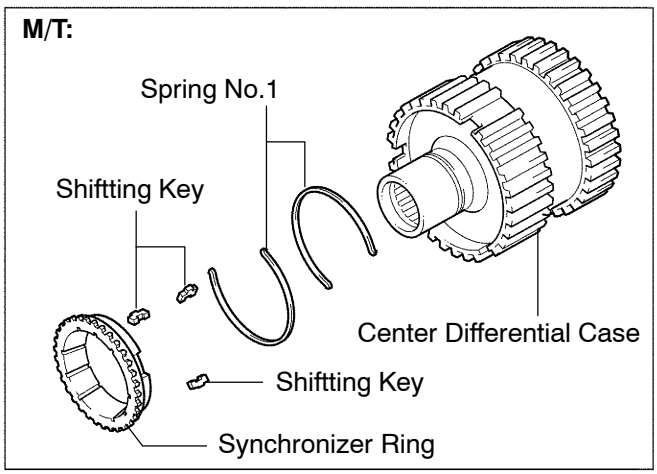

◆ Non–reusable part

C97067

Input Shaft Sub–assy:

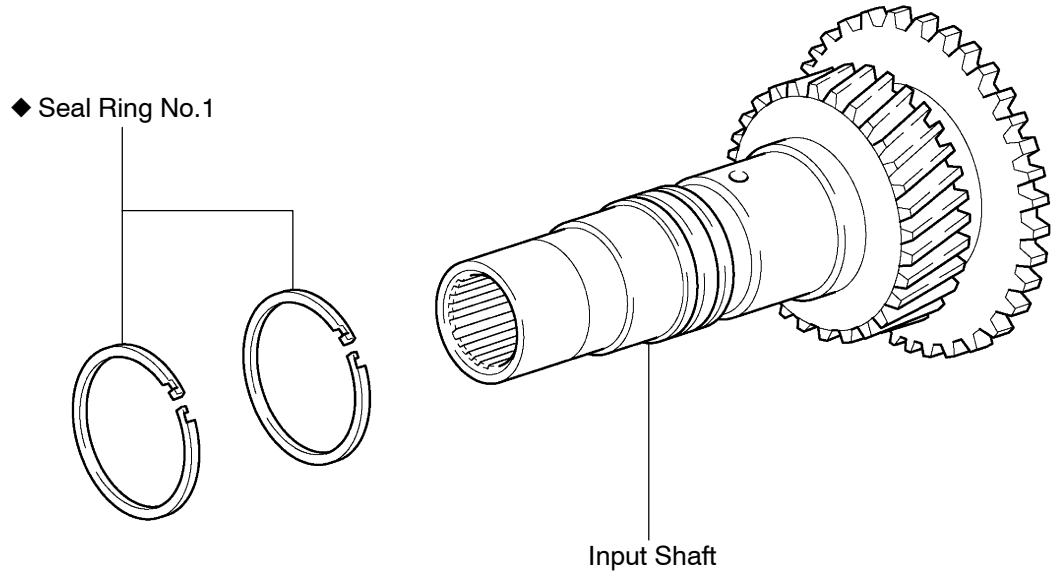


◆ Non–reusable part

N

F43496

Driven Sprocket Sub–assy:

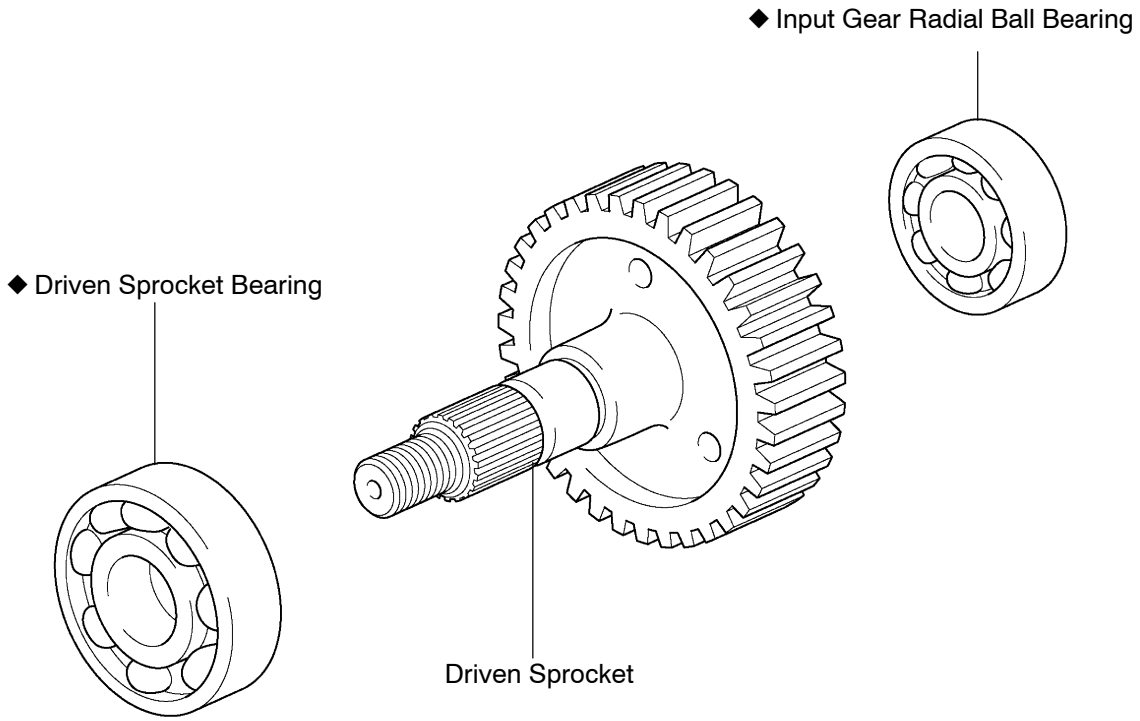


◆ Non–reusable part

N

F43494

Low Planetary Gear Sub–assy:

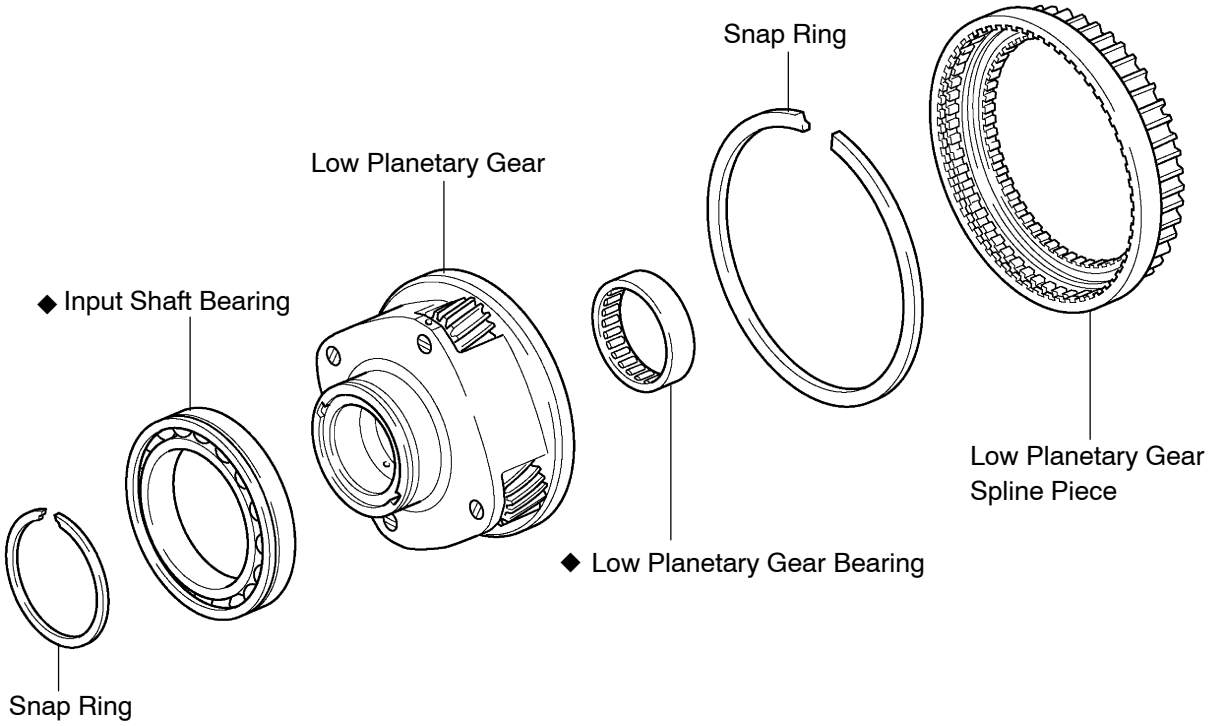

N ◆ Non–reusable part

F43495