

320QU–01

COMPONENTS

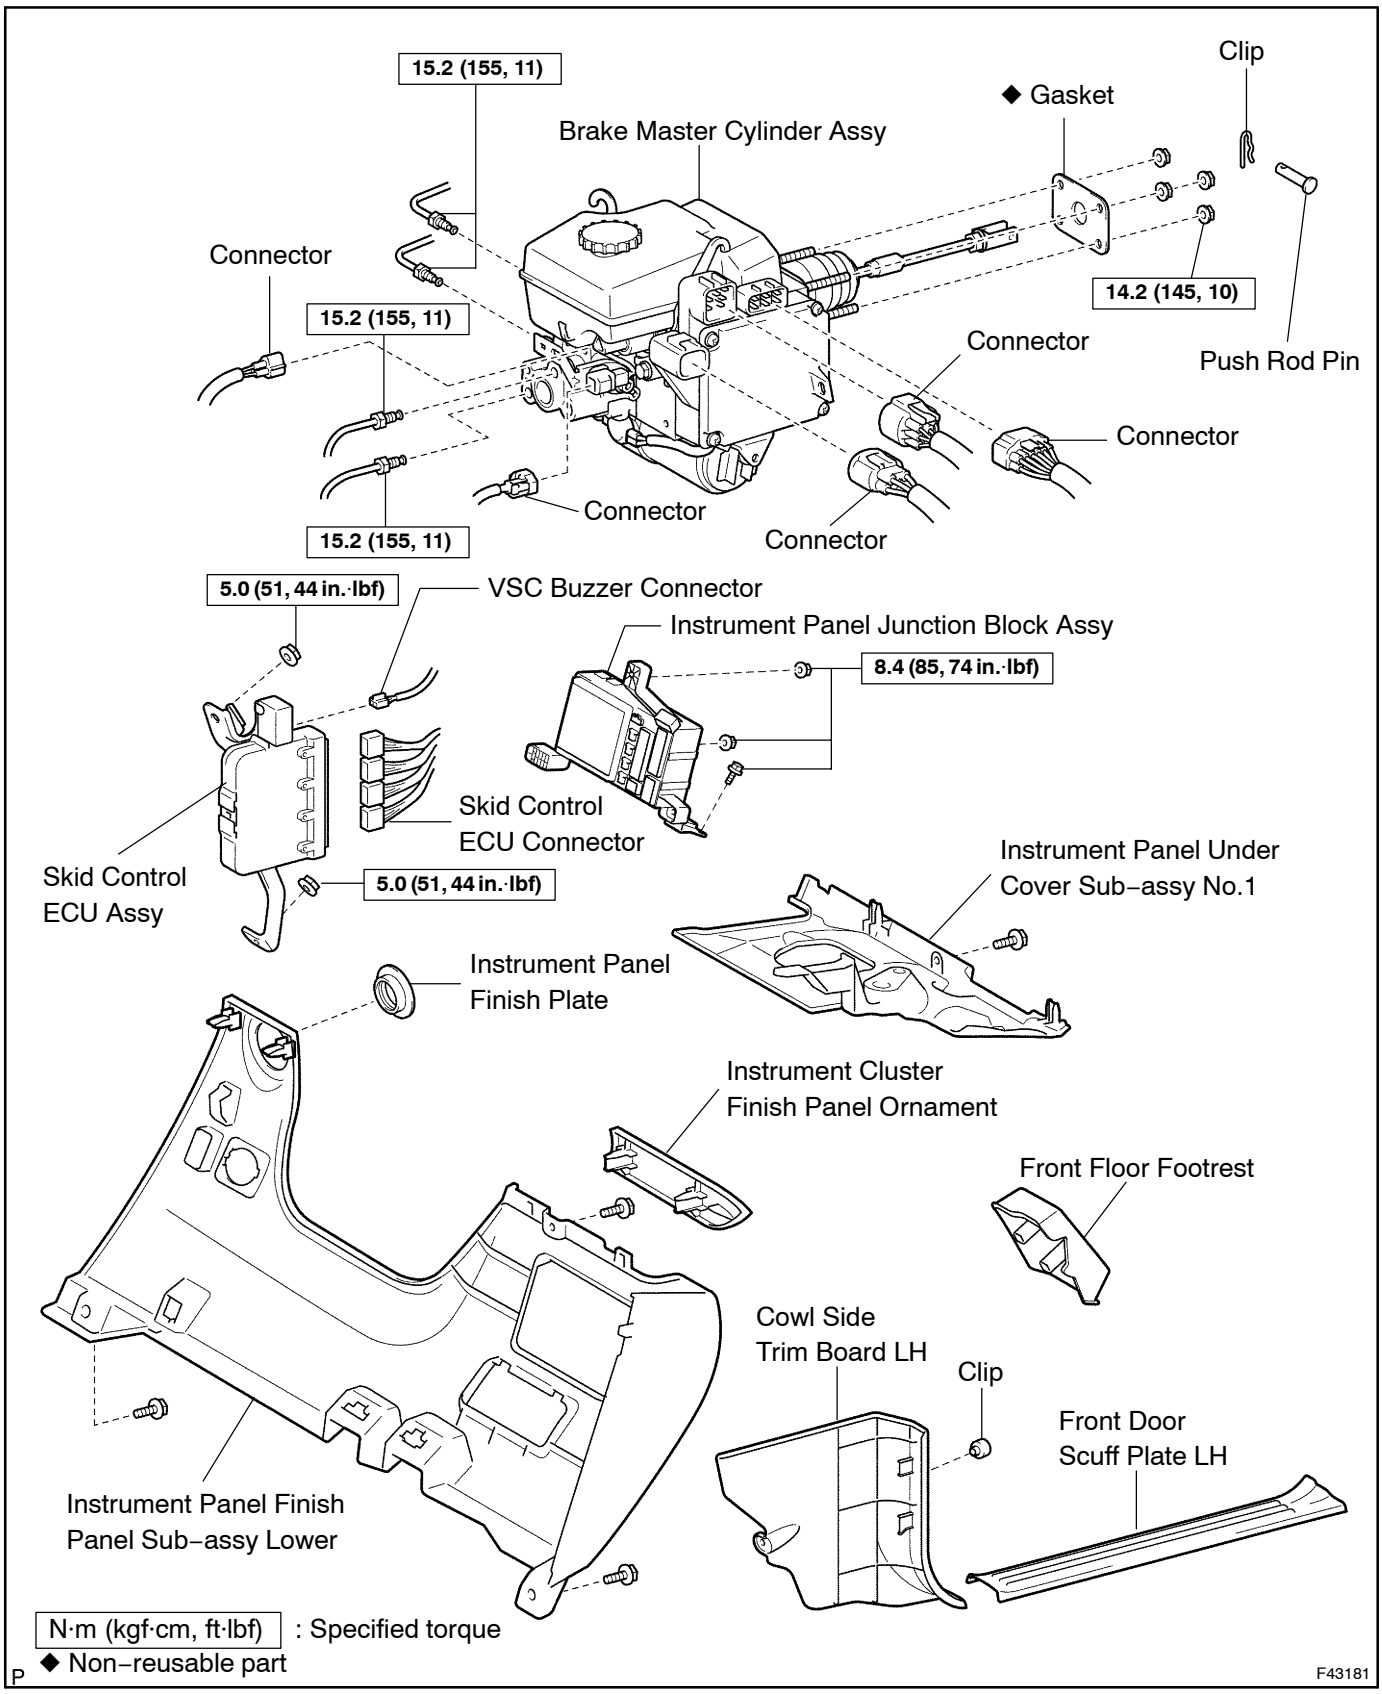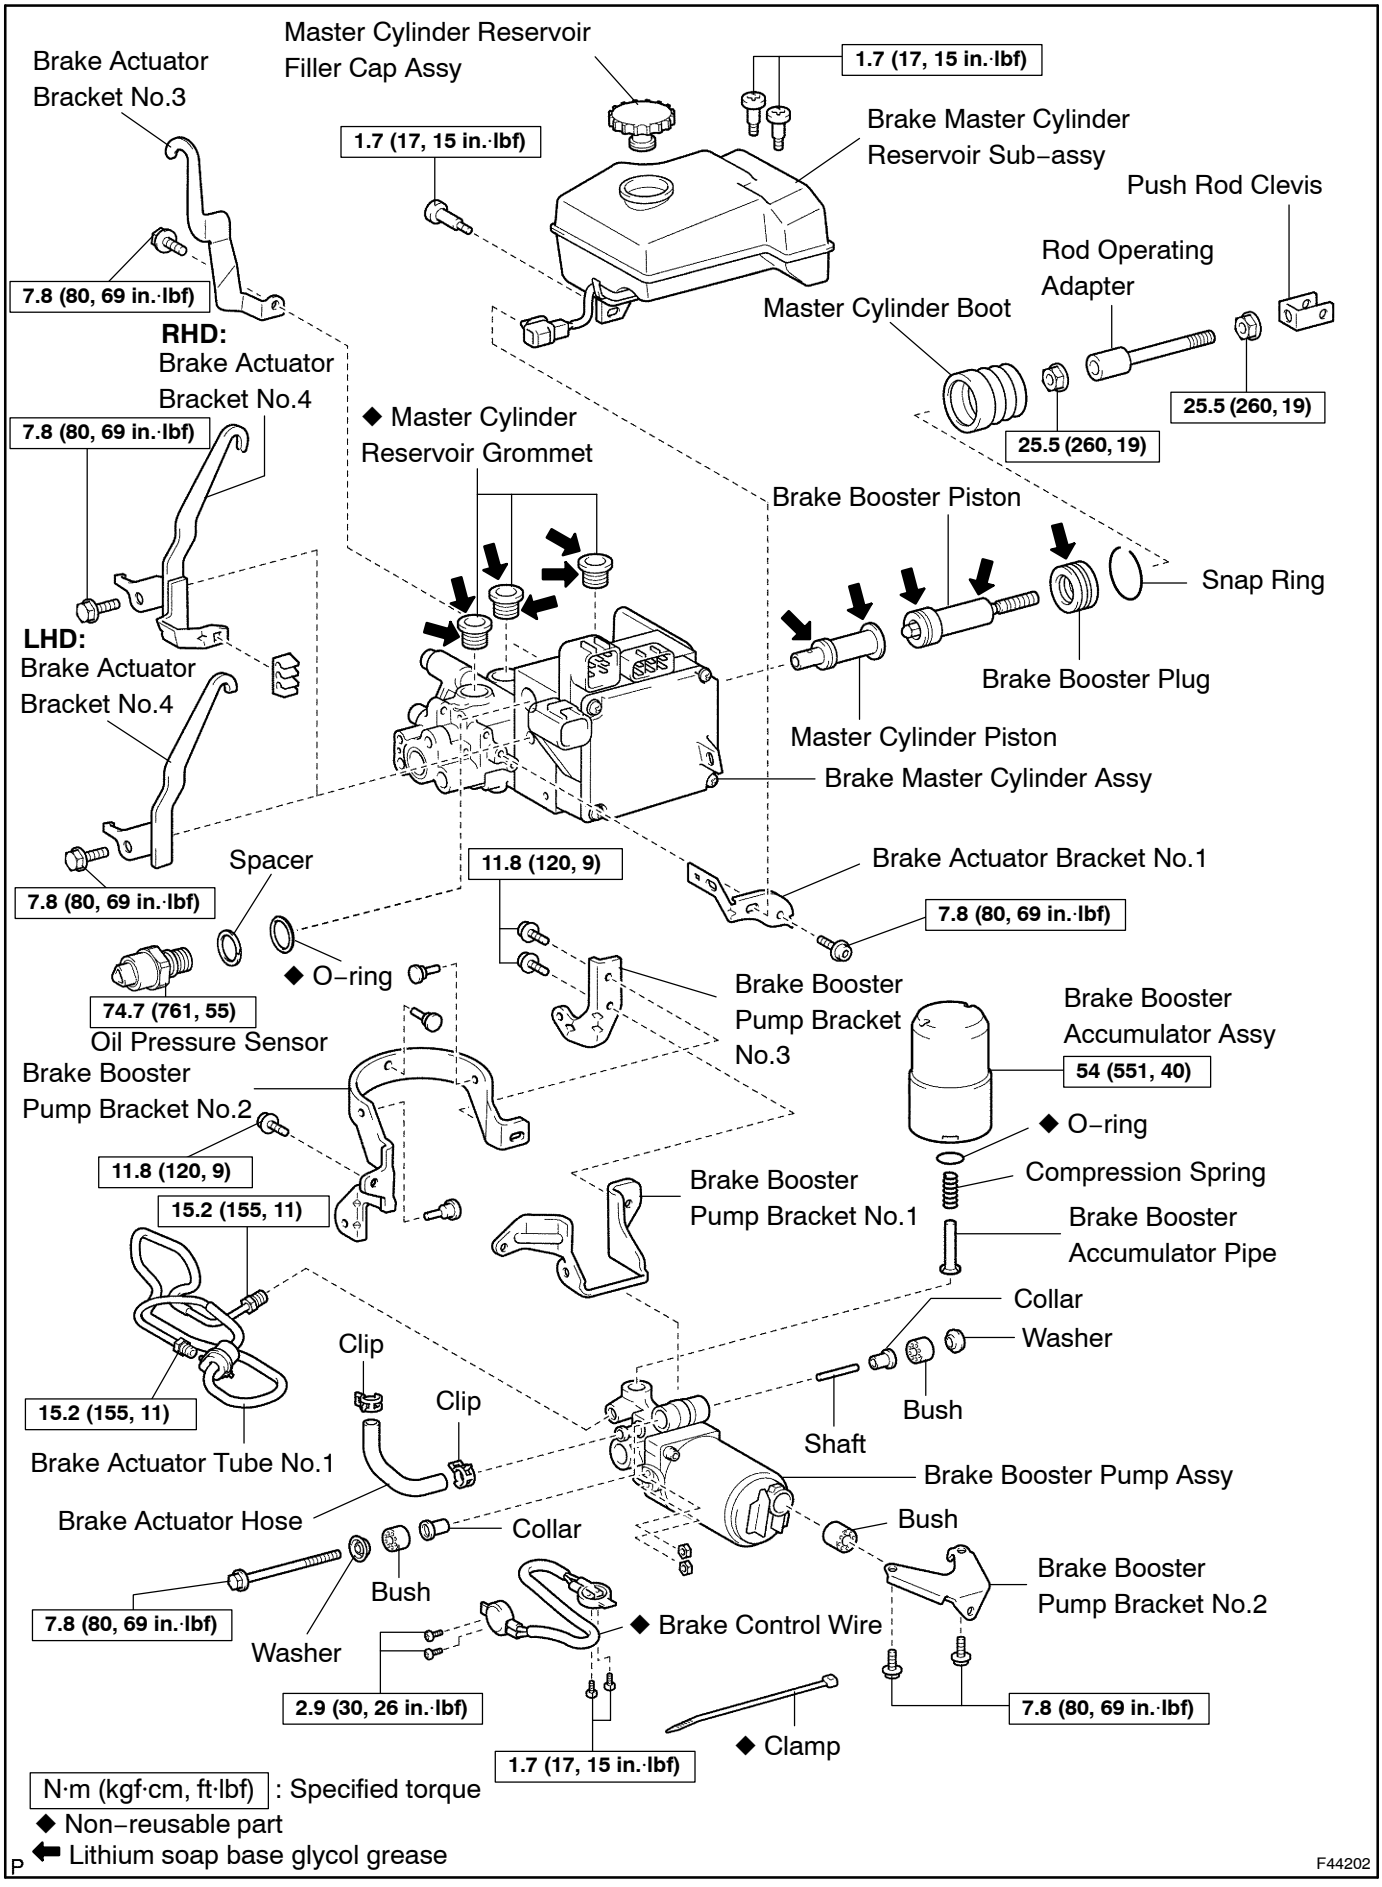


Brake Actuator Bracket No.3
Master Cylinder Reservoir Filler Cap Assy
1.7 (17, 15 in.·lbf)
1.7 (17, 15 in.·lbf)
Brake Master Cylinder Reservoir Sub–assy
Push Rod Clevis
Rod Operating Adapter
Master Cylinder Boot
7.8 (80, 69 in.·lbf)
RHD:
Brake Actuator Bracket No.4
25.5 (260, 19)
25.5 (260, 19)
7.8 (80, 69 in.·lbf)
◆ Master Cylinder Reservoir Grommet
Brake Booster Piston
Snap Ring
LHD:
Brake Actuator Bracket No.4
Brake Booster Plug
Master Cylinder Piston
Brake Master Cylinder Assy
Spacer
11.8 (120, 9)
Brake Actuator Bracket No.1
7.8 (80, 69 in.·lbf)
7.8 (80, 69 in.·lbf)
◆ O–ring
Brake Booster Pump Bracket No.3
Brake Booster Accumulator Assy
74.7 (761, 55)
Oil Pressure Sensor
54 (551, 40)
Brake Booster Pump Bracket No.2
◆ O–ring
11.8 (120, 9)
Compression Spring
Brake Booster Pump Bracket No.1
15.2 (155, 11)
Brake Booster Accumulator Pipe
Collar
Washer
Clip
Clip
Bush
15.2 (155, 11)
Shaft
Brake Actuator Tube No.1
Brake Booster Pump Assy
Brake Actuator Hose
Collar
Bush
Bush
Brake Booster Pump Bracket No.2
7.8 (80, 69 in.·lbf)
Washer
◆ Brake Control Wire
2.9 (30, 26 in.·lbf)
7.8 (80, 69 in.·lbf)
◆ Clamp
1.7 (17, 15 in.·lbf)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Lithium soap base glycol grease
P
F44202