
VACUUM PUMP ASSY (1KD–FTV/1KZ–TE)

320QI–01

ON–VEHICLE INSPECTION

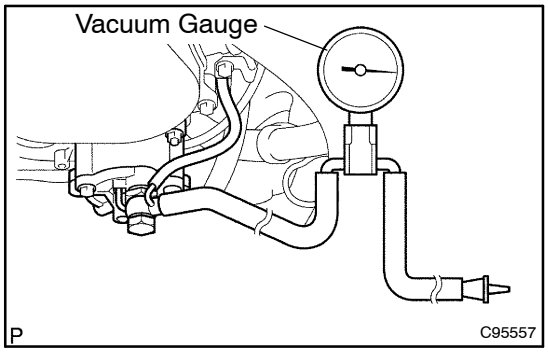

1. OPERATIONING CHECK

(a) Disconnect the vacuum hose.

(b) Connect the vacuum gauge to the vacuum pump.

(c) Start the engine.

(d) Measure the vacuum with the engine idling.

Standard: More than 650 mmHg (86.7 kPa).