SPEED SENSOR FRONT LH


320QX–01

REPLACEMENT

HINT:


Replace the RH side by the same procedures with LH side.

1. REMOVE FRONT WHEEL

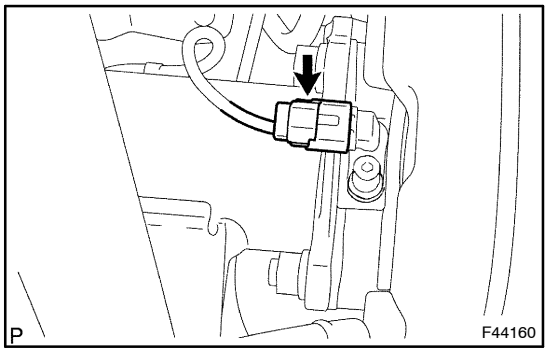

2. REMOVE SPEED SENSOR FRONT LH


(a) Disconnect the speed sensor connector.

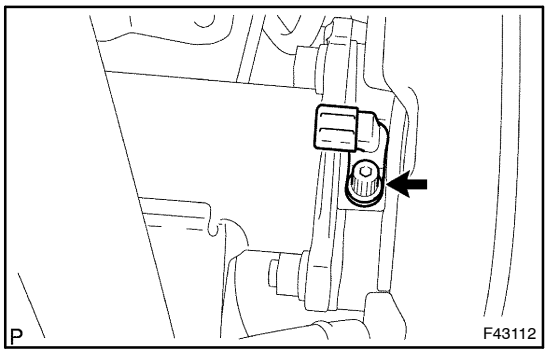

(b) Using a hexagon wrench (5 mm), remove the bolt and front speed sensor from the steering knuckle.

NOTICE:

- **Do not stick and foreign matter on the sensor tip.**
- **Do not let the foreign matter into the sensor installation hole.**

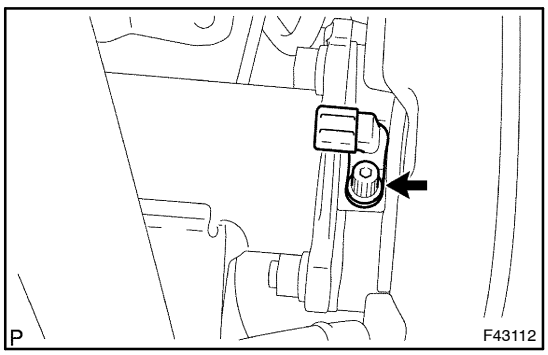


3. INSTALL SPEED SENSOR FRONT LH

(a) Using a hexagon wrench (5 mm), install the front speed sensor with the bolt to the steering knuckle.

Torque: 8.3 N·m (85 kgf·cm, 73 in.·lbf)

NOTICE:

Make sure the sensor tip is clean.

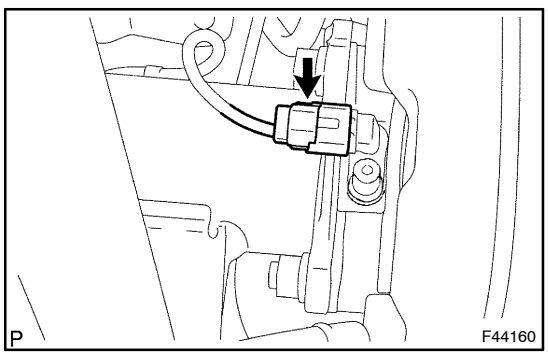

(b) Connect the speed sensor connector.

4. INSTALL FRONT WHEEL
Torque: 110 N·m (1,122 kgf·cm, 81 ft·lbf)

5. CHECK ABS SENSOR SIGNAL (See page 05–671 or 05–730)