SPEED SENSOR REAR LH


320QY–01

REPLACEMENT

HINT:


Replace the RH side by the same procedures with LH side.

1. REMOVE REAR WHEEL

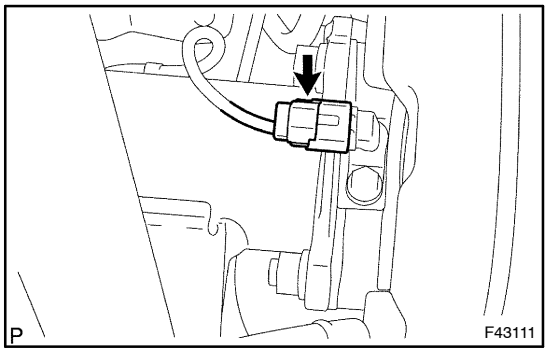

2. REMOVE SPEED SENSOR REAR LH


(a) Disconnect the speed sensor connector.

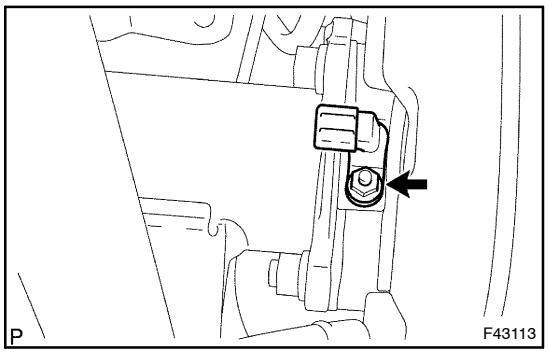

(b) Remove the nut and speed sensor rear from the axle hub.

NOTICE:

- **Do not stick and foreign matter on the sensor tip.**
- **Do not let the foreign matter into the sensor installation hole.**

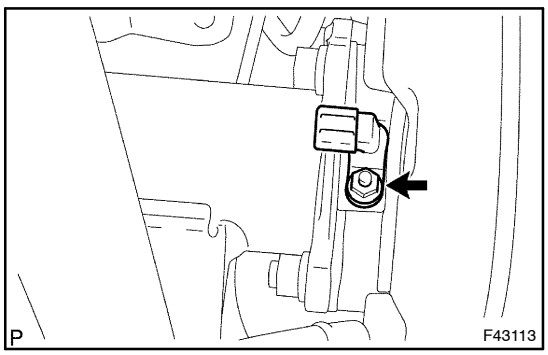


3. INSTALL SPEED SENSOR REAR LH

(a) Install the rear speed sensor with the nut to the steering knuckle.

Torque: 8.3 N·m (85 kgf·cm, 73 in.·lbf)

NOTICE:

Make sure the sensor tip is clean.

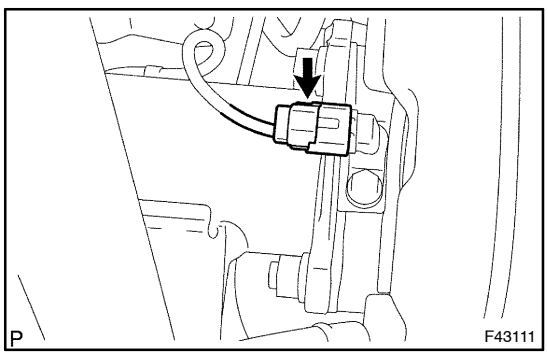

(b) Connect the speed sensor connector.

4. INSTALL REAR WHEEL
Torque: 110 N·m (1,122 kgf·cm, 81 ft·lbf)

5. CHECK ABS SENSOR SIGNAL (See page 05–671 or 05–730)