
DECELERATION SENSOR


320QZ–01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE SHIFT LEVER KNOB SUB–ASSY (See page 71–13)
3. REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (See page 71–13)
4. REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (See page 71–13)
5. REMOVE CONSOLE PANEL UPPER ASSY (See page 71–13)

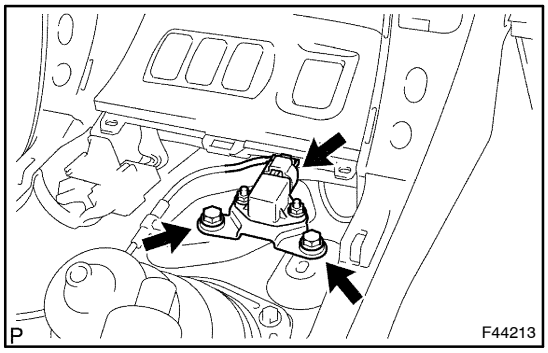

6. REMOVE DECELERATION SENSOR
   (a) Disconnect the connector from the deceleration sensor.
   (b) Remove the 2 bolts and deceleration sensor.

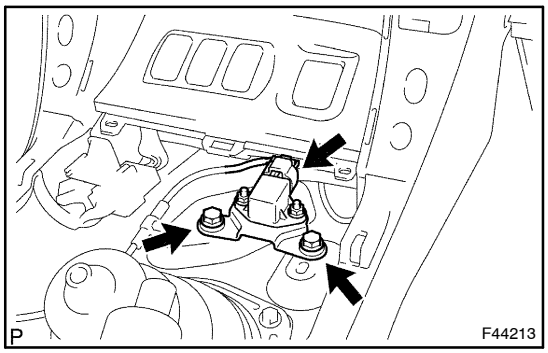

7. INSTALL DECELERATION SENSOR
   (a) Install the 2 bolts with the deceleration sensor.
   Torque: 13.3 N·m (136 kgf·cm, 10 ft·lbf)

NOTICE:

Do not install the sensor back to front.

   (b) Connect the connector to the deceleration sensor.

8. INSTALL CONSOLE PANEL UPPER ASSY
9. INSTALL CONSOLE UPPER PANEL GARNISH NO.1
10. INSTALL CONSOLE UPPER PANEL GARNISH NO.2
11. INSTALL SHIFT LEVER KNOB SUB–ASSY
12. CHECK DECELERATION SENSOR SIGNAL (See page 05–671)