
YAWRATE SENSOR


320R0-01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE SHIFT LEVER KNOB SUB-ASSY (See page 71-13)
3. REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (See page 71-13)
4. REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (See page 71-13)
5. REMOVE CONSOLE PANEL UPPER ASSY (See page 71-13)

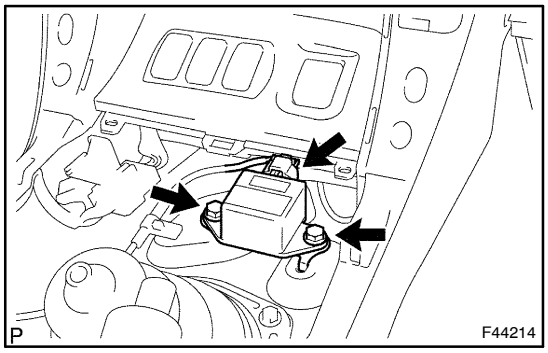

6. REMOVE YAWRATE SENSOR
(a) Disconnect the yawrate sensor connector.
(b) Remove the 2 bolts and yawrate sensor.

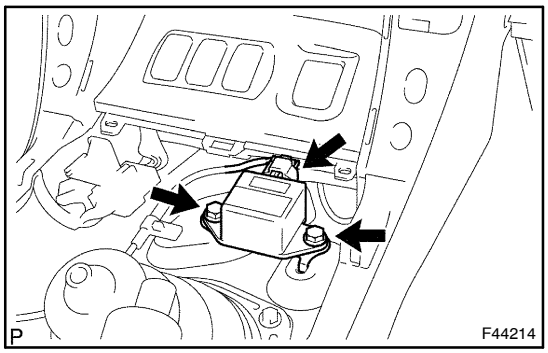

7. INSTALL YAWRATE SENSOR
(a) Install the yawrate sensor with 2 bolts.
Torque: 13.3 N·m (136 kgf·cm, 10 ft·lbf)

NOTICE:
Do not install the sensor back to front.

(b) Connect the yawrate sensor connector.

8. INSTALL CONSOLE PANEL UPPER ASSY
9. INSTALL CONSOLE UPPER PANEL GARNISH NO.1
10. INSTALL CONSOLE UPPER PANEL GARNISH NO.2
11. INSTALL SHIFT LEVER KNOB SUB-ASSY
12. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (See page 05-730)
13. CHECK VSC SENSOR SIGNAL (See page 05-730)