
STEERING SENSOR

REPLACEMENT


320R1–01

1. PRECAUTION (See page 60–22)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60–22)
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE STEERING WHEEL COVER LOWER NO.3 (See page 50–6)
5. REMOVE STEERING WHEEL COVER LOWER NO.2 (See page 50–6)
6. REMOVE HORN BUTTON ASSY (See page 60–22)
7. REMOVE STEERING WHEEL ASSY (See page 50–6)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
8. REMOVE STEERING COLUMN COVER (See page 50–6)
9. REMOVE SPIRAL CABLE SUB–ASSY (See page 60–22)
10. REMOVE TURN SIGNAL SWITCH ASSY (See page 50–6)

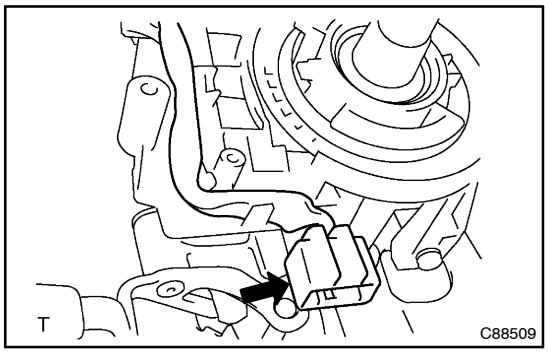


11. REMOVE STEERING SENSOR

(a) Remove the steering sensor connector.

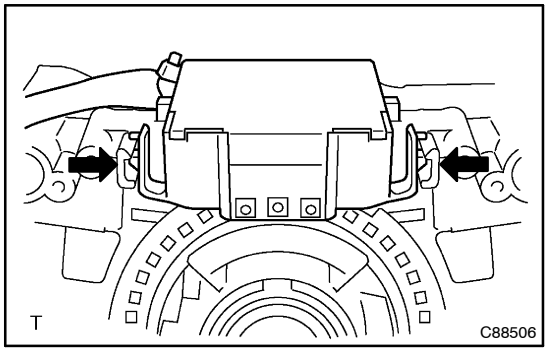

(b) Remove the 2 claws and remove the steering sensor.


(c) Remove the 10 steering sensor terminals from the connector.

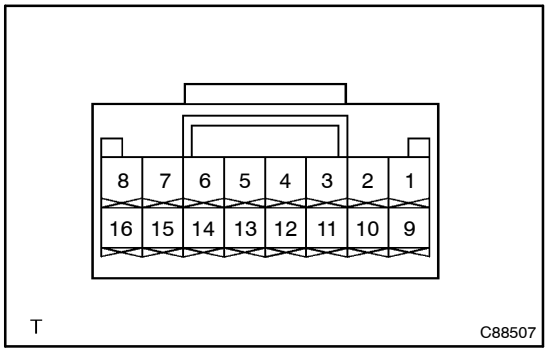


12. INSTALL STEERING SENSOR

(a) Follow the table below to install the 10 steering sensor terminals on the connector.

Terminal No. (Terminal symbol)	Wire color
1 (IG)	R
2 (ESS)	B
3 (SS1+)	L
4 (SS2+)	W
5 (SS3+)	BR
9 (BAT)	O
10 (TRIG)	V
11 (SS1–)	Y
12 (SS2–)	G
13 (SS3–)	GR

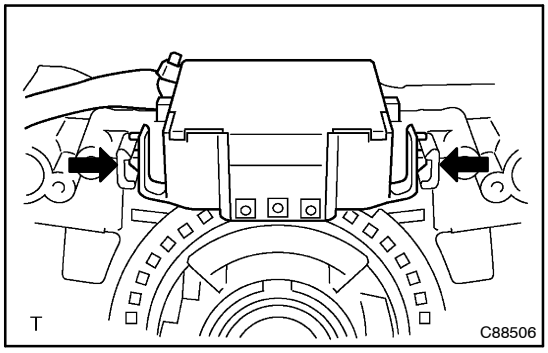

(b) Install the steering sensor.

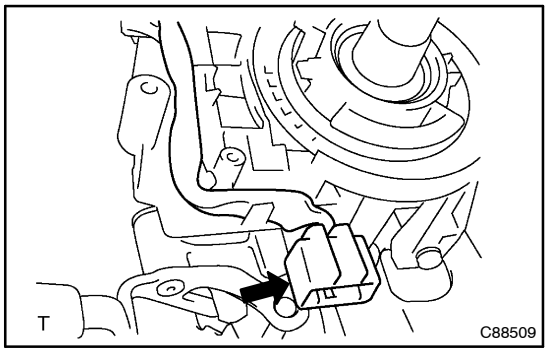

(c) Install the steering sensor connector.

13. INSTALL TURN SIGNAL SWITCH ASSY (See page 50–6)
14. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
15. INSPECT SPIRAL CABLE SUB–ASSY
(a) If the following condition is identified, replace the spiral cable sub–assy with a new one.
Condition:
Scratches or cracks on the connector
Cracks, dents or chipping of the spiral cable sub–assy
16. INSTALL SPIRAL CABLE SUB–ASSY (See page 60–22)
17. INSTALL STEERING COLUMN COVER (See page 50–6)
18. CENTER SPIRAL CABLE (See page 60–22)
19. INSTALL STEERING WHEEL ASSY (See page 50–6)
20. INSPECT HORN BUTTON ASSY (See page 60–22)
21. INSTALL HORN BUTTON ASSY (See page 60–22)
22. INSTALL STEERING WHEEL COVER LOWER NO.2 (See page 50–6)
23. INSTALL STEERING WHEEL COVER LOWER NO.3 (See page 50–6)
24. INSPECT SRS WARNING LIGHT (See page 05–1122)