SKID CONTROL ECU ASSY (LHD)

320R2–01


REPLACEMENT

1. REMOVE BLOWER ASSY (M/T TRANSMISSION) (See page 55–73)
2. REMOVE FRONT DOOR SCUFF PLATE LH (A/T TRANSMISSION) (See page 71–13)
3. REMOVE FRONT FLOOR FOOTREST (A/T TRANSMISSION) (See page 71–13)
4. REMOVE COWL SIDE TRIM BOARD LH (A/T TRANSMISSION) (See page 71–13)
5. REMOVE INSTRUMENT PANEL UNDER COVER SUB–ASSY NO.1 (A/T TRANSMISSION) (See page 71–13)
6. REMOVE INSTRUMENT PANEL FINISH PLATE (A/T TRANSMISSION) (See page 71–13)
7. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH (A/T TRANSMISSION) (See page 71–13)
8. REMOVE INSTRUMENT PANEL LOWER LH (A/T TRANSMISSION) (See page 71–13)
9. **REMOVE INSTRUMENT PANEL JUNCTION BLOCK ASSY (A/T TRANSMISSION)**


(a) Remove the bolt and 2 nuts and move the instrument panel junction block assy aside.

10. **REMOVE SKID CONTROL ECU ASSY**

(a) Disconnect the 4 skid control ECU connectors.

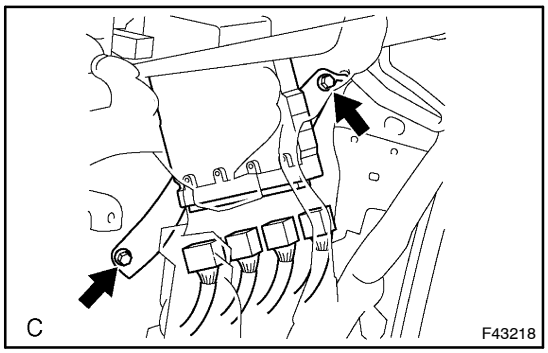

(b) M/T:
Remove the 2 bolts and control ECU assy.

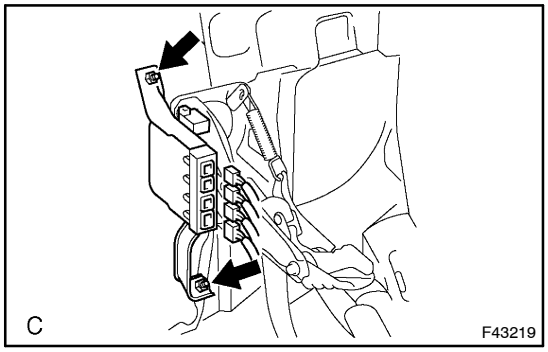


(c) A/T:
Remove the 2 nuts and control ECU assy.


(d) Disconnect the skid control buzzer connector, and remove the skid control buzzer assy from the skid control ECU assy.

11. **INSTALL SKID CONTROL ECU ASSY**

(a) Install the skid control buzzer on the skid control ECU and connect the skid control buzzer connector.

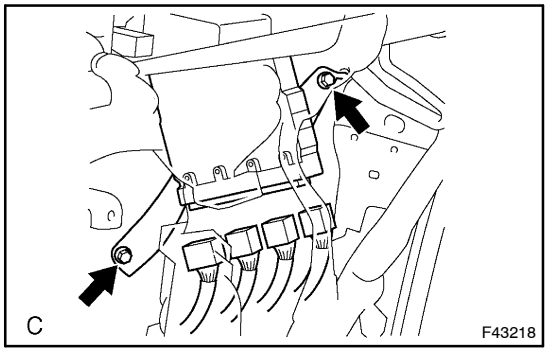

(b) M/T:
Install the skid control ECU assy with 2 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

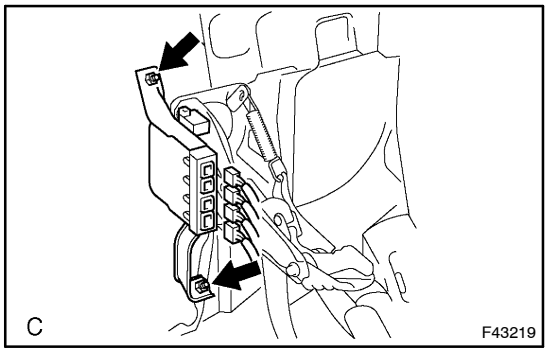

(c) A/T:
Install the skid control ECU assy with 2 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

(d) Connect the 4 skid control ECU connectors.

12. INSTALL BLOWER ASSY (M/T TRANSMISSION) (See page 55–73)
13. INSTALL INSTRUMENT PANEL JUNCTION BLOCK ASSY (A/T TRANSMISSION)
(a) Install the instrument panel junction block assy with the bolt and 2 nuts.
Torque: 8.4 N·m (85 kgf·cm, 74 in.·lbf)
14. INSTALL INSTRUMENT PANEL LOWER LH (A/T TRANSMISSION)
15. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL RH (A/T TRANSMISSION)
16. INSTALL INSTRUMENT PANEL FINISH PLATE (A/T TRANSMISSION)
17. INSTALL INSTRUMENT PANEL UNDER COVER SUB–ASSY NO.1 (A/T TRANSMISSION)
18. INSTALL COWL SIDE TRIM BOARD LH (A/T TRANSMISSION)
19. INSTALL FRONT FLOOR FOOTREST (A/T TRANSMISSION)
20. INSTALL FRONT DOOR SCUFF PLATE LH (A/T TRANSMISSION)
21. CHECK VSC SENSOR SIGNAL (See page 05–730)