3309W–02

ADJUSTMENT

1. REMOVE REAR WHEEL

2. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33–15)


3. INSTALL REAR WHEEL

Torque: 112 N·m (1,137 kgf·cm, 82 ft·lbf)

4. INSPECT PARKING BRAKE LEVER TRAVEL


(a) Pull the parking brake lever to the fully applied position, and count the number of clicks.

Parking brake lever travel at 196 N (20 kgf, 44 lbf): 5 – 7 clicks

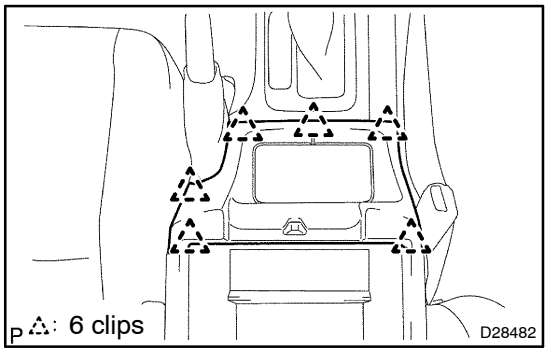

5. ADJUST PARKING BRAKE LEVER TRAVEL

(a) w/ Console box:
Disengage the 6 clips and remove the console panel upper rear.

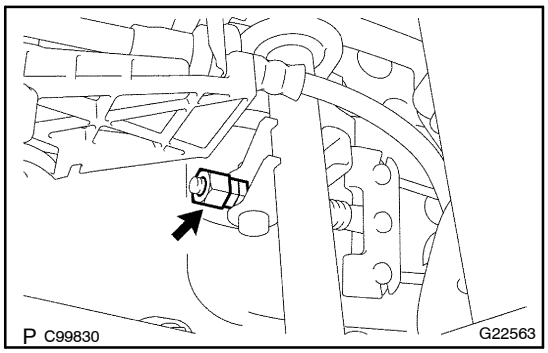

(b) Turn the adjusting nut until the parking brake lever travel turns correct.

(c) Check whether parking brake drags or not.

(d) When operating the parking brake lever, check that the parking brake lever indicator light lights up.

(e) Install the console panel upper rear.