
3309Y–01

REPLACEMENT


1. REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE) (See page 71–13)
2. REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE) (See page 71–13)
3. REMOVE CONSOLE PANEL UPPER ASSY (SEPARATED FRONT SEAT TYPE) (See page 71–13)
4. REMOVE CONSOLE REAR END PANEL SUB–ASSY (W/ REAR COOLER) (See page 71–13)
5. REMOVE RR CONSOLE BOX ASSY (W/O COOL BOX) (See page 71–13)
6. REMOVE RR CONSOLE BOX ASSY (W/ COOL BOX) (See page 71–13)
7. REMOVE PARKING BRAKE LEVER SUB–ASSY

(a) Release the parking brake lever.

(b) Disconnect the parking brake switch connector.

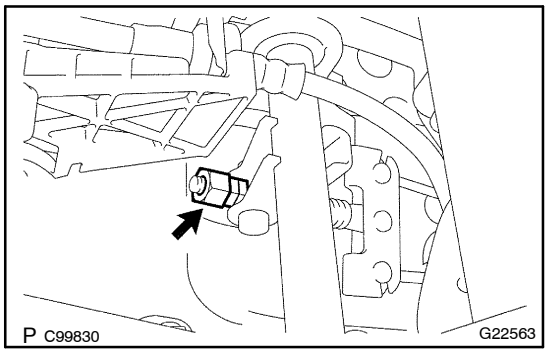


(c) Remove the adjusting nut.

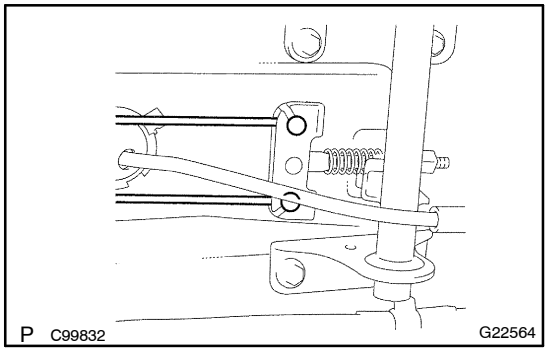


(d) Separate the parking brake cable assy No.2 and No.3 from the parking brake pull rod sub–assy No.1.

(e) Remove the parking brake pull rod sub–assy No.1, bush and compression spring from the parking brake lever.

(f) Remove the straight pin from the parking brake lever.

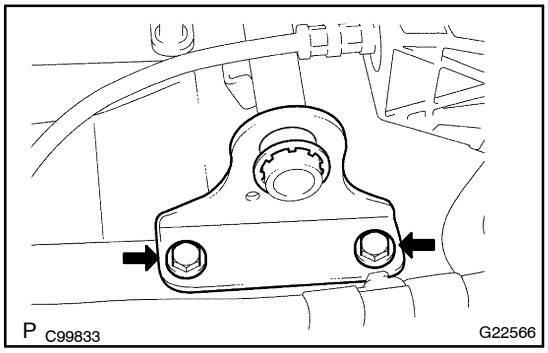

(g) Remove the 2 bolts, washer and parking brake lever support from parking brake lever sub–assy.

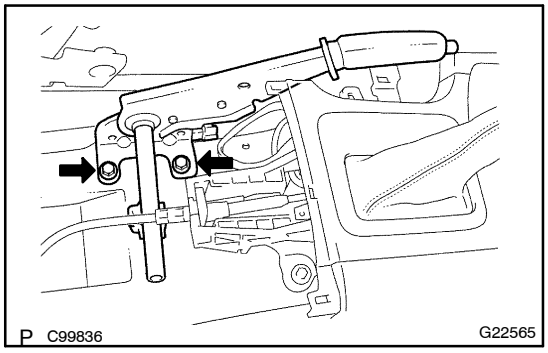


(h) Remove the 2 bolts and parking brake lever sub–assy.

8. REMOVE PARKING BRAKE SWITCH ASSY

(a) Remove the screw and parking brake switch assy.


9. INSTALL PARKING BRAKE SWITCH ASSY

(a) Install the parking brake switch assy with the screw.

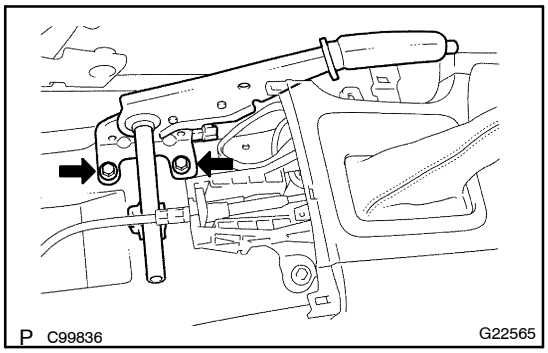


10. INSTALL PARKING BRAKE LEVER SUB–ASSY

(a) Install the parking brake lever sub–assy, temporarily tighten the 2 bolts.

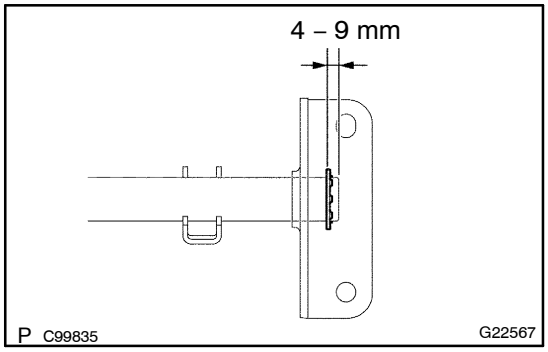


(b) Install the washer and parking brake lever support to parking brake lever sub–assy.

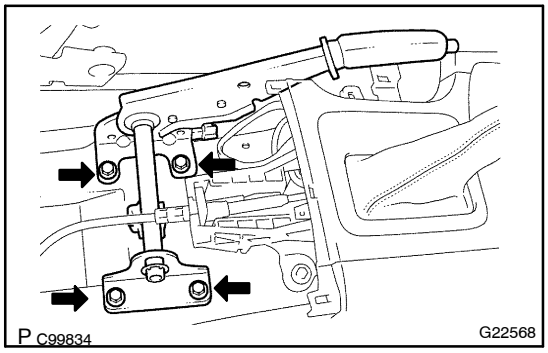


(c) Install the parking brake lever with the 4 bolts.
Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)

(d) Install the straight pin to the parking brake lever.

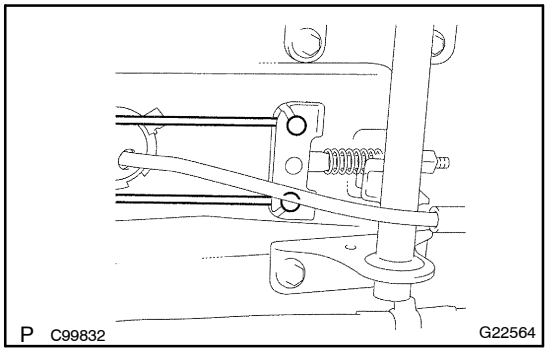

(e) Install the parking brake cable assy No.2 and No.3 to the parking brake pull rod sub–assy No.1.

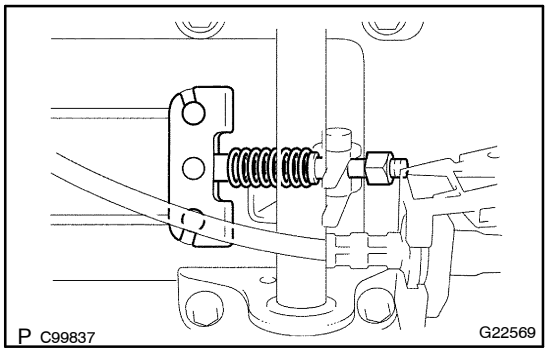

(f) Install the bush, compression spring and parking brake pull rod sub–assy No.1 with the adjusting nut.
(g) Connect the parking brake switch assy connector.

11. INSPECT PARKING BRAKE LEVER TRAVEL (See page 33–2)
12. ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–2)