330A0–01

# REPLACEMENT


1. **REMOVE REAR WHEEL**
2. **SEPARATE REAR DISC BRAKE CALIPER ASSY LH**

(a) Remove the 2 bolts and separate the rear disc brake caliper assy LH.

HINT:

Do not disconnect the flexible hose from the brake caliper.


3. **REMOVE REAR DISC**
4. **REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33–15)**
5. **REMOVE PARKING BRAKE SHOE STRUT COMPRESSION SPRING (See page 33–15)**
6. **REMOVE PARKING BRAKE SHOE STRUT LH (See page 33–15)**
7. **REMOVE PARKING BRAKE SHOE (See page 33–15)**
8. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
9. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
10. **REMOVE CONSOLE PANEL UPPER ASSY (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
11. **REMOVE CONSOLE REAR END PANEL SUB–ASSY (W/ REAR COOLER) (See page 71–13)**
12. **REMOVE RR CONSOLE BOX ASSY (W/O COOL BOX) (See page 71–13)**
13. **REMOVE RR CONSOLE BOX ASSY (W/ COOL BOX) (See page 71–13)**

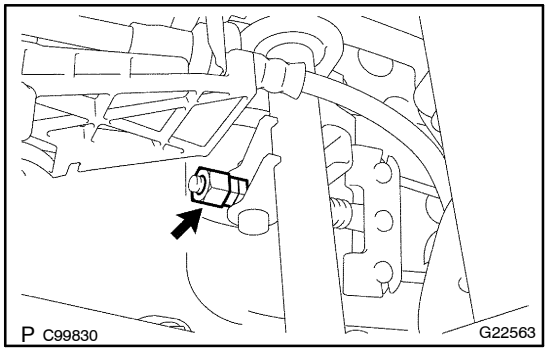



14. **REMOVE PARKING BRAKE CABLE ASSY NO.3**

(a) Loosen the adjusting nut.

(b) Separate the parking brake cable assy No.3 from the parking brake pull rod sub–assy No.1.

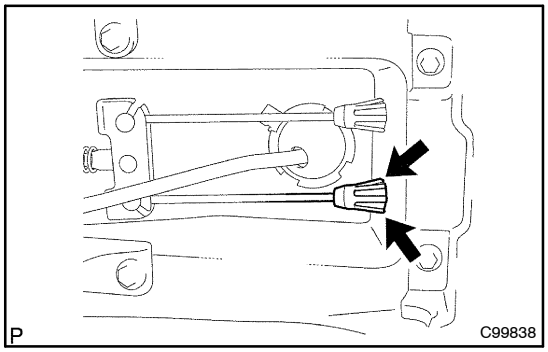



(c) Contract the claw of the parking brake cable assy No.3 and push it outward of the vehicle a little.

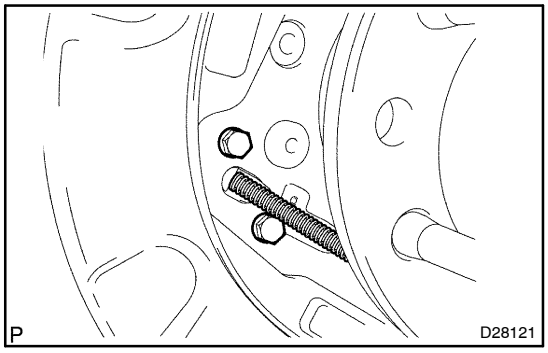




(d) Separate the parking brake cable assy No.3 with the 2 bolts.

(e) 3 Door:
Remove the 3 bolts, nut and the parking brake cable assy No.3.

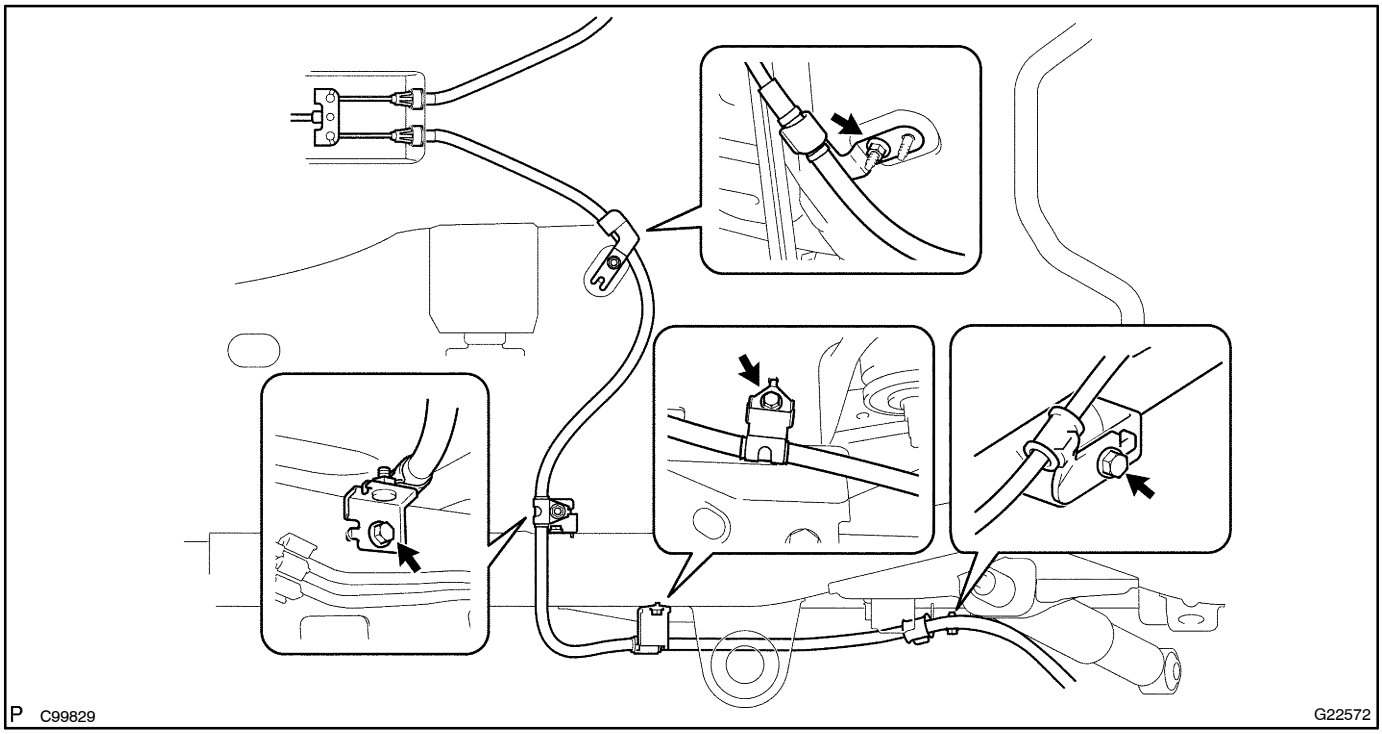

(f) 5 Door:
Remove the 4 bolts and the parking brake cable assy No.3.

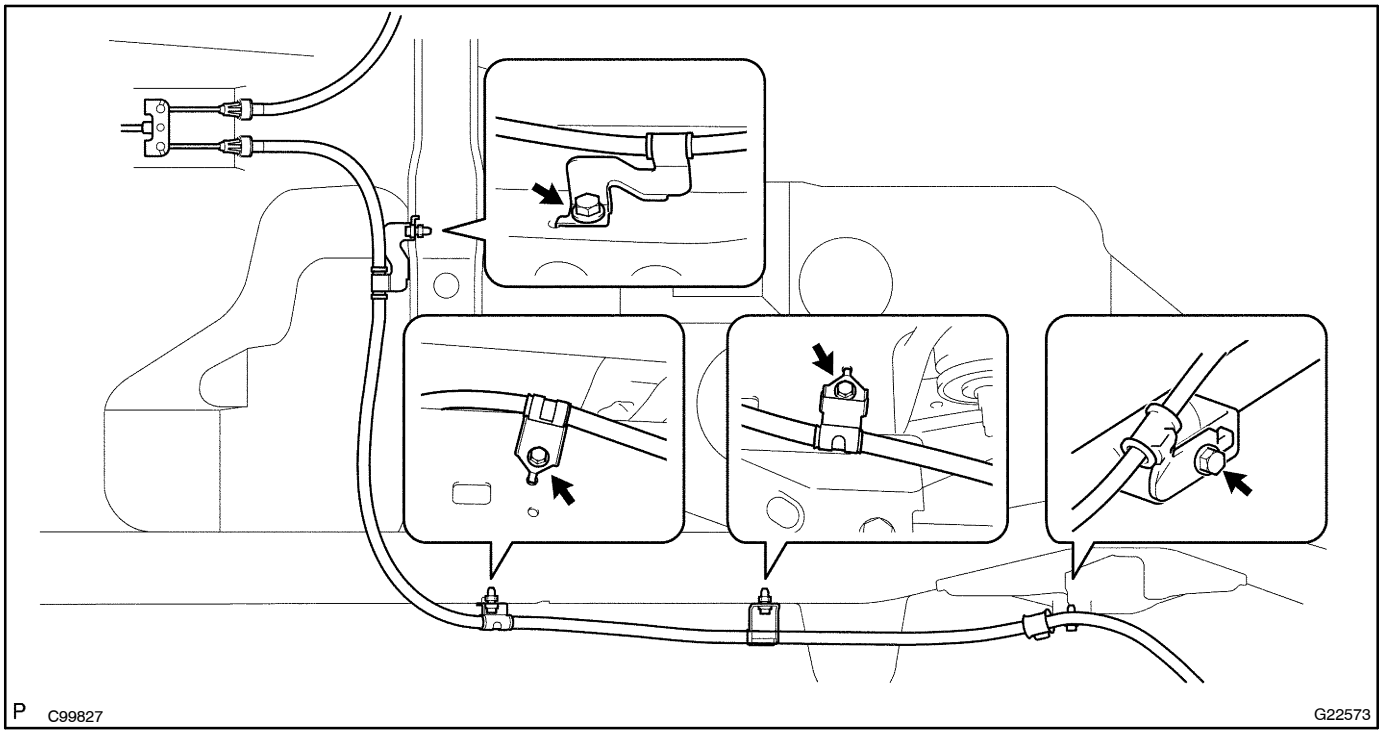


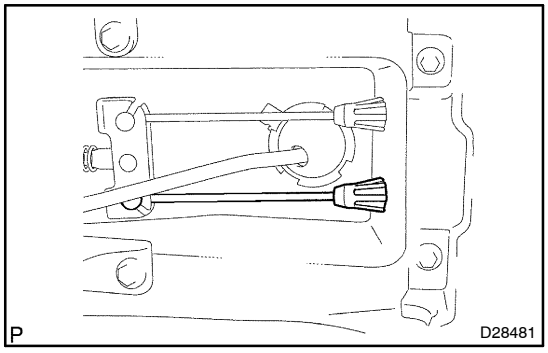

**15. INSTALL PARKING BRAKE CABLE ASSY NO.3**


(a) Install the parking brake cable assy No.3 to the parking brake pull rod sub–assy No.1.

(b) 3 Door:
Install the parking brake cable assy No.3 with the 3 bolts and the nut.
**Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)**

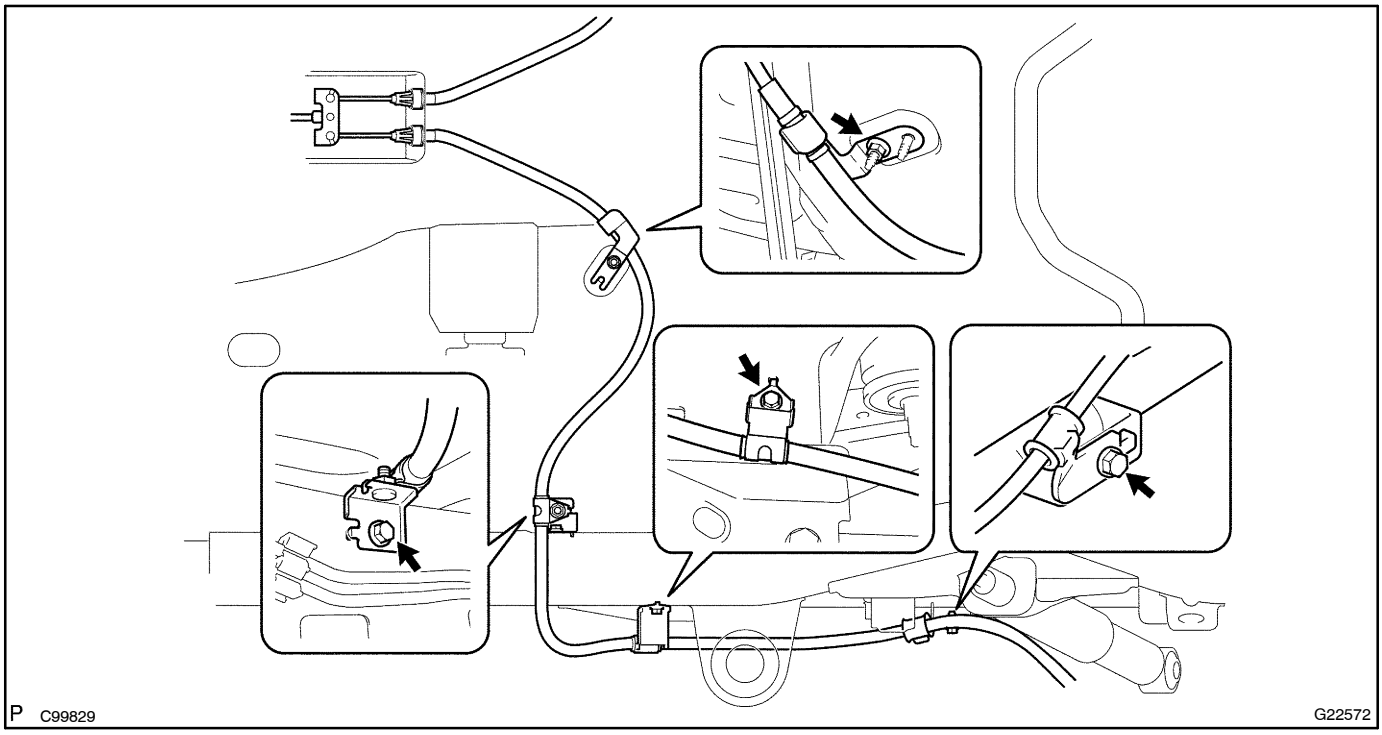


(c) 5 Door:
Install the parking brake cable assy No.3 with the 4 bolts.
**Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)**

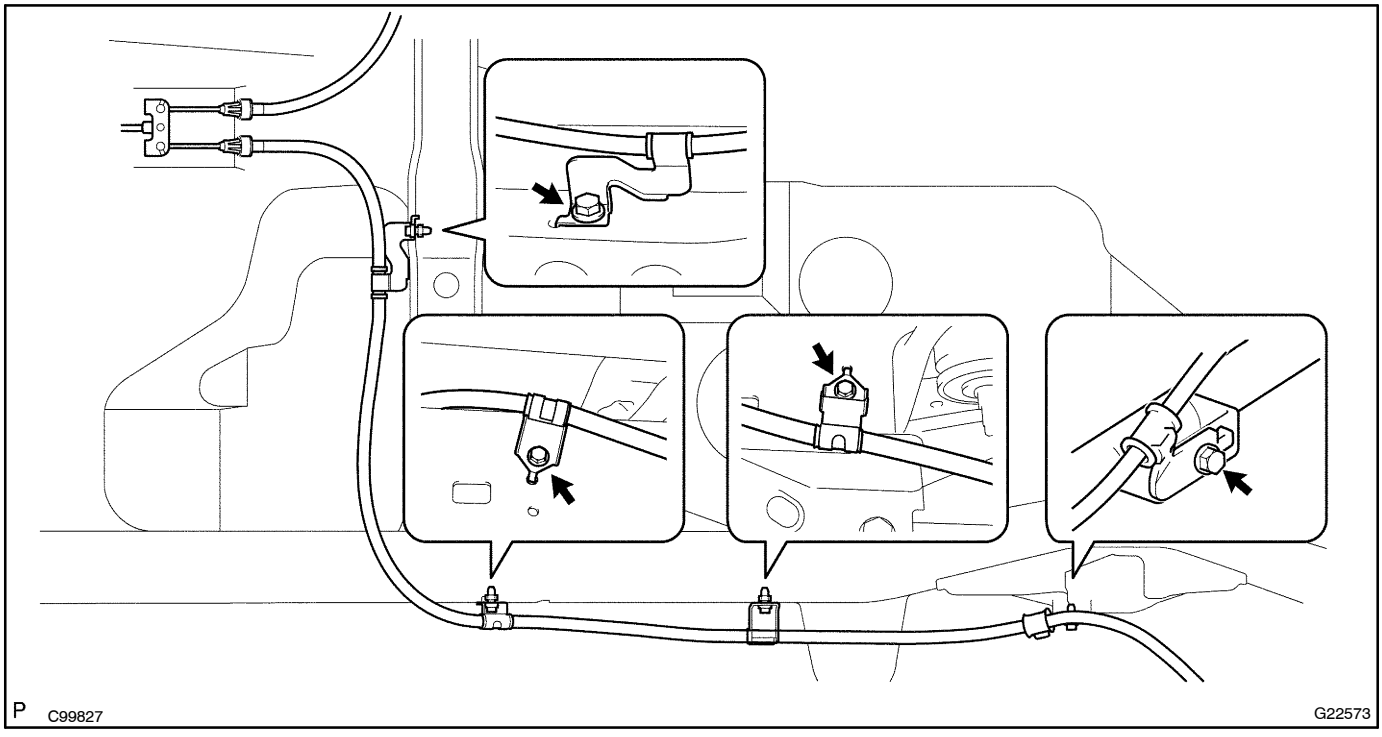

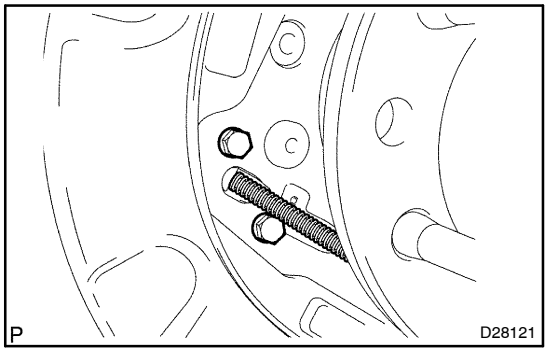


(d) Install the parking brake cable assy No.3 with the 2 bolts.
**Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)**

16. **APPLY HIGH TEMPERATURE GREASE (See page 33–15)**
17. **INSTALL PARKING BRAKE SHOE (See page 33–15)**
18. **INSTALL PARKING BRAKE SHOE STRUT LH (See page 33–15)**
19. **INSTALL PARKING BRAKE SHOE STRUT COMPRESSION SPRING (See page 33–15)**
20. **INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33–15)**
21. **CHECK PARKING BRAKE INSTALLATION (See page 33–15)**
22. **INSTALL REAR DISC**
23. **ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33–15)**
24. **CONNECT REAR DISC BRAKE CALIPER ASSY LH**

(a) Install the rear disc brake caliper assy LH with the 2 bolts.
**Torque: 105 N·m (1,071 kgf·cm, 77 ft·lbf)**

25. **INSTALL REAR WHEEL**
**Torque: 112 N·m (1,137 kgf·cm, 82 ft·lbf)**
26. **INSPECT PARKING BRAKE LEVER TRAVEL (See page 33–2)**
27. **ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–2)**