AUTOMATIC TRANSMISSION FLUID (ATM)

400TE–01


ON–VEHICLE INSPECTION

1. CHECK THE FLUID LEVEL

HINT:

Drive the vehicle so that the engine and transmission are at normal operating temperature.

Fluid temperature: 70 – 80 °C (158 – 176 °F)

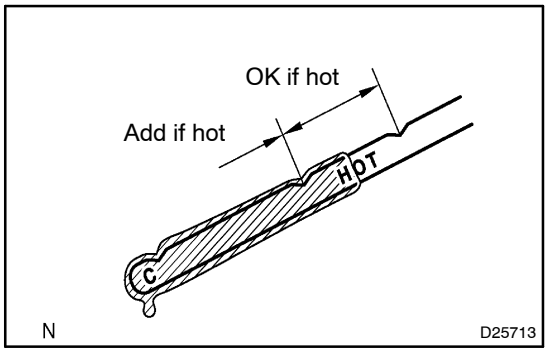

(a) Park the vehicle on a level surface and set the parking brake.
(b) With the engine idling and the brake pedal depressed, shift the shift lever into all ranges from P to L range and return to P range.
(c) Pull out the dipstick and wipe it clean.
(d) Push it back fully into the pipe.
(e) Pull it out and check that the fluid level is in the HOT range.

If there are leaks, it is necessary to repair or replace O–rings, FIPGs, oil seals, plugs or other parts.