
SPEED SENSOR (ATM)

REPLACEMENT


400TS–01

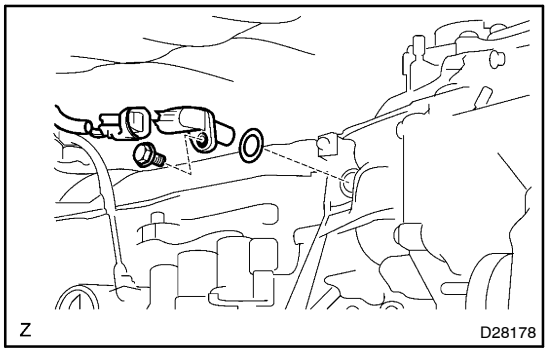

1. REMOVE SPEED SENSOR

(a) Remove the bolt and speed sensor SP2.

(b) Remove the O–ring from the speed sensor.

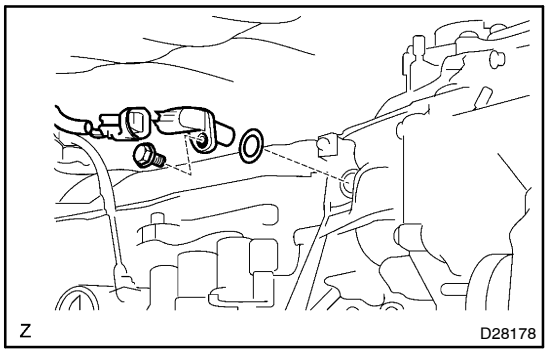

2. INSTALL SPEED SENSOR

(a) Coat a new O–ring with ATF and install it to the speed sensor.

(b) Install the speed sensor SP2 on the transfer adaptor and torque the bolt.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)