
CLUTCH ACCUMULATOR ASSY (MTM)

4205O–01


REPLACEMENT

1. REMOVE ENGINE UNDER COVER ASSY REAR

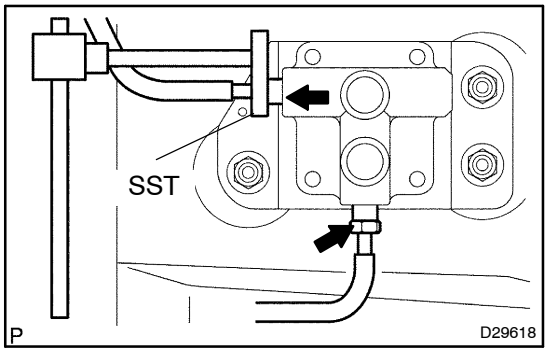


2. REMOVE CLUTCH ACCUMULATOR ASSY

(a) Using SST, disconnect the 2 flexible hose tubes.
SST 09023–00100

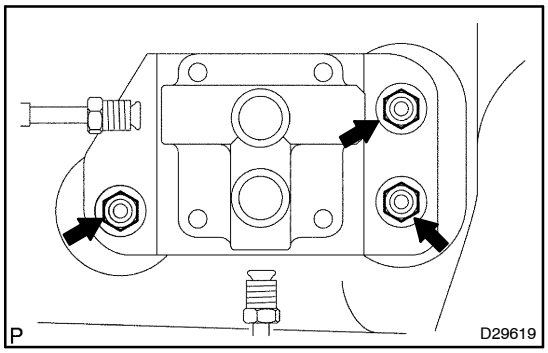


(b) Remove the 3 nuts and clutch accumulator assy.

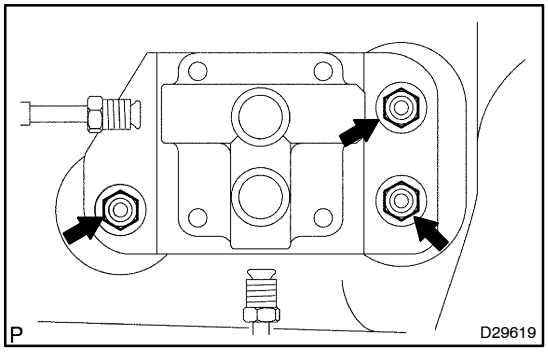

3. INSTALL CLUTCH ACCUMULATOR ASSY

(a) Install the clutch accumulator assy with the 3 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

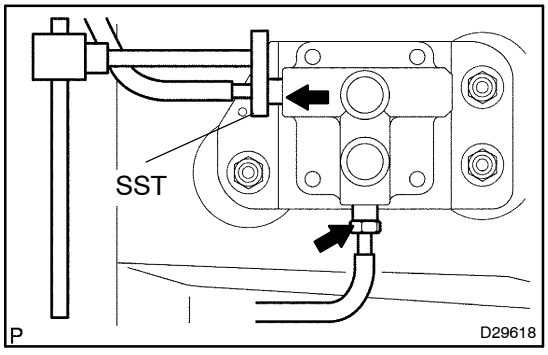

(b) Using SST, connect the 2 flexible hose tubes.
SST 09023–00100
Torque: 16 N·m (163 kgf·cm, 12 ft·lbf)

4. BLEED CLUTCH PIPE LINE

(a) LHD (w/o VSC):
Fill the brake reservoir tank with clutch fluid and bleed clutch system.
Torque: 11 N·m (112 kgf·cm, 8 ft·lbf)

(b) Fill the master cylinder reservoir tank with fluid bleed and clutch system.
Torque: 11 N·m (112 kgf·cm, 8 ft·lbf)

5. CHECK CLUTCH FLUID LEAKAGE

6. CHECK BRAKE FLUID LEAKAGE